

Hisense RD34WR

Hisense RD34WR 248 Liter Two-Door Refrigerator User Manual

Model: RD34WR

1. INTRODUCTION

Thank you for choosing the Hisense RD34WR 248 Liter Two-Door Refrigerator. This manual provides important information on the installation, operation, and maintenance of your appliance. Please read it thoroughly before using the refrigerator to ensure safe and efficient operation. Keep this manual for future reference.

Important Safety Information

- Ensure the refrigerator is properly grounded.
- Do not damage the refrigerant circuit.
- Do not use electrical appliances inside the food storage compartments unless they are of the type recommended by the manufacturer.
- Unplug the appliance before cleaning or performing maintenance.
- Keep ventilation openings clear of obstruction.
- This appliance is intended for household use only.

2. SETUP AND INSTALLATION

Unpacking

Carefully remove all packaging materials, including foam and adhesive tape. Inspect the refrigerator for any damage. Keep packaging materials out of reach of children.

Placement

Place the refrigerator on a firm, level surface. Ensure there is adequate space around the appliance for proper ventilation (at least 10 cm at the back and sides). Avoid direct sunlight or heat sources. The refrigerator is designed for freestanding installation.

 


Figure 1: Front view of the Hisense RD34WR Refrigerator. This image shows the overall design of the two-door refrigerator in white.

Door Reversal

The door orientation is reversible. If you wish to change the door swing direction, please refer to the detailed instructions provided in the full product manual or contact Hisense customer service for assistance. This process typically involves moving hinges and door stops.

Initial Power-On

After placing the refrigerator, wait at least 2-4 hours before plugging it into a 220V power outlet (Type G plug). This allows the refrigerant to settle. Once plugged in, the refrigerator will begin to cool. Allow several hours for the appliance to reach its optimal operating temperature before storing food.

3. OPERATING INSTRUCTIONS

Temperature Control

The refrigerator features an adjustable temperature control dial located inside the fresh food compartment. Settings typically range from 'Cold' (1) to 'Colder' (7). Adjust the dial to your desired cooling level. A mid-range setting (e.g., 3-5) is usually sufficient for general use.



Figure 2: Refrigerator temperature control dial. The dial allows adjustment from 'Cold' (1) to 'Colder' (7) to set the desired cooling level.

Storage Compartments

Your Hisense refrigerator is equipped with multiple storage options:

- **Glass Shelves:** Adjustable shelves in the fresh food compartment for flexible storage.
- **Fruit & Vegetable Box:** A dedicated crisper drawer at the bottom for keeping produce fresh.
- **Door Racks:** Multiple racks on the refrigerator door for bottles, jars, and smaller items.
- **Freezer Compartment:** Located at the top, with shelves and door racks for frozen goods.

 


Figure 3: Empty interior view of the Hisense RD34WR refrigerator. This image highlights the arrangement of glass shelves, door racks, and the fruit and vegetable box.

 


Figure 4: Interior view of the Hisense RD34WR refrigerator with various food items. This demonstrates the practical storage capacity and organization possibilities.

Automatic Defrost System

This refrigerator features an automatic defrost system, eliminating the need for manual defrosting of the freezer compartment. Ice buildup is automatically melted and drained, ensuring consistent cooling performance.

4. MAINTENANCE AND CARE

Cleaning

Regular cleaning helps maintain hygiene and efficiency. Always unplug the refrigerator before cleaning.

- **Interior:** Wipe with a soft cloth dampened with a solution of mild detergent and warm water. Rinse with clean water and dry thoroughly.
- **Exterior:** Clean with a soft, damp cloth. For stubborn stains, use a mild, non-abrasive cleaner.
- **Door Gaskets:** Clean regularly to ensure a tight seal.
- **Condenser Coils:** Periodically clean the condenser coils at the back or bottom of the refrigerator to ensure efficient operation.

Power Outage

In case of a power outage, keep the refrigerator doors closed to maintain the internal temperature for as long as possible. Food will remain frozen for several hours depending on the ambient temperature and how full the freezer is.

5. TROUBLESHOOTING

Before contacting service, check the following common issues and solutions:

Problem	Possible Cause	Solution
Refrigerator does not operate.	Not plugged in; power outage; circuit breaker tripped.	Check power cord, wall outlet, and circuit breaker.
Temperature is not cold enough.	Temperature control set too high; door opened frequently; warm food placed inside.	Adjust temperature control to a colder setting; minimize door openings; allow hot food to cool before storing.
Unusual noises.	Refrigerator not level; items vibrating inside; normal operating sounds.	Adjust leveling feet; rearrange items; some sounds (e.g., refrigerant flow) are normal.
Water on the floor.	Drain tube blocked; drip tray overflowing.	Clear the drain tube; ensure drip tray is correctly positioned.

6. SPECIFICATIONS

Feature	Detail
Brand	Hisense
Model Name	Two-Door Refrigerator
Model Number	RD34WR
Capacity	248 Liters
Fresh Food Capacity	198 Liters
Freezer Capacity	50 Liters
Configuration	Top Freezer Refrigerator
Color	White

Feature	Detail
Special Feature	Double Door
Installation Type	Freestanding
Number of Doors	2
Defrost System	Automatic
Voltage	220 Volts
Refrigerant	R-600A
Shelf Type	Glass
Number of Shelves	5
Adjustable Temperature Control	Yes
Power Plug Type	Type G
Door Orientation	Reversible
Power Source	Corded Electric
Item Weight	49 Kilograms
Annual Energy Consumption	271 Kilowatt Hours per year
Energy Efficiency Rating	D
Included Components	1 × Hisense Double Door Refrigerator, 248 Liter Capacity, White

7. WARRANTY AND SUPPORT

This Hisense refrigerator comes with a **Hisense Standard Warranty**. For detailed information regarding warranty terms, coverage, and duration, please refer to the warranty card included with your product or visit the official Hisense website. For technical support, service requests, or inquiries about your product, please contact Hisense customer service. Contact details can typically be found on the Hisense website or in your product documentation.

© 2026 Hisense. All rights reserved. Information in this manual is subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question