

[manuals.plus](#) /

› [CROMA](#) /

› [CROMA 2200 Watts Dry Vacuum Cleaner Instruction Manual](#)

CROMA CRSNAF501sVC22

CROMA 2200 Watts Dry Vacuum Cleaner Instruction Manual

Model: CRSNAF501sVC22

INTRODUCTION

Thank you for choosing the CROMA 2200 Watts Dry Vacuum Cleaner. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your appliance. Please read it thoroughly before first use and keep it for future reference.



Image: The CROMA 2200 Watts Dry Vacuum Cleaner, showcasing its main unit, flexible hose, and telescopic wand with floor brush.

IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury.

- Read all instructions before using the appliance.
- Do not leave the vacuum cleaner unattended when plugged in. Unplug from outlet when not in use and before servicing.
- Do not use outdoors or on wet surfaces. This is a dry vacuum cleaner.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.

- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or vacuum cleaner with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up hard or sharp objects such as glass, nails, screws, coins, etc.
- Do not use without dust cup and/or filters in place.

PRODUCT COMPONENTS AND ACCESSORIES

Familiarize yourself with the parts of your CROMA Dry Vacuum Cleaner.

Main Unit: Contains the motor, dust collection system, and controls.



Image: Close-up view of the main vacuum cleaner unit, highlighting the transparent dustbin and internal cyclonic filter system.

Flexible Hose: Connects the main unit to the extension wand or accessories.

Telescopic Extension Wand: Provides extended reach for floor cleaning.



Image: The telescopic extension wand connected to the main floor brush attachment.

Floor Brush: Standard attachment for cleaning various floor types.



Image: Underside view of the floor brush, showing the bristles and suction opening.

Nozzle / Crevice Tool: Ideal for narrow spaces, corners, and upholstery.



Image: The crevice tool attachment, designed for reaching tight spaces.

Dustbin (3 Liter Capacity): Transparent, bagless dust collection container.



Image: The transparent dustbin detached from the main unit, showing the internal cyclonic filter assembly.

Washable HEPA Filter: Located within the dustbin, captures fine dust and allergens.

SETUP AND ASSEMBLY

- Unpacking:** Carefully remove all components from the packaging. Retain packaging for future storage or transport.
- Attach Flexible Hose:** Insert the larger end of the flexible hose into the suction inlet on the main unit until it clicks securely into place.
- Connect Extension Wand:** Attach the handle end of the flexible hose to the telescopic extension wand.
- Attach Floor Brush/Accessory:** Connect the desired cleaning accessory (e.g., floor brush or nozzle) to the end of the telescopic extension wand.
- Check Dustbin and Filter:** Ensure the dustbin is properly seated and the washable HEPA filter is correctly installed before operation.

OPERATING INSTRUCTIONS

Powering On and Off

- Plug In:** Insert the power plug into a suitable electrical outlet.
- Power On:** Press the power button (Push Button Controller) located on the main unit to start the vacuum cleaner.
- Power Off:** Press the power button again to turn off the vacuum cleaner.
- Cord Rewind:** Utilize the auto cord winding feature by pressing the dedicated button to retract the power cord for convenient storage.



Image: Close-up of the auto cord winding button on the vacuum cleaner's main unit.

Adjusting Suction Power

The vacuum cleaner features a speed control knob to adjust suction power based on the cleaning surface.

- Rotate the knob to increase or decrease suction.
- Higher suction is suitable for hard floors and heavily soiled areas.
- Lower suction is recommended for delicate surfaces or rugs.

ALWAYS STAY IN CONTROL

Easily control the suction speed based on the surface with a simple knob



Speed Control



Compact Design



Image: The vacuum cleaner's main unit, highlighting the speed control knob for adjusting suction power.

Cleaning Tips

- For optimal performance, ensure the dustbin is not overfilled.
- Use the appropriate attachment for the surface being cleaned.
- The multi-cyclone technology efficiently separates dust particles, ensuring consistent suction.
- The vacuum cleaner is designed for smooth mobility with rubber wheels, allowing easy movement around furniture and obstacles.



Image: Side view of the vacuum cleaner, emphasizing its large rubber wheels for smooth movement.

MAINTENANCE AND CARE

Emptying the Dustbin

The bagless design allows for easy and hygienic dust disposal.

1. **Detach Dustbin:** Press the release button and lift the dustbin from the main unit.



Image: A hand demonstrating the removal of the transparent dustbin from the vacuum cleaner's main body.

2. **Empty Contents:** Hold the dustbin over a trash receptacle and open the bottom flap to empty accumulated dust and debris.
3. **Reattach Dustbin:** Place the empty dustbin back onto the main unit until it clicks securely.

Cleaning the Washable HEPA Filter

Regular cleaning of the HEPA filter is crucial for maintaining suction power and air quality.

1. **Remove Filter:** Twist or pull to remove the HEPA filter assembly from inside the dustbin.



Image: Rear view of the vacuum cleaner, indicating the location of the washable HEPA filter for maintenance.

2. **Wash Filter:** Rinse the HEPA filter under cool running water until the water runs clear. Do not use detergents or hot water.
3. **Dry Thoroughly:** Allow the filter to air dry completely for at least 24 hours before reinserting. Do not use a dryer or direct heat.
4. **Reinstall Filter:** Once completely dry, place the HEPA filter back into the dustbin and reattach the dustbin to the main unit.

Note: The HEPA filter helps capture the minutest of allergens, contributing to cleaner air.

General Cleaning

- Wipe the exterior of the vacuum cleaner with a soft, damp cloth.
- Check the hose and attachments for blockages regularly.
- Ensure the power cord is not twisted or damaged.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Vacuum cleaner does not turn on.	Not plugged in; Power outlet faulty; Power button not pressed; Thermal cut-out activated.	Check power plug connection; Test outlet with another appliance; Press power button firmly; Unplug and allow to cool for 30 minutes before restarting.
Loss of suction.	Dustbin full; Filter clogged; Hose or attachment blocked; Dustbin not properly installed.	Empty dustbin; Clean or replace filter; Check hose and attachments for obstructions; Reinstall dustbin correctly.
Unusual noise.	Blockage in hose/attachments; Motor issue; Foreign object in fan.	Check for and remove blockages; If noise persists, contact customer support.
Dust escaping from unit.	Dustbin not properly sealed; Filter missing or damaged.	Ensure dustbin is securely closed and installed; Check and properly install or replace filter.

PRODUCT SPECIFICATIONS

Feature	Detail
Brand	CROMA
Model	CRSHAF501sVC22
Type	Dry Vacuum Cleaner
Power Consumption	2200 Watts
Suction Power	300W
Air Flow	108 m³/hr
Dustbin Capacity	3 Liters (Bagless)
Filter Type	Washable HEPA Filter
Noise Level	82 dB
Control Method	Push Button, Remote
Special Features	Multi Cyclonic Technology, Auto Cord Winding, Speed Control, Smooth Mobility, Compact Design
Included Accessories	Brush, Nozzle
Item Weight	6 kg

WARRANTY AND SUPPORT

Your CROMA 2200 Watts Dry Vacuum Cleaner comes with a **2 Years Warranty** from the date of purchase.

For warranty claims, technical support, or service inquiries, please contact CROMA customer care. Keep your purchase receipt as proof of purchase.

For more information, you may visit the official CROMA store online: [CROMA Store](#)

© 2023 CROMA. All rights reserved.

Related Documents - CRSHAF501sVC22

	<p>Croma NEO 32 Inch Smart LED TV User Manual and Warranty Information</p> <p>Comprehensive user manual for the Croma NEO 32 Inch Smart LED TV (Model CREL032HSC024601), covering setup, features, remote control, connectivity, settings, technical specifications, e-waste management, and warranty details.</p>
---	--

	<p>Croma 10000mAh Power Bank (CRSP10MPBA040601) User Manual & Specifications</p> <p>Comprehensive user manual and technical specifications for the Croma 10000mAh Power Bank (Model CRSP10MPBA040601), including charging instructions, safety guidelines, warranty details, and contact information.</p>
	<p>Hansgrohe Croma 100 Shower Set Installation and Safety Guide</p> <p>Comprehensive guide for installing and safely using Hansgrohe Croma 100 shower sets, including technical specifications, safety instructions, and assembly guidance.</p>
	<p>Mistral MK Magnetkontakte - Installation and Operation Guide</p> <p>Detailed installation and operation guide for the Urmet Mistral MK Magnetkontakte, a magnetic contact switch for Grothe electronic chimes. Includes wiring diagrams, technical specifications, and compliance information.</p>
	<p>Seav CROMA 180 Photocell Installation and Technical Data</p> <p>This document provides installation instructions, technical specifications, and alignment guidance for the Seav CROMA 180 photocell. It covers descriptions, installation steps, connection diagrams, technical data, and synchronization features in multiple languages.</p>