

[Manuals.plus](#) /

> [iYogaled](#) /

> iYogaled Up and Down Lights Outdoor Wall Light Instruction Manual

iYogaled K1213

iYogaled Up and Down Lights Outdoor Wall Light Instruction Manual

Model: K1213

1. PRODUCT OVERVIEW

The iYogaled Up and Down Lights Outdoor Wall Light is a modern, matte black exterior light fixture designed for various outdoor applications such as porches, garages, patios, and front doors. This 2-pack unit features a built-in IC light sensor for dusk-to-dawn operation, automatically turning on at night and off during the day, providing convenience and energy savings. Constructed from heavy-duty die-cast aluminum alloy, it offers robust weather and rust resistance with an IP54 waterproof rating, ensuring durability in diverse weather conditions.



Figure 1.1: iYogaled Up and Down Outdoor Wall Lights (2-Pack)

This image displays two iYogaled outdoor wall lights, showcasing their sleek matte black design and the warm light they cast both upwards and downwards. The lights are mounted on a neutral-colored wall, highlighting their modern aesthetic and dual illumination capability.

2. SAFETY INFORMATION

Please read all instructions carefully before installation and use. Retain this manual for future reference.

- **Electrical Safety:** Always turn off the power at the circuit breaker or fuse box before beginning installation, maintenance, or bulb replacement. Failure to do so may result in electric shock, serious injury, or death.
- **Qualified Electrician:** Installation should be performed by a qualified electrician or a trained professional to ensure proper wiring and safety compliance.
- **Voltage:** This fixture is designed for AC 100-240V input. Ensure your power supply matches this requirement.
- **ETL Listed:** This product is ETL Listed, meeting American electrical standards for safety.
- **Bulb Compatibility:** Use only E26 BASE bulbs with a maximum compatible wattage of 100 Watts.
- **Outdoor Use:** While designed for outdoor use with an IP54 waterproof rating, ensure all connections are properly sealed and protected from direct water exposure during installation.

- **Handling:** Handle the light fixture and bulbs with care to avoid damage. Wear gloves if necessary.

3. PACKAGE CONTENTS

Verify that all components are present and undamaged before proceeding with installation.

- iYogaled Outdoor Wall Light Fixture (2 units)
- E26 BASE Bulbs (2 units, included)
- Mounting Hardware (screws, wire nuts, etc.)
- Instruction Manual



Figure 3.1: Included Bulbs and Fixture Interior

This image shows the two E26 base LED bulbs that come with the light fixtures. Another image displays the interior of the light fixture with the top cover removed, revealing the E26 bulb socket, indicating where the bulb is installed.

4. SPECIFICATIONS

Feature	Specification
Brand	iYogaled
Model Number	K1213
Color	Black (2 PACK)
Material	Aluminum (Fixture), Glass (Shade)
Product Dimensions	4"L x 4"W x 13"H
Item Weight	3 Pounds (per unit)
Power Source	AC 100-240V (Hard-wired)
Voltage	120 Volts (AC)
Wattage	60 Watts (per bulb, max 100 Watts compatible)
Bulb Base	E26 Medium
Light Source Type	Incandescent (compatible with LED, CFL)

Feature	Specification
Special Feature	Dusk to Dawn Sensor, Waterproof (IP54)
Certification	ETL Listed
Average Life	50,000 Hours (for included bulbs)
Color Temperature	5000 Kelvin



Figure 4.1: Product Dimensions

This diagram illustrates the precise dimensions of the iYogaled outdoor wall light, including its overall height, width, and depth, as well as the dimensions of its mounting base, crucial for installation planning.

5. SETUP AND INSTALLATION

Follow these steps for safe and proper installation of your iYogaled outdoor wall light. It is recommended to have a qualified

electrician perform the installation.

1. Prepare for Installation:

- Turn off the power to the junction box at the circuit breaker or fuse box.
- Ensure the mounting surface is clean, dry, and structurally sound.
- Unpack the light fixture and all components. Inspect for any damage.

2. Mounting the Bracket:

- Attach the mounting bracket to the junction box using the provided screws. Ensure it is securely fastened and level.

3. Wiring the Fixture:

- Connect the house electrical wires to the fixture wires using the provided wire nuts:
 - Connect the black wire (Live/Hot) from the fixture to the black wire from the junction box.
 - Connect the white wire (Neutral) from the fixture to the white wire from the junction box.
 - Connect the green or bare copper wire (Ground) from the fixture to the ground wire from the junction box or the ground screw on the mounting bracket.
- Carefully tuck all wires into the junction box. The "hollow" base of the fixture allows for storing the wires neatly.

4. Attaching the Fixture:

- Align the fixture with the mounting bracket and secure it using the screws provided. Ensure the fixture is flush against the wall and tightly secured to prevent water ingress.

5. Installing the Bulb:

- Carefully remove the top cover of the fixture.
- Screw the provided E26 base bulb into the socket. Do not overtighten.
- Replace the top cover, ensuring it is securely sealed.

6. Restore Power:

- Turn the power back on at the circuit breaker.
- Test the light fixture.

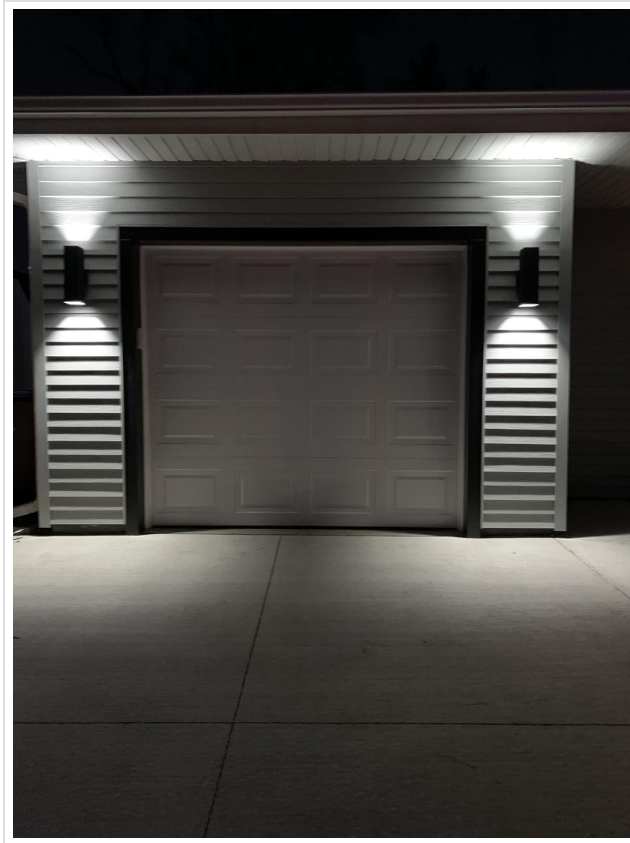


Figure 5.1: Bulb Access and Installed Appearance

The first image demonstrates how to access the bulb socket by removing the top cover. The second image shows two installed iYogaled lights flanking a garage door, illustrating their effective illumination and aesthetic integration into an outdoor setting.

6. OPERATING INSTRUCTIONS

Your iYogaled outdoor wall light is designed for simple, automatic operation.

- **Dusk to Dawn Functionality:** The fixture features a built-in IC light sensor. Once installed and powered, the light will automatically turn on when ambient light levels drop (at dusk) and turn off when ambient light levels increase (at dawn).
- **Manual Override (if applicable):** This model primarily operates via its integrated dusk-to-dawn sensor. There is no manual switch on the fixture itself. Control is typically managed via the wall switch connected to the circuit.
- **Bulb Replacement:** When replacing bulbs, ensure the power is off. Use E26 BASE bulbs, LED A19, CFL, or filament bulbs are compatible, up to 100 Watts.



DUSK TO DAWN SENSOR

Intergrated photo sensor turns the light ON and OFF automatically to help save energy



Figure 6.1: Dusk to Dawn Sensor Operation

This graphic visually explains how the integrated photo sensor works, automatically activating the light at dusk and deactivating it at dawn, contributing to energy efficiency.

7. MAINTENANCE

Regular maintenance will help prolong the life and performance of your outdoor wall light.

- **Cleaning:** Periodically clean the fixture with a soft, damp cloth. Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the finish or electrical components. Ensure the power is off before cleaning.
- **Inspection:** Annually inspect the fixture for any signs of wear, damage, or loose connections. Check the integrity of the waterproof seals.
- **Bulb Replacement:** Replace bulbs as needed. Always turn off power before replacing bulbs.



Figure 7.1: Weather Resistance

This image highlights the light's IP65 waterproof rating and ETL certification, showing it performing reliably even in rainy conditions, emphasizing its robust construction for outdoor environments.

8. TROUBLESHOOTING

If you encounter issues with your iYogaled outdoor wall light, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Light does not turn on at night.	<ul style="list-style-type: none"> No power to the fixture. Bulb is faulty or loose. Dusk to dawn sensor is obstructed or faulty. Ambient light is too high. 	<ul style="list-style-type: none"> Check circuit breaker and wall switch. Ensure bulb is screwed in tightly and is functional. Replace if necessary. Ensure the sensor is clean and not blocked by debris or objects. Verify the installation location is not exposed to other light sources (e.g., streetlights, other house lights) that might keep the sensor from activating.
Light stays on during the day.	<ul style="list-style-type: none"> Dusk to dawn sensor is obstructed or faulty. Sensor is not receiving enough light. 	<ul style="list-style-type: none"> Clean the sensor. Ensure no overhangs or shadows are constantly covering the sensor. Relocate the fixture if possible, or ensure it's in an area that receives adequate daylight.
Light flickers or dims.	<ul style="list-style-type: none"> Loose wiring connection. Faulty bulb. Incompatible dimmer switch (if applicable, though this model is sensor-controlled). 	<ul style="list-style-type: none"> Turn off power and check all wire connections. Re-tighten if necessary. Replace the bulb. Ensure no dimmer switches are used with this fixture.

9. WARRANTY AND SUPPORT

iYogaled stands behind the quality of its products.

- Warranty:** This product comes with a 2-Year Manufacturer's Warranty from the date of purchase. This warranty covers defects in materials and workmanship under normal use.
- Exclusions:** The warranty does not cover damage caused by improper installation, misuse, abuse, accidents, unauthorized repairs, or acts of nature.
- Customer Support:** For warranty claims, technical assistance, or any questions regarding your iYogaled product, please contact iYogaled customer service through the retailer's platform or the official iYogaled website. Please have your purchase receipt and model number (K1213) ready.

