

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Teka](#) /

› [Teka IZC 64010 MSS BK Induction Grill User Manual](#)

## Teka 112520025

# Teka IZC 64010 MSS BK Induction Grill User Manual

Model: 112520025

## INTRODUCTION

This user manual provides essential information for the safe and efficient operation of your Teka IZC 64010 MSS BK Induction Grill. Please read this manual thoroughly before installation, operation, or maintenance. Keep this manual for future reference.

The Teka IZC 64010 MSS BK is a high-performance induction hob grill designed for modern kitchens, featuring advanced controls and safety mechanisms.

## IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

## SETUP AND INSTALLATION

The Teka IZC 64010 MSS BK Induction Grill is designed for drop-in installation. Professional installation is recommended.


## Unpacking

Carefully remove the induction grill from its packaging. Inspect the appliance for any signs of damage during transit. Retain packaging materials until you are satisfied with the product.

**Included Components:** Induction grill, instruction manual.

## Dimensions and Cut-out

Ensure your countertop cut-out meets the required dimensions for proper fit and ventilation.

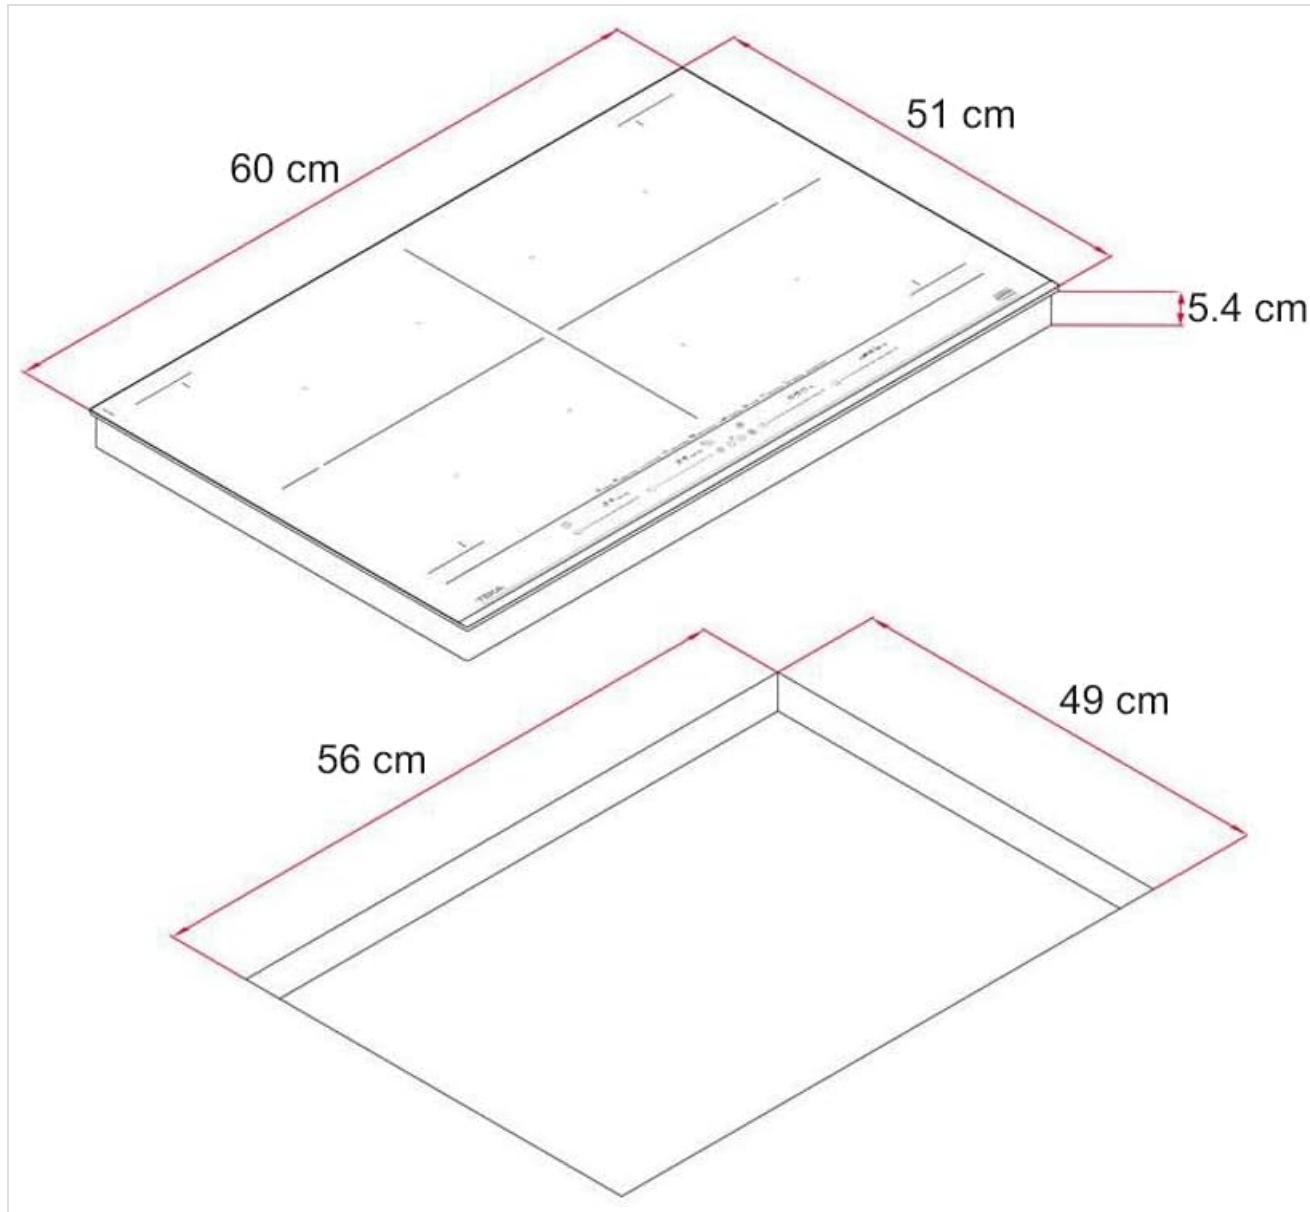

**Image:** Dimensional diagram for the Teka IZC 64010 MSS BK Induction Grill. The top view shows the hob with dimensions 60 cm (width) x 51 cm (depth) and a height of 5.4 cm. The bottom view shows the required cut-out dimensions of 56 cm (width) x 49 cm (depth).

- **Product Dimensions:** 20.08 x 23.62 x 2.28 inches (approx. 51 x 60 x 5.8 cm)
- **Required Cut-out Dimensions:** Approximately 56 cm x 49 cm
- **Installation Type:** Drop-In

## Electrical Connection

This appliance requires a 240 Volts electrical supply. All electrical connections must be performed by a qualified electrician

in accordance with local codes and regulations.

- Ensure the power supply is disconnected before installation.
- Verify that the household wiring is adequate for the appliance's power requirements.

## OPERATING INSTRUCTIONS

The Teka IZC 64010 MSS BK Induction Grill features a user-friendly touch control interface.

### Control Panel Overview



**Image:** Detailed view of the induction grill's control panel. It shows the "Teka" logo, individual power level sliders for each of the four cooking zones, and touch buttons for functions like power, timer, and safety lock.


The appliance is equipped with a **Touch Control Multislider with Acoustic Sensors** for precise heat adjustments.

- **Power On/Off:** Press the main power button to turn the hob on or off.
- **Zone Selection:** Select the desired cooking zone by touching its corresponding control.
- **Heat Adjustment:** Use the multislider to increase or decrease the heat level for the selected zone.
- **Power Plus Function:** Activates maximum power for rapid heating.
- **Stop & Go Function:** Pauses cooking and resumes with the same settings.
- **Timer Function:** Program cooking time up to 99 minutes with an acoustic alarm. This can be set for individual zones or all zones simultaneously.

- **Individual Safety Lock:** Locks the controls for each burner to prevent accidental changes.
- **Mute Mode:** Disables acoustic signals.
- **Container Detector:** The hob will only activate when a suitable induction-compatible pot or pan is placed on the cooking zone.

## Cooking with Induction

Induction cooking heats the cookware directly through electromagnetic fields, offering fast and efficient cooking. Ensure you use cookware made of ferromagnetic material (e.g., cast iron, magnetic stainless steel).

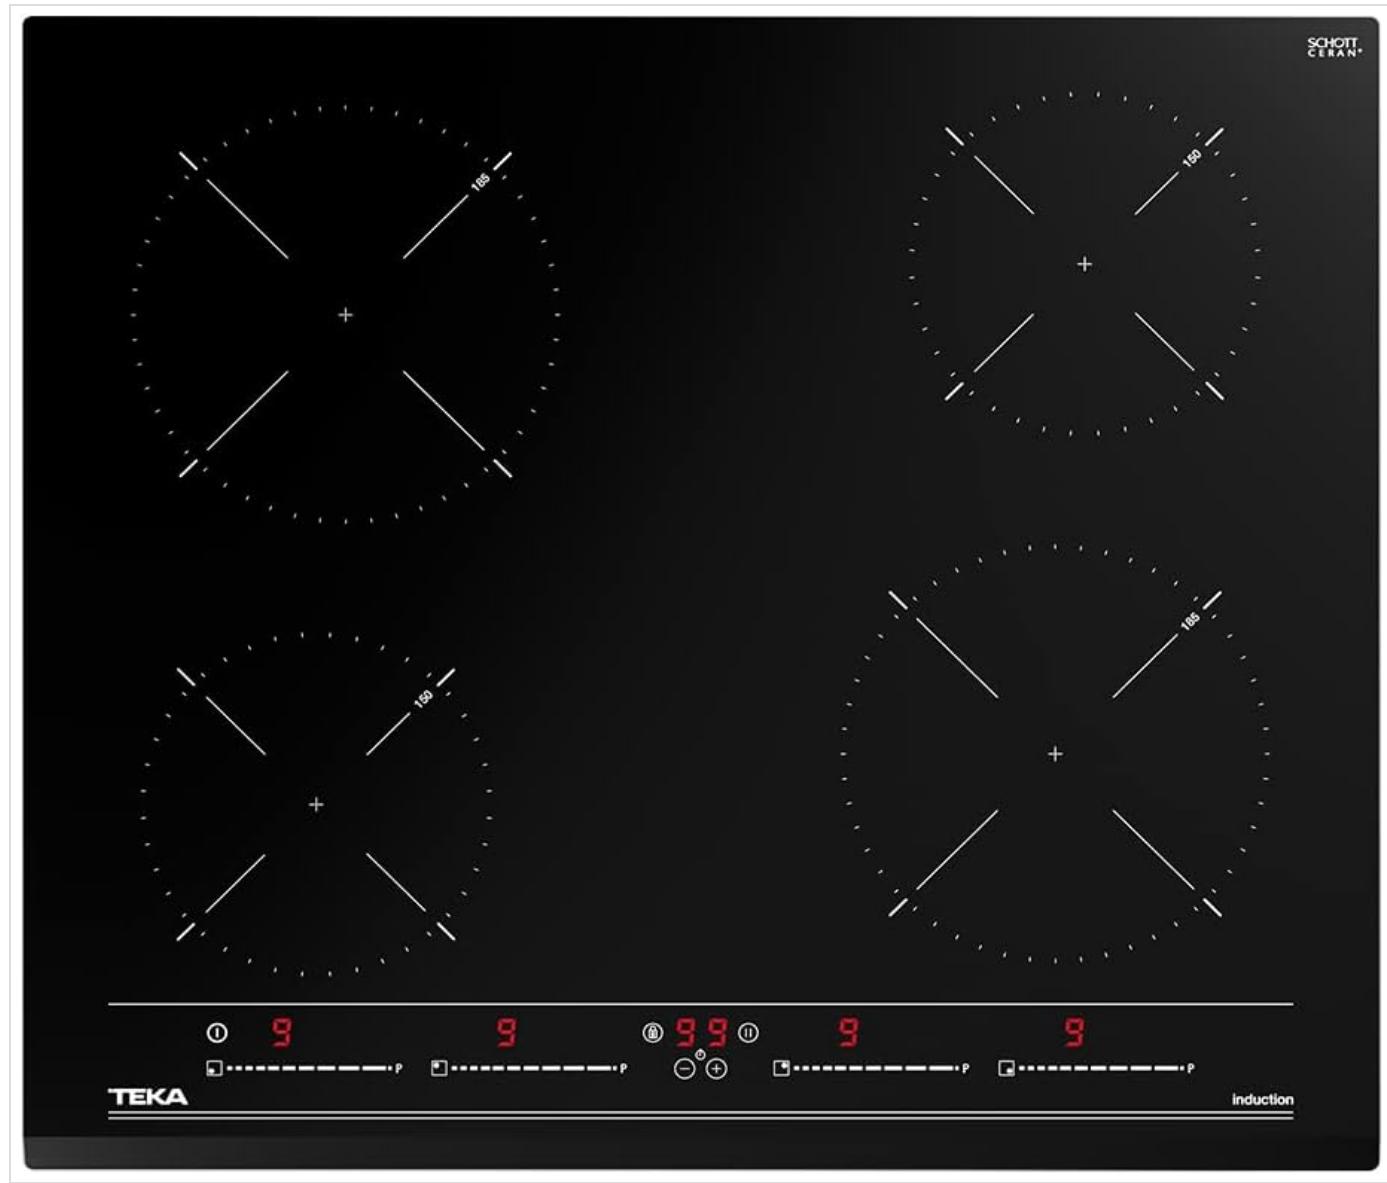

**Image:** Overhead view of the Teka IZC 64010 MSS BK Induction Grill, showcasing its four distinct cooking zones and the sleek black Schott Ceran glass ceramic surface.

- Place suitable cookware centrally on the desired cooking zone.
- Select the zone and adjust the power level using the multislider.
- The display will show the selected power level.

## CARE AND MAINTENANCE

Proper care and maintenance will ensure the longevity and optimal performance of your induction grill.

### Cleaning the Glass Ceramic Surface

- Always ensure the hob is cool before cleaning.
- For light spills and daily cleaning, wipe the surface with a soft cloth dampened with warm soapy water.
- For stubborn stains or burnt-on food, use a specialized ceramic hob cleaner and a scraper designed for glass ceramic surfaces.
- Avoid abrasive cleaners, scouring pads, or harsh chemicals as they can scratch or damage the surface.
- Dry the surface thoroughly after cleaning to prevent water spots.

## General Care

- Do not drop heavy objects on the glass ceramic surface.
- Avoid dragging rough-bottomed cookware across the surface to prevent scratches.
- Ensure proper ventilation around the appliance as per installation guidelines.

## TROUBLESHOOTING

If you encounter issues with your Teka IZC 64010 MSS BK Induction Grill, refer to the following common problems and solutions. If the problem persists, contact qualified service personnel.

Problem	Possible Cause	Solution
Hob does not turn on.	No power supply; Safety lock activated; Main power button not pressed correctly.	Check circuit breaker; Deactivate safety lock; Press and hold the main power button for a few seconds.
Cooking zone not heating.	Incorrect cookware used (not induction compatible); No cookware on zone; Zone not selected.	Use induction-compatible cookware; Place cookware centrally on the zone; Select the desired cooking zone.
Display shows an error code.	Overheating; Internal fault; Voltage fluctuation.	Turn off the hob, allow to cool, then restart; Consult a qualified technician if error persists.
Unusual noises during operation.	Normal induction hum; Cookware vibration.	A slight humming sound is normal for induction hobs. Check if cookware is stable on the surface.
Controls unresponsive.	Control panel is wet; Safety lock activated.	Wipe the control panel dry; Deactivate the safety lock.

## TECHNICAL SPECIFICATIONS

Feature	Detail
Brand	Teka
Model Number	112520025
Product Dimensions	20.08 x 23.62 x 2.28 inches (approx. 51 x 60 x 5.8 cm)
Item Weight	24.7 pounds (approx. 11.2 kg)
Installation Type	Drop-In
Heating Elements	4 Induction Zones

Feature	Detail
Burner Type	Ceramic (Induction Surface)
Heater Surface Material	Schott Ceran Glass Ceramic
Color	Black
Voltage	240 Volts
Power Source	Corded Electric
Control Type	Touch Control Multislider with Acoustic Sensors
Special Features	Power Plus Function, Stop & Go Function, Power Limitation Function, Mute Mode, Container Detector, Individual Safety Lock for each burner, Programming cooking time up to 99 minutes.
Included Components	Induction grill, instruction manual

## WARRANTY AND SUPPORT

For warranty information, technical support, or service requests, please contact Teka customer service or refer to the warranty card included with your product.

**Teka Customer Service:** Please visit the official Teka website for regional contact information and support resources. When contacting support, please have your model number (112520025) and purchase date available.

© 2024 Teka. All rights reserved.

## Related Documents - 112520025

 <b>User Manual</b> ES FR SK PT PL RU EN PL IT DE CS NL <a href="http://www.teka.com">www.teka.com</a>	<p><a href="#"><u>Teka Ceramic Hob User Manual</u></a></p> <p>Comprehensive user manual for Teka ceramic hobs with touch control, covering installation, usage, maintenance, and special functions.</p>
 <b>User Manual</b> ES FR PT EN DE <a href="http://www.teka.com">www.teka.com</a>	<p><a href="#"><u>Manual de Usuario Teka: Placas de Inducción con Control Táctil</u></a></p> <p>Manual de usuario completo para placas de inducción Teka, que cubre instalación, uso, seguridad, mantenimiento y funciones especiales como MestrePaeller. Disponible en múltiples idiomas, incluyendo español, portugués, inglés, alemán y francés.</p>

 User Manual TBC 64120 TCS BK EN ES PT <a href="#">www.teka.com</a>	<p><b><a href="#">Teka TBC 64120 TCS BK Ceramic Hob User Manual and Installation Guide</a></b></p> <p>Comprehensive user manual and installation guide for the Teka TBC 64120 TCS BK ceramic hot plate, covering setup, operation, safety, maintenance, and troubleshooting.</p>
 User Manual DBB / CMB1 / DCB / DB8 / DBH / MDB ES CA DE ES FR PT NL GR TR PL HU RU UA SK CZ RO BG AR <a href="#">www.teka.com</a>	<p><b><a href="#">Manual de Usuario Teka DBB / CMB1 / DCB / DB8 / DBH / MDB</a></b></p> <p>Manual de usuario completo para campanas extractoras Teka (modelos DBB, CMB1, DCB, DB8, DBH, MDB). Incluye guías detalladas de instalación, uso, mantenimiento, limpieza, solución de problemas y especificaciones técnicas. Diseñado para un uso seguro y eficiente en cocinas domésticas.</p>
 User Manual MWE FS20 G WH ES PT DE IT DE <a href="#">www.teka.com</a>	<p><b><a href="#">Manual de Usuario Teka MWE FS20 G WH: Guía Completa y Seguridad</a></b></p> <p>Descubra cómo usar su horno microondas Teka MWE FS20 G WH con este manual de usuario detallado. Incluye instrucciones de seguridad, operación y mantenimiento.</p>
 User Manual HMWE FS23 GC BK ES PT DE IT DE <a href="#">www.teka.com</a>	<p><b><a href="#">Manual de Usuario Horno Microondas Teka HMWE FS23 GC BK</a></b></p> <p>Manual de usuario completo para el horno microondas Teka modelo HMWE FS23 GC BK. Incluye instrucciones de seguridad, funcionamiento, limpieza y solución de problemas en varios idiomas.</p>