

Manuals.plus /
› Accutime /
› Accutime Disney Encanto Kids Smart Watch Model ENC4000AZ User Manual

Accutime ENC4000AZ

Accutime Disney Encanto Kids Smart Watch

Model: ENC4000AZ | Brand: Accutime

INTRODUCTION

This manual provides comprehensive instructions for the Accutime Disney Encanto Kids Smart Watch, Model ENC4000AZ. It covers setup, operation, maintenance, and troubleshooting to ensure a safe and enjoyable experience. This smartwatch is designed specifically for children, focusing on entertainment and basic utility without internet connectivity, Wi-Fi, Bluetooth, or cellular capabilities.

SAFETY INFORMATION

- This device is intended for children aged 3 years and older.
- The smartwatch does not connect to the internet and lacks Wi-Fi, Bluetooth, or any wireless communication technology for calling or texting. This design prioritizes child safety.
- Use only the provided USB charging cable. Do not use damaged cables or chargers.
- Avoid exposing the watch to extreme temperatures, direct sunlight for prolonged periods, or water beyond splash resistance.
- Do not attempt to open or repair the watch yourself. Refer to the warranty section for service information.

PACKAGE CONTENTS

Verify that all items are present in the package:

- Accutime Disney Encanto Kids Smart Watch (Model ENC4000AZ)
- USB Charging Cable

PRODUCT OVERVIEW

The Accutime Disney Encanto Kids Smart Watch features a vibrant touchscreen display and a durable, child-friendly design. It includes a built-in camera, various interactive applications, and a comfortable strap.



Image: Front view of the Accutime Disney Encanto Kids Smart Watch. The watch features a purple casing and a strap adorned with colorful butterfly and floral patterns. The screen displays a character from Disney's Encanto with an analog clock face.

SETUP

1. Charging the Device

1. Locate the USB charging port on the side of the watch.

2. Connect the small end of the provided USB charging cable to the watch's charging port.
3. Connect the larger end of the USB cable to a standard USB power adapter (not included) or a computer's USB port.
4. The watch screen will indicate that it is charging.
5. For optimal performance, charge the watch for at least **two to three hours** prior to its initial use.

2. Powering On/Off

- To power on the watch, press and hold the power button (usually located on the side) until the screen illuminates.
- To power off the watch, press and hold the power button until a power-off option appears on the screen, then confirm.

OPERATING INSTRUCTIONS

Navigation

The watch features a touchscreen display. Swipe left or right to navigate through different applications and features. Tap an icon to select an application.

Changing Watch Faces

Personalize the watch display by changing the watch face. Access the watch face settings through the main menu or by long-pressing the current watch face (method may vary). Select from a variety of pre-loaded Disney Encanto themed designs.



Image: The Accutime Disney Encanto Kids Smart Watch showcasing ten different changeable watch faces. Each face features characters and scenes from the Disney Encanto movie, offering various visual styles for the time display.

Selfie Camera

The built-in selfie camera allows children to take pictures. Navigate to the camera application, frame the shot, and tap the on-screen button to capture an image.

Photo Album Viewer

View saved photos in the photo album application. Swipe through images and delete unwanted ones.

Video Player

The watch includes a video player. Access this feature to play pre-loaded or recorded video clips.

Voice Recorder

Use the voice recorder to record short audio messages. Open the voice recorder application and follow the on-screen prompts to start, stop, and play recordings.

Calculator

A basic calculator is included for simple arithmetic operations. Access it from the main menu.

Alarm Clock

Set alarms for reminders or wake-up calls. Navigate to the alarm clock application to set times and customize alarm sounds.

Pedometer (Step Counter)

The built-in pedometer tracks daily steps. Access the pedometer application to view step counts and activity data.

Interactive Games

The watch comes with various pre-loaded interactive games for entertainment. Select the games application from the menu to choose and play games.



Image: The Accutime Disney Encanto Kids Smart Watch with text overlays indicating key features: '10 Changeable Watch Faces', '6 Interactive Games', and 'Fun Selfie Camera'. The watch face displays two Encanto characters.

Cleaning

To clean the watch, gently wipe the screen and casing with a soft, dry, lint-free cloth. For stubborn marks, slightly dampen the cloth with water. Do not use harsh chemicals or abrasive cleaners.

Battery Care

- Recharge the battery when the low battery indicator appears to prevent complete discharge.
- Avoid leaving the watch uncharged for extended periods.
- Store the watch in a cool, dry place when not in use.

TROUBLESHOOTING

If you encounter issues with your Accutime Disney Encanto Kids Smart Watch, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Watch does not turn on	Low or depleted battery	Charge the watch for at least 2-3 hours using the provided USB cable.
Screen is unresponsive	Temporary software glitch	Perform a soft reset by pressing and holding the power button for 10-15 seconds until the watch restarts.
Battery drains quickly	Frequent use of power-intensive features (e.g., games, camera)	Reduce usage of power-intensive applications. Ensure the watch is fully charged before use.
Cannot take pictures/record videos	Insufficient storage space	Delete old photos or videos from the photo album to free up space.

SPECIFICATIONS

Feature	Detail
Model Number	ENC4000AZ
Package Dimensions	6.06 x 4.13 x 2.64 inches
Item Weight	5.93 ounces
Battery Type	1 Lithium Ion battery (included)
Manufacturer Minimum Age	3 years
Connectivity	No Wi-Fi, Bluetooth, or cellular connectivity
Key Features	Selfie Camera, Photo Album, Video Player, Voice Recorder, Calculator, Alarm Clock, Pedometer, Games, Changeable Watch Faces

WARRANTY AND SUPPORT

This Accutime Disney Encanto Kids Smart Watch comes with a **one-year warranty** from Accutime Watch Corporation. For warranty claims, technical support, or further assistance, please contact Accutime customer service. Keep your proof of purchase for warranty validation.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

Open the live page

<https://manuals.plus/asin/B09W6937LF>

More documents and user manuals: <https://manuals.plus/>