

TOPTECH Spike-4

Top Tech Audio Spike-4 Bluetooth Speaker User Manual

Model: Spike-4

1. INTRODUCTION

Thank you for purchasing the Top Tech Audio Spike-4 Bluetooth Speaker. This manual provides important information regarding the setup, operation, maintenance, and troubleshooting of your new speaker. Please read this manual thoroughly before using the product to ensure proper and safe operation.

2. SAFETY INFORMATION

Important Safety Instructions:

- Do not expose the speaker to extreme temperatures, humidity, or direct sunlight.
- Do not immerse the speaker in water or other liquids. This product is not waterproof.
- Do not attempt to disassemble, repair, or modify the speaker. Refer all servicing to qualified personnel.
- Use only the power cord supplied with the speaker.
- Keep the speaker away from heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Clean only with a dry cloth.
- Ensure proper ventilation and do not block any ventilation openings.
- Avoid listening at high volume levels for extended periods to prevent hearing damage.

3. PACKAGE CONTENTS

Please check the package contents to ensure all items are present:

- 1 x AL-802 Party Speaker (Top Tech Audio Spike-4 Bluetooth Speaker)
- 1 x Microphone
- 1 x Power Cord

4. PRODUCT OVERVIEW AND FEATURES

The Top Tech Audio Spike-4 is a portable Bluetooth speaker designed to deliver powerful sound with dynamic light displays, suitable for both indoor and outdoor use.



Figure 4.1: Front view of the Top Tech Audio Spike-4 speaker, showcasing its dual 4-inch woofers with vibrant, multi-color LED lighting effects. The central control panel is visible between the two speaker grilles.



Figure 4.2: Overview of the speaker's connectivity options and features, including Easy Portable design, USB Port, TF Card Port, Mic Port, AUX Port, and Bluetooth Wireless capability. These features are indicated by clear icons around the speaker.



Figure 4.3: Illustration of the speaker's dynamic lighting features, including Multicolor Gradation where lights move with the rhythm, and Reactive Color Show where colors change and rotate slowly, enhancing the audio experience.



Figure 4.4: Dimensions of the Top Tech Audio Spike-4 speaker, showing a height of 16.25 inches and a width of 7 inches, emphasizing its compact yet powerful design.

Key Features:

- **Powerful Sound:** Dual 4-inch woofers deliver full-range audio with deep bass and vibrant highs.
- **Rhythmic Disco Lights:** Built-in LED lighting effects synchronize with your music for a dynamic visual experience.
- **Wireless Bluetooth Streaming:** Easily connect your smartphone or tablet with up to 33ft (10 meters) wireless range.
- **Multiple Playback Modes:** Supports USB, TF card, AUX input, and FM radio for versatile listening options.
- **Built-in Karaoke Function:** Includes a microphone input and a microphone for sing-alongs and parties.
- **Portable Design:** Equipped with a handle for easy transport.

5. SETUP

5.1 Initial Charging

Before first use, fully charge the speaker. Connect the supplied power cord to the speaker's charging port and plug the other end into a standard wall outlet. The charging indicator light will illuminate. Once fully charged, the light may change color or turn off, depending on the model.

5.2 Powering On/Off

To power on the speaker, locate the power button, usually on the control panel, and press and hold it for a few seconds until you hear an audible prompt or see the display light up. To power off, repeat the process.

5.3 Bluetooth Pairing

1. Ensure the speaker is powered on and in Bluetooth mode. If not, press the "Mode" button to switch to Bluetooth. The display will show "BLUE" or a similar indicator, and you may hear a pairing prompt.
2. On your mobile device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
3. Select "Spike-4" or "TOPTECH" from the list of found devices.
4. Once paired, the speaker will indicate a successful connection, usually with an audible tone.
5. You can now play audio from your device through the speaker.

5.4 Connecting Other Audio Sources

- **AUX Input:** Connect an external audio device (e.g., MP3 player, computer) to the speaker's AUX port using a 3.5mm audio cable (not included). Press the "Mode" button to switch to AUX mode.
- **USB Playback:** Insert a USB flash drive containing MP3 audio files into the USB port. The speaker will automatically switch to USB mode and begin playing.
- **TF Card Playback:** Insert a TF (microSD) card containing MP3 audio files into the TF card slot. The speaker will automatically switch to TF card mode and begin playing.

5.5 Microphone Connection

Plug the supplied microphone into the speaker's microphone input port. The microphone is ready for use in any mode, allowing for karaoke or public address functions.

6. OPERATING INSTRUCTIONS

6.1 Volume Control

Adjust the master volume using the large rotary knob on the control panel. Turn clockwise to increase volume, counter-clockwise to decrease.

6.2 Mode Selection

Press the "Mode" button repeatedly to cycle through available input modes: Bluetooth, FM Radio, AUX, USB, and TF Card. The current mode will be indicated on the display.

6.3 Light Modes

The speaker features dynamic LED lights. There may be a dedicated button (e.g., "Light" or "LED") to cycle through different light patterns or to turn the lights on/off. Refer to the control panel for specific button functions.

6.4 FM Radio Operation

1. Switch the speaker to FM Radio mode using the "Mode" button.
2. Press the "Play/Pause" button (often labeled with a play symbol) to initiate an automatic scan for available FM stations. The speaker will save detected stations.

3. Use the "Previous/Next Track" buttons (often labeled with arrow symbols) to navigate between saved stations.

6.5 Karaoke Function

With the microphone connected, simply speak or sing into the microphone. The speaker will amplify your voice. Adjust the microphone volume (if available) and echo effects (if available) using dedicated knobs or buttons on the control panel.

7. MAINTENANCE

7.1 Cleaning

Wipe the speaker's exterior with a soft, dry cloth. Do not use abrasive cleaners, waxes, or solvents. Ensure no liquids enter the speaker's openings.

7.2 Storage

When not in use for extended periods, store the speaker in a cool, dry place, away from direct sunlight and extreme temperatures. It is recommended to partially charge the battery before storing to prolong its lifespan.

7.3 Battery Care

The speaker contains a rechargeable battery. To maximize battery life:

- Avoid fully discharging the battery frequently.
- Charge the speaker regularly, even if not in frequent use.
- Do not expose the speaker to temperatures above 45°C (113°F) or below 0°C (32°F).

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Battery is depleted.	Connect the speaker to a power source and charge it.
No sound from speaker.	Volume is too low; Incorrect mode selected; Device not connected properly.	Increase volume; Ensure correct input mode (Bluetooth, AUX, USB, TF); Reconnect device.
Bluetooth pairing fails.	Speaker not in pairing mode; Device Bluetooth off; Too far from speaker.	Ensure speaker is in Bluetooth pairing mode; Turn on Bluetooth on your device; Move device closer to speaker (within 10 meters).
Microphone not working.	Microphone not plugged in correctly; Microphone volume too low.	Ensure microphone is fully inserted into the mic port; Adjust microphone volume knob if available.
FM radio static.	Weak signal; Interference.	Relocate the speaker to an area with better reception; Perform an auto-scan again.

9. SPECIFICATIONS

Feature	Detail
---------	--------

Feature	Detail
Model Name	Spike-4
Brand	TOPTECH
Speaker Type	Outdoor / Portable
Speaker Size	Dual 4 Inches (Woofers)
Connectivity Technology	Bluetooth, USB, AUX
Wireless Communication Technology	Bluetooth
Bluetooth Range	10 Meters (33 feet)
Power Source	Battery Powered
Battery Life	Up to 5 Hours
Included Components	AL-802 Party Speaker, Microphone, Power Cord
Color	Black
UPC	752574407043
Dimensions (Approx.)	16.25 inches (Height) x 7 inches (Width)

10. WARRANTY AND SUPPORT

The Top Tech Audio Spike-4 Bluetooth Speaker comes with a Limited Warranty. Please retain your proof of purchase for warranty claims.

For technical support, warranty inquiries, or replacement parts, please contact Top Tech Audio customer service. Refer to the contact information provided with your product packaging or visit the official Top Tech Audio website.

Manufacturer: Top Tech Audio

© 2023 Top Tech Audio. All rights reserved.

Related Documents

	<p>TopTech ELITE12 Professional Multi Media Speaker Karaoke System User Manual</p> <p>User manual for the TopTech ELITE12 Professional Multi Media Speaker Karaoke System, covering charging, wired microphone use, wireless connection, control panel functions, remote control functions, and FCC statement.</p>
---	--