

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Nerf](#) /

› [Nerf Pro Gelfire Mythic Full Auto Blaster Instruction Manual](#)

Nerf F7267

Nerf Pro Gelfire Mythic Blaster Instruction Manual

Model: F7267

1. INTRODUCTION

The Nerf Pro Gelfire Mythic Full Auto Blaster delivers high-performance blasting with hydrated rounds that burst on impact. Designed for ages 14 and up, this blaster features full-auto and semi-auto modes, a high-capacity 800-round hopper, and a convenient rechargeable battery. This manual will guide you through the setup, operation, and maintenance of your new Gelfire blaster to ensure a safe and enjoyable experience.

2. IMPORTANT SAFETY INFORMATION

WARNING: Small parts may be generated. Not for children under 3 years.

EYEWEAR REQUIRED: Always wear the included protective eyewear when using this blaster. Do not aim at eyes or face. Use only official Nerf Gelfire Rounds. Do not freeze or modify rounds. Do not modify blaster. Impact from rounds may cause temporary marks on skin. Adult supervision is recommended.

3. WHAT'S IN THE Box

- Nerf Pro Gelfire Mythic Blaster
- Rechargeable 7.4V 500mAh LiPo Battery
- 800-Round Capacity Hopper
- Removable Barrel Attachment
- 2 x 5,000-Round Packets of Dehydrated Nerf Pro Gelfire Soft Super Absorbent Polymer Projectiles (10,000 total)
- Protective Eyewear
- Universal USB-A to USB-C Charging Cable (USB-A wall charger not included)



Figure 3.1: All included components of the Nerf Pro Gelfire Mythic Blaster.

4. SETUP

4.1 Hydrating Gelfire Rounds

1. Empty the dehydrated Nerf Pro Gelfire rounds into a large container.
2. Add plenty of clean tap water to fully submerge the rounds.
3. Allow the rounds to soak for 3 to 4 hours. They will expand significantly.
4. Drain any excess water before use. The hydrated rounds are now ready for loading.



Figure 4.1: Gelfire rounds hydrating in water.



Figure 4.2: Dehydrated vs. Hydrated Gelfire Rounds.

4.2 Charging the Rechargeable Battery

1. Locate the rechargeable 7.4V 500mAh LiPo battery.
2. Connect the battery to the included USB-A to USB-C charging cable.
3. Plug the USB-A end of the cable into a compatible USB-A wall charger (not included).
4. Allow the battery to charge for approximately 2 hours for a full charge. The indicator light on the battery will change to show charging status.



Figure 4.3: Rechargeable Battery.

4.3 Blaster Assembly

1. Insert the charged rechargeable battery into the designated slot on the blaster. Ensure it clicks securely into place.
2. Attach the extendable stock to the rear of the blaster by sliding it into position until it locks.
3. Twist and attach the removable barrel to the front of the blaster.
4. Ensure all attachments are firmly secured before use.



Figure 4.4: Assembled Nerf Pro Gelfire Mythic Blaster.

Video 4.1: Official demonstration of the Nerf Pro Gelfire Mythic Blaster, showing battery insertion, round hydration, and firing modes.

5. OPERATING THE BLASTER

5.1 Loading the Hopper

1. Open the lid of the 800-round capacity hopper.
2. Carefully pour the hydrated Gelfire rounds into the hopper.
3. Close the hopper lid securely.
4. Attach the filled hopper to the top rail of the blaster, ensuring it is locked in place.



Figure 5.1: Blaster with hopper attached.

5.2 Firing Modes

1. Ensure your protective eyewear is on.
2. Locate the power switch/mode selector on the blaster.
3. Turn the blaster ON. The indicator light will illuminate.
4. Select your desired firing mode:
 - **Semi-Auto Mode:** Pull the trigger once for each round you wish to fire.
 - **Full-Auto Mode:** Hold down the trigger for continuous blasting at up to 10 rounds per second.
5. To activate the trigger lock, slide the orange safety switch located near the trigger. This prevents accidental firing.



Figure 5.2: Blaster trigger and mode selector.

6. MAINTENANCE

6.1 Cleaning

Wipe down the blaster with a damp cloth as needed. Do not submerge the blaster in water. Ensure no water enters the internal electronic components.

6.2 Storing Gelfire Rounds

Store hydrated Gelfire rounds in an airtight container away from direct sunlight and extreme temperatures to prevent them from drying out. If rounds dry out, they can be rehydrated by soaking them in water again.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Blaster not firing / Rounds getting stuck	Rounds not fully hydrated or jammed in the feeding mechanism.	Ensure rounds are fully hydrated (3-4 hours soak time). Gently shake the blaster to dislodge any stuck rounds. If the issue persists, remove the hopper and clear any visible obstructions.
Blaster not turning on	Battery is not charged or not properly inserted.	Ensure the rechargeable battery is fully charged and correctly inserted into the blaster. Check the power switch is in the 'ON' position.
Low firing velocity	Battery charge is low.	Recharge the battery. Performance may decrease as the battery drains.

8. SPECIFICATIONS

Feature	Detail
Model Number	F7267
Brand	Nerf
Dimensions (L x W x H)	14 x 2.62 x 10.5 inches
Item Weight	1.5 pounds
Hopper Capacity	800 rounds
Rounds Included	10,000 dehydrated Gelfire rounds
Battery Type	Rechargeable 7.4V 500mAh LiPo (included)
Charging Cable	USB-A to USB-C (included)
Recommended Age	14 years and up
Firing Modes	Full-Auto, Semi-Auto
Max Firing Rate	Up to 10 rounds per second (full-auto)
Material Type	Plastic

9. WARRANTY AND SUPPORT

For warranty information or product support, please contact Hasbro customer service directly. Refer to the packaging or Hasbro's official website for the most up-to-date contact details and warranty policies.

© 2025 Nerf. All rights reserved.