

[Manuals.plus](#) /

› [AKOOTE](#) /

› AKOOTE Replacement Remote Control User Manual for Midea AC (Models RG57A7/BGEF and others)

AKOOTE RG57A7/BGEF

AKOOTE Replacement Remote Control User Manual

For Midea AC Models: RG57A7/BGEF, RG57E1/BGEU1, RG57B1/BGE, and others

INTRODUCTION

This manual provides instructions for the AKOOTE replacement remote control, designed for various Midea air conditioner models. Please read this manual carefully before using the remote control to ensure proper operation and longevity.

Compatible Models

This remote control is compatible with a wide range of Midea AC models, including but not limited to:

- R57B1/BGE
- RG52A2/BGEFU1
- RG57/BGE
- RG57A/BGE
- RG57A1(B)/BGE
- RG57A1(B)/BGEF
- RG57A1/BGEF
- RG57A1B/BGEF
- RG57A2/BGEF
- RG57A3/BGEF
- RG57A4/BGEF
- RG57A6/BGEF
- RG57A6/BGEFU1
- RG57A7(B)/BGEF
- RG57A7/BGEF
- RG57B(B)/BGE
- RG57B/BGE
- RG57B/BGEFU1
- RG57B/BGE-OS
- RG57B/BGEU1

- RG57B1/BGE
- RG57B2/BGE
- RG57BB/BGE
- RG57D/BGE
- RG57D1(C)/BGEF
- RG57E1/BGEU1
- RG57F3(B)/BGEFU1
- RG57H(B)/BGE
- Rg57H/Bge
- RG57H3/BGEFU1
- RG57H4/BGEFU1
- RG57H4B/BGEFU1
- RG57HB/BGE
- RG57K7(B)/BGEF
- RG57K7/BGEF
- RG57K7B/BGEF
- RG57OB/BGE-OS
- RG70E/BGEF

SETUP

Battery Installation

The remote control requires two (2) AAA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch and lift to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.



Image: Back of the remote control with the battery cover removed, illustrating the battery insertion points for two AAA batteries.

Note: This remote control does not require any programming or pairing. It is ready to use once batteries are installed. The temperature display is in Celsius and cannot be changed.

OPERATING INSTRUCTIONS

Point the remote control directly at the Midea air conditioner's receiver window. Ensure there are no obstructions between the remote and the AC unit.

Basic Functions

The remote control features standard buttons for common air conditioner functions. While specific button labels may vary slightly, the general functions include:

- **Power On/Off:** To turn the AC unit on or off.

- **Mode Selection:** Cycle through operating modes such as Cool, Heat, Fan, Dry, Auto.
- **Temperature Adjustment:** Increase or decrease the desired temperature. The display shows temperature in Celsius.
- **Fan Speed:** Adjust the fan speed (e.g., Low, Medium, High, Auto).
- **Swing/Louvre:** Control the direction of the airflow.
- **Timer:** Set a timer for the AC unit to turn on or off.
- **Sleep Mode:** Activates a quiet, energy-saving mode.

Refer to your Midea air conditioner's original manual for detailed explanations of specific functions and their corresponding buttons if you are unsure.

MAINTENANCE

Cleaning the Remote Control

To maintain the remote control's appearance and functionality:

- Wipe the surface with a soft, dry cloth.
- For stubborn dirt, lightly dampen the cloth with water and a mild detergent, then wipe dry immediately.
- Do not use abrasive cleaners, alcohol, or corrosive liquids, as these can damage the remote's surface or internal components.

Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries or different types of batteries.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote control not working.	Dead or incorrectly installed batteries. Obstruction between remote and AC unit. Remote control is too far from the AC unit.	Replace batteries with new AAA batteries, ensuring correct polarity. Remove any objects blocking the signal path. Move closer to the AC unit.
AC unit not responding consistently.	Weak batteries. Infrared sensor on AC unit is dirty or blocked.	Replace batteries. Clean the AC unit's infrared sensor window.

SPECIFICATIONS

Brand	AKOOTE
Model Number	RG57A7/BGEF (and compatible models listed above)
Compatible Devices	Midea Air Conditioners
Connectivity Technology	Infrared

Controller Type	Button Control
Number of Batteries Required	2
Battery Type	AAA
Special Feature	Ergonomic design, Celsius temperature display (no setting required)

WARRANTY AND SUPPORT

This AKOOTE remote control comes with a **30-day warranty** from the date of purchase. This warranty covers manufacturing defects. It does not cover damage caused by misuse, accidents, or unauthorized modifications.

For support or warranty claims, please contact your retailer or the AKOOTE customer service through the platform where the product was purchased.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question