

[Manuals.plus](#) /

› [KUMIO](#) /

› KUMIO 1.25-Quart Ice Cream Maker Instruction Manual

KUMIO ICE-1032Y

KUMIO 1.25-Quart Ice Cream Maker Instruction Manual

Model: ICE-1032Y

INTRODUCTION

This manual provides detailed instructions for the safe and efficient operation of your KUMIO 1.25-Quart Ice Cream Maker. This appliance features a built-in compressor, eliminating the need for pre-freezing, and offers four distinct modes for creating various frozen desserts. Please read all instructions carefully before first use and retain this manual for future reference.



Image: The KUMIO 1.25-Quart Ice Cream Maker, a compact white appliance with a digital display, shown alongside a serving of ice cream.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons.

- Read all instructions before operating the appliance.
- Do not immerse the main unit, cord, or plug in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before assembling or disassembling parts, and before cleaning.

- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use the appliance for other than intended use.
- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.

PRODUCT COMPONENTS

Familiarize yourself with the various parts of your KUMIO Ice Cream Maker for proper assembly and operation.

Detachable & Easy to Clean



Loading Bowl



LCD Display



Motor Components

Housing



Base



Mixing Blade



Transparent Lid

Image: Exploded view of the KUMIO Ice Cream Maker components, including the loading bowl, LCD display, motor, housing, base, mixing blade, and transparent lid.

- **Housing:** The main body of the appliance containing the compressor and control panel.
- **Loading Bowl:** The removable inner bowl where ingredients are placed for freezing and mixing.
- **Mixing Blade:** Attaches to the motor component and churns the ingredients.
- **Transparent Lid:** Covers the loading bowl, allowing observation of the mixing process.
- **Motor Components:** Located within the lid, drives the mixing blade.
- **LCD Display:** Shows time, mode, and operational status.
- **Control Panel:** Buttons for ON/OFF, mode selection, and Start/Pause.

SETUP AND FIRST USE

1. **Unpacking:** Carefully remove all packaging materials and inspect the appliance for any damage.
2. **Cleaning:** Before first use, wash the loading bowl, mixing blade, and transparent lid with warm, soapy water. Rinse thoroughly and dry completely. Wipe the main housing with a damp cloth. Do not immerse the main housing in

water.

3. **Assembly:**

- Place the loading bowl into the main housing.
- Insert the mixing blade into the center of the loading bowl.
- Place the transparent lid onto the loading bowl and rotate it clockwise until it locks securely into place. Ensure the triangle on the lid aligns with the "LOCK" mark on the housing.

4. **Placement:** Place the ice cream maker on a stable, flat, and dry surface. Ensure adequate ventilation around the appliance.

5. **Power Connection:** Plug the power cord into a grounded electrical outlet.

OPERATING INSTRUCTIONS

Control Panel Overview



Image: Detailed view of the LCD display and control buttons, illustrating each function.

- **ON/OFF Button:** Powers the unit on or off.
- **Time Display:** Shows the remaining operation time.
- **Select Mode Button:** Cycles through the available operating modes.
- **Start/Pause Button:** Initiates or temporarily stops the selected program.
- **Mode Indicators:** Icons on the LCD display illuminate to show the active mode (Ice Cream, Yogurt, Single Refrigeration, Single Mixing).

Making Ice Cream

1. **Prepare Ingredients:** Ensure your ice cream mixture is prepared according to your recipe. For best results, chill the mixture in the refrigerator for at least 30 minutes before adding it to the machine.
2. **Add Ingredients:** Pour the chilled ingredients into the loading bowl. Do not fill above 60% capacity to allow for expansion during freezing.



Image: Pouring ingredients into the loading bowl.

3. **Secure Lid:** Place the transparent lid with the motor component and mixing blade onto the loading bowl and rotate to lock.



Image: Securing the lid onto the ice cream maker.

4. **Power On:** Press the ON/OFF button. The machine will power on, and the default mode (usually Ice Cream) will be indicated.
5. **Select Mode:** If necessary, press the "Select Mode" button to choose the "Ice Cream Mode" icon.
6. **Start Churning:** Press the "Start/Pause" button to begin the ice cream making process. The timer will start counting down. The typical duration for ice cream is approximately 60 minutes.



Image: Selecting the Ice Cream Mode and starting the process.

7. **Completion:** The machine will beep when the process is complete. The ice cream will have a soft-serve consistency.



Image: Freshly made ice cream in the loading bowl.

8. **Serve:** Turn off the machine, remove the lid and mixing blade, and scoop out the ice cream. For a firmer consistency, transfer the ice cream to an airtight container and place it in the freezer for 1-2 hours.

Making Yogurt

1. **Prepare Ingredients:** Prepare your yogurt mixture according to your recipe, typically involving heating milk and adding a starter culture.
2. **Add Ingredients:** Pour the prepared yogurt mixture into the loading bowl. Do not fill above 80% capacity.
3. **Secure Lid:** Place the transparent lid onto the loading bowl and rotate to lock.
4. **Power On:** Press the ON/OFF button.
5. **Select Mode:** Press the "Select Mode" button to choose the "Yogurt Mode" icon.
6. **Start Process:** Press the "Start/Pause" button to begin the yogurt making process. The machine will maintain a warm temperature for fermentation, typically for 8 hours, then switch to cooling.
7. **Completion:** The machine will beep when the process is complete.
8. **Serve:** Turn off the machine, remove the lid, and transfer the yogurt to a container for chilling in the refrigerator.

Other Modes

- **Single Refrigeration Mode:** This mode allows the machine to cool without mixing. Useful for pre-chilling the bowl or keeping a mixture cold.
- **Single Mixing Mode:** This mode activates only the mixing blade without refrigeration. Useful for stirring ingredients or incorporating additions.

Keep Cool Function

After the ice cream or sorbet program finishes, the machine will automatically enter a "Keep Cool" function for up to 1 hour. This maintains the frozen dessert's consistency and prevents it from melting.

MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and hygienic operation of your ice cream maker.

1. **Unplug:** Always unplug the appliance from the power outlet before cleaning.
2. **Disassemble:** Remove the transparent lid, mixing blade, and loading bowl from the main housing.
3. **Wash Detachable Parts:** Wash the loading bowl, mixing blade, and transparent lid with warm, soapy water. Rinse thoroughly and dry completely with a soft cloth. These parts are not dishwasher safe.
4. **Clean Main Housing:** Wipe the exterior of the main housing with a soft, damp cloth. Do not use abrasive cleaners or scourers. Never immerse the main housing in water or any other liquid.
5. **Dry and Store:** Ensure all parts are completely dry before reassembling or storing the appliance. Store in a cool, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Machine does not turn on.	Not plugged in; power outage; ON/OFF button not pressed.	Ensure the power cord is securely plugged into a working outlet. Check circuit breaker. Press the ON/OFF button.
Mixing blade does not rotate.	Lid not properly locked; ingredients too thick; motor component not correctly seated.	Ensure the lid is securely locked. Check if the mixture is too thick; add more liquid if necessary. Re-seat the motor component in the lid.
Ice cream is too soft or not freezing.	Ingredients not pre-chilled; too much mixture; ambient temperature too high; insufficient operating time.	Pre-chill ingredients before adding. Do not exceed maximum fill line. Ensure machine is in a cool, well-ventilated area. Allow full operating time.
Machine makes unusual noise.	Mixing blade obstructed; machine not on a level surface.	Check for obstructions around the mixing blade. Ensure the machine is on a stable, level surface.
Loading bowl freezes to the machine.	Condensation or spills between bowl and housing.	Power off the machine and wait 10-15 minutes for ice to melt, then remove the bowl. Ensure the exterior of the bowl is dry before placing it in the housing.

SPECIFICATIONS

Feature	Detail
Brand	KUMIO
Model Name	ICE-1032Y

Feature	Detail
Capacity	1.25 Quarts (approx. 1.18 Liters)
Power Consumption	100W
Voltage	AC 110-120V/60Hz
Material	Acrylonitrile Butadiene Styrene (ABS)
Product Dimensions	13.9 x 10.2 x 8.9 inches (35.3 x 25.9 x 22.6 cm)
Item Weight	18.36 pounds (8.33 kg)
Special Features	Built-in Compressor (No Pre-Freezing), 4 Operating Modes (Ice Cream, Yogurt, Single Mix, Single Refrigeration), LCD Display, Timer, Keep Cool Function.



Image: KUMIO Ice Cream Maker with key dimensions and specifications listed.

WARRANTY AND SUPPORT

KUMIO products are designed and manufactured to the highest quality standards. For information regarding warranty coverage, please refer to the warranty card included with your purchase or contact KUMIO customer support. If you encounter any issues or have questions about your KUMIO Ice Cream Maker, please contact our customer support team for assistance.

- **Online Support:** Visit the official KUMIO website for FAQs and support resources.
- **Email Support:** Refer to your product packaging or warranty card for contact email.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question