

[Manuals.plus](#) /

› [OLEVS](#) /

› OLEVS Men's Chronograph Watch OUW-S-G2858GS-BL User Manual

OLEVS OUW-S-G2858GS-BL

OLEVS Men's Chronograph Watch User Manual

Model: OUW-S-G2858GS-BL

1. INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your OLEVS Men's Chronograph Watch, model OUW-S-G2858GS-BL. Please read this manual thoroughly to ensure proper use and longevity of your timepiece.



Image 1: OLEVS Men's Chronograph Watch (Model OUW-S-G2858GS-BL)

2. WATCH COMPONENTS

Your OLEVS Chronograph Watch features several key components for timekeeping and additional functions:

- **Crown (Stem):** Used for setting the time and date.
- **Pushers (A & B):** Control the chronograph functions.
- **Main Dial:** Displays hours, minutes, and seconds.
- **Sub-dials:** Include a 24-hour indicator, chronograph minutes, and chronograph seconds.
- **Date Window:** Displays the current date.

- **Stainless Steel Strap:** Durable and adjustable for comfort.



Image 2: Watch Components and Controls

3. SETUP INSTRUCTIONS

3.1. Setting the Time

1. Pull the crown (Stem) out to the second click position.
2. Turn the crown to set the hour and minute hands to the desired time.
3. Push the crown back into the normal position to start the watch.

3.2. Setting the Date

1. Pull the crown (Stem) out to the first click position.
2. Turn the crown clockwise to set the date.
3. Push the crown back into the normal position.

Important Note:

- Avoid changing the date setting while the current time is between 9:00 p.m. and 3:00 a.m. to prevent damage to the date mechanism.

3.3. Band Adjustment

The stainless steel strap may require adjustment to fit your wrist comfortably. A sizing tool may be included with your watch. If you are unsure or uncomfortable performing this adjustment yourself, it is recommended to seek assistance from a professional jeweler to avoid damaging the strap or the watch.

4. OPERATING THE CHRONOGRAPH

Your OLEVS watch features a functional chronograph for measuring elapsed time. The sub-dials indicate 24-hour time, chronograph seconds, and chronograph minutes.



Image 3: Chronograph Sub-dials (24 Hours, Seconds, Minutes)

4.1. To Measure Elapsed Time:

1. Press Pusher **A** to start the stopwatch.
2. Press Pusher **A** again to stop the stopwatch.
3. Press Pusher **B** to reset the stopwatch to zero.

5. CARE AND MAINTENANCE

5.1. Water Resistance

This watch is water resistant to 100 feet (30 meters). This rating makes it suitable for daily use and resistant to splashes or brief immersion in water. However, it is **not** suitable for bathing, swimming, diving, or any other water-related activities that involve prolonged submersion or high water pressure.



24 Hours



Seconds



Minutes



Date



To measure elapsed time

1. Press A to start the stopwatch.
2. Press A to stop the stopwatch.
3. Press B to reset the stopwatch.

To set the time

1. Pull the stem out to the second click.
2. Turn the stem to set the time.
3. Push the crown back in to the normal position.

To set the date

1. Pull the stem out to the first click.
 2. Turn the stem clockwise to set the date.
 3. Push the crown back in to the normal position.
- Avoid changing the date setting while the current time is between 9:00 p.m. and 3:00 a.m.

Image 4: Key Features including 30M Water Resistance

5.2. Cleaning

To maintain the appearance of your watch, wipe the case and strap regularly with a soft, dry cloth. For the stainless steel strap, a slightly damp cloth can be used, followed by immediate drying. Avoid using harsh chemicals or abrasive materials.

5.3. Battery Replacement

The watch uses one LR44 battery. When the watch stops or the hands move erratically, it indicates a low battery. Battery replacement should ideally be performed by a qualified watch technician to ensure proper sealing and water resistance.

6. TROUBLESHOOTING

If you encounter any issues with your watch, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Watch stops or runs intermittently	Low battery, crown not fully pushed in.	Check if crown is fully pushed in. Replace battery if necessary (professional service recommended).
Date does not change at midnight	Time set incorrectly (e.g., AM/PM confusion), date mechanism interference.	Adjust time past 12 AM/PM to ensure correct cycle. Avoid setting date between 9 PM and 3 AM.
Chronograph does not start/stop/reset	Pusher malfunction, internal mechanism issue.	Ensure pushers are not jammed. If issue persists, contact customer support.
Water inside the watch face	Exposure to water beyond specified resistance, damaged seal.	Immediately seek professional service to prevent further damage. Avoid further water exposure.

For issues not listed above or if solutions do not resolve the problem, please refer to the [Warranty & Support](#) section for contact information.

7. SPECIFICATIONS

Feature	Detail
Brand	OLEVS
Model Number	OUW-S-G2858GS-BL
Movement	Analog Quartz
Case Material	Stainless Steel
Strap Material	Stainless Steel
Water Resistance	30 Meters (100 Feet)
Battery Type	1 LR44 (included)
Product Dimensions	7.87 x 1.61 x 0.43 inches
Item Weight	1.76 ounces

8. WARRANTY AND SUPPORT

8.1. Warranty Information

Your OLEVS Chronograph Watch comes with a 12-month warranty from the date of purchase, covering manufacturing defects. Additionally, a 30-day free return policy is available. Please retain your proof of purchase for warranty claims.

8.2. Customer Support

If you have any questions, require assistance, or need to make a warranty claim, please contact the seller directly. For further information, you may also refer to the official [User Manual \(PDF\)](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question