

UBeesize UB-TR670BK01

UBeesize 170cm Tripod for Camera and Smartphone

Model: UB-TR670BK01

INTRODUCTION

Thank you for purchasing the UBeesize 170cm Tripod. This versatile tripod is designed to provide stable support for various devices, including cameras, smartphones, tablets, and video cameras. Its lightweight aluminum construction, 3-way pan head, and adjustable height make it suitable for a wide range of photography and videography needs, from family trips to live streaming. Please read this manual carefully to ensure proper setup and operation.



Image: The UBEEsize 170cm Tripod shown fully extended with a camera attached, illustrating its primary use.

PACKAGE CONTENTS

Please verify that all items listed below are included in your package:

- UBEEsize Camera Tripod x 1
- Smartphone Clip x 1
- Wireless Remote Control x 1
- Carrying Bag x 1
- Instruction Manual x 1



携帯性、堅牢性、簡易設定の最適な組み合わせ
onlineストリーミングに最適シリーズ

Image: Visual representation of the tripod and its accompanying accessories, including the smartphone clip, wireless remote, and carrying bag.

PRODUCT DIAGRAM AND PARTS IDENTIFICATION

Familiarize yourself with the different components of your UBeeSize tripod:



Image: An exploded view diagram highlighting key parts such as the pan handle head, quick release plate, spirit level, center column, leg locks, anti-slip feet, and the hook for added stability.

- **Pan Handle Head:** Allows for smooth horizontal and vertical adjustments.
- **Quick Release Plate:** For quick attachment and detachment of your device.
- **Spirit Level:** Helps ensure your setup is perfectly horizontal.

- **Center Column:** Extends for additional height adjustment.
- **Leg Locks:** Secure the tripod legs at desired lengths.
- **Anti-slip Feet:** Provide stability on various surfaces.
- **Accessory Hook:** Located at the bottom of the center column, can be used to hang a weight (e.g., backpack) for increased stability.

SETUP INSTRUCTIONS

1. Unfolding the Tripod

1. Place the tripod on a flat, stable surface.
2. Release the leg locks on each leg.
3. Extend the legs to the desired length and angle.
4. Securely fasten all leg locks to prevent accidental collapse.

2. Adjusting Height

The tripod offers 4-stage height adjustment, from a minimum of 51cm to a maximum of 170cm.

1. To adjust the leg height, open the leg locks, extend the leg sections, and then close the locks firmly.
2. To adjust the center column height, loosen the center column lock knob, raise or lower the column, and then tighten the knob securely.

48cmから170cmまで高さが調整可能



Image: A visual guide demonstrating the tripod's adjustable height settings, ranging from its folded state to its maximum extension of 170cm.

3. Attaching Devices (Camera, Smartphone)

1. **For Cameras:** Unscrew the quick release plate from the tripod head. Attach the quick release plate to the bottom of your camera by screwing it into the camera's tripod mount. Then, slide the quick release plate with the camera back onto the tripod head until it clicks into place. Ensure it is securely locked.
2. **For Smartphones:** Attach the smartphone clip to the quick release plate. Insert your smartphone into the clip, ensuring it is held firmly. Then, attach the quick release plate with the smartphone clip to the tripod head.
3. **Important:** Always ensure the device is securely mounted and all screws are tightened to prevent accidental drops and maintain the maximum load capacity of 5.5kg.

4. Using the Wireless Remote Control

The included wireless remote control is compatible with both iOS and Android smartphones, offering a maximum effective range of 10 meters.

1. Turn on the remote control using the ON/OFF switch.
2. Enable Bluetooth on your smartphone and search for available devices.
3. Select the remote control (usually named 'AB Shutter3' or similar) from the list to pair.
4. Once paired, open your smartphone's camera app. Use the corresponding button on the remote (iOS or

Android) to trigger the shutter.

アップグレードの携帯クリップ

幅5.84cmから11.43cmまでのスマホに対応可能



ワイヤレスリモコン

iosとAndroidスマホにより強くより便利な撮影体験を与える
最大有効距離は10メートル以内



耐久性あり三脚収納袋

もっとすばやく三脚を収納する



Image: Close-up view of the adjustable smartphone clip, the wireless Bluetooth remote control with iOS and Android buttons, and the compact carrying bag.

OPERATING INSTRUCTIONS

1. Adjusting Shooting Angles with the 3-Way Pan Head

The 3-way pan head allows for flexible positioning of your device:

- **Horizontal Panning:** Loosen the horizontal lock knob on the pan head to rotate the device 360 degrees horizontally for panoramic shots. Tighten to secure.
- **Vertical Tilting:** Loosen the vertical tilt handle to adjust the device's angle up or down. Tighten the handle to secure the position.
- **Portrait/Landscape Orientation:** The quick release plate mount can be tilted 90 degrees to switch between landscape and portrait orientations. Loosen the side knob, adjust, and tighten.



簡単に多角度撮影



風景モード



縦モード



仰ぎ撮影



俯瞰撮影

Image: Examples of various shooting modes achievable with the 3-way pan head, including landscape, portrait, upward-angle, and downward-angle shots, along with an indicator for 360-degree rotation.

2. Enhancing Stability

For maximum stability, especially with heavier devices or in windy conditions:

- Ensure all leg locks and head adjustment knobs are firmly tightened.
- Hang a weight (e.g., your camera bag or backpack) from the accessory hook located at the bottom of the center column.
- Use the spirit level on the tripod head to ensure your setup is perfectly balanced.

より安定的にスマホとカメラを支える



- 正味重量: **1.28kg**
- 最大荷重: **5.5kg**

Image: The tripod set up outdoors with a camera, showing a backpack attached to the center column hook to provide additional stability.

MAINTENANCE

To ensure the longevity and optimal performance of your tripod:

- Clean the tripod regularly with a soft, dry cloth. Avoid abrasive cleaners or solvents.
- If used in dusty or sandy environments, carefully clean the leg sections and locks to prevent grit from affecting their operation.
- Store the tripod in its carrying bag in a dry, cool place when not in use.
- Periodically check all screws and connections for tightness.

TROUBLESHOOTING

1. Tripod is unstable:

- Ensure all leg locks are fully tightened.
- Verify that the quick release plate and your device are securely attached to the tripod head.
- Extend the legs evenly and ensure they are spread wide enough.

- Consider hanging a weight from the accessory hook for added stability.

2. Device is slipping or tilting:

- Tighten the pan handle and tilt adjustment knobs firmly.
- Ensure your device's weight does not exceed the maximum load capacity of 5.5kg.

3. Wireless remote control not pairing:

- Ensure the remote control is turned on and within 10 meters of your smartphone.
- Check that Bluetooth is enabled on your smartphone.
- If previously paired, try unpairing and re-pairing the remote control in your smartphone's Bluetooth settings.
- Replace the remote control battery if necessary.



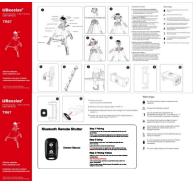



SPECIFICATIONS

Model Number	UB-TR670BK01
Material	Aluminum
Color	Black
Maximum Height	170 cm
Minimum Height	51 cm
Folded Length	51 cm
Item Weight	1.39 kg (body weight), 1.64 kg (package weight)
Maximum Load Capacity	5.5 kg
Tripod Head Type	3-Way Pan Handle Head
Compatible Devices	Cameras, Smartphones, Tablets, Video Cameras
Waterproof Rating	IP54
Special Features	Portable, 360° Rotation, Accessory Hook

WARRANTY AND SUPPORT

Your UBeesize 170cm Tripod comes with a **12-month warranty** from the date of purchase. If you encounter any issues or have questions regarding your product during this period, please do not hesitate to contact our customer support team. We are committed to providing reliable service and assistance.

For support, please refer to the contact information provided on the UBeesize official website or your purchase platform.

	<p>UBeeSize TR50 Professional Tripod Operating Instructions</p> <p>This document provides operating instructions for the UBeeSize TR50 Professional Tripod, detailing setup, adjustments, and features for cameras and smartphones.</p>
	<p>UBeeSize 67-inch Selfie Stick Tripod with Bluetooth Remote - Features and Setup Guide</p> <p>Discover the UBeeSize 67-inch Selfie Stick Tripod with Bluetooth Remote. This guide details its setup, features like adjustable height, phone holder compatibility, and tripod stability, making it ideal for photography and videography.</p>
	<p>UBeeSize TR67 Professional Video Tripod User Manual</p> <p>User manual for the UBeeSize TR67 Professional Video Tripod, including assembly instructions, features, and warnings.</p>
	<p>UBeeSize 62-inch Selfie Stick Tripod with Bluetooth Remote - User Guide</p> <p>Learn how to set up and use your UBeeSize 62-inch selfie stick tripod with Bluetooth remote for capturing photos and videos. Includes setup instructions, pairing guide, and feature descriptions.</p>
	<p>UBeeSize 12-Inch Ring Light with 62-Inch Tripod Stand User Manual</p> <p>This user manual provides instructions for the UBeeSize 12-inch LED ring light and 62-inch tripod stand, detailing setup, assembly, phone holder attachment, lighting modes, and package contents.</p>
	<p>UBeeSize 10-inch Ring Light with Tripod TR50 Operating Instructions</p> <p>Comprehensive operating instructions and user guide for the UBeeSize 10-inch Ring Light with Tripod TR50. Learn how to set up, use, and attach accessories for photography, vlogging, and live streaming.</p>