

Daewoo DSM-9780

DAEWOO 3-in-1 Sandwich Maker DSM-9780 Instruction Manual

Model: DSM-9780

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance and retain them for future reference. Improper use can result in personal injury and damage to the appliance.

- Always ensure the appliance is unplugged from the power outlet before cleaning, maintenance, or when not in use.
- Do not immerse the appliance, power cord, or plug in water or any other liquid.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not touch hot surfaces. Use the cool-touch handle and oven mitts or gloves when handling hot parts.
- Ensure the appliance is placed on a stable, heat-resistant surface, away from flammable materials.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The appliance does not feature an automatic shut-off. Always unplug after use.
- Use only accessories recommended by the manufacturer.

2. PRODUCT OVERVIEW

The DAEWOO DSM-9780 is a versatile 3-in-1 sandwich maker designed for preparing sandwiches, grilled items, and waffles. It features interchangeable non-stick plates for various cooking needs.



Figure 1: DAEWOO 3-in-1 Sandwich Maker with Sandwich, Waffle, and Grill Plates.

Key Components:

- **Main Unit:** Houses the heating elements and control panel.
- **Interchangeable Plates:** Three sets of non-stick plates for sandwiches, grilling, and waffles.
- **Cool-Touch Handle:** For safe opening and closing during operation.
- **Indicator Lights:** Power (red) and Ready (green) indicators.
- **Non-Slip Base:** Provides stability during use.



Incluye 3 juegos de placas intercambiables (Sandwich/Parrilla/Waffle).



Control de temperatura automático.



Luz indicadora de encendido.



Placas con revestimiento antiadherente para facilitar su limpieza.



Asa con cerradura fácil de abrir y fría al tacto.



127V ~ 60Hz, 750W.



Figure 2: Key features of the DAEWOO Sandwich Maker, including interchangeable plates and automatic temperature control.

3. SETUP AND FIRST USE

Unpacking:

1. Carefully remove the appliance and all accessories from the packaging.
2. Remove any packaging materials, stickers, or labels.
3. Wipe the exterior of the appliance with a damp cloth.

Initial Cleaning of Plates:

1. Before first use, clean the interchangeable plates with a damp cloth or sponge.
2. Dry thoroughly.
3. Lightly grease the non-stick plates with a small amount of cooking oil or butter for the first use to condition the surface.

Inserting Plates:

1. Ensure the appliance is unplugged and cool.
2. Open the lid.
3. Align the desired plates (sandwich, grill, or waffle) with the slots on the upper and lower heating elements.
4. Gently press down until the plates click securely into place.

4. OPERATING INSTRUCTIONS

General Operation:

1. Ensure the correct plates are installed and securely locked.
2. Close the lid and plug the appliance into a 220V power outlet. The red power indicator light will illuminate.
3. Allow the appliance to preheat. The green 'Ready' indicator light will turn on when the desired temperature is reached. This typically takes 3-5 minutes.
4. Once preheated, open the lid using the cool-touch handle.
5. Place your food onto the bottom plate. Do not overfill.
6. Close the lid. The green 'Ready' light may turn off during cooking as the appliance maintains temperature.
7. Cook for the recommended time (see specific plate instructions below) or until desired doneness.
8. Carefully remove food using a heat-resistant plastic or wooden utensil to avoid damaging the non-stick coating.
9. After use, unplug the appliance and allow it to cool completely before cleaning.

Using Sandwich Plates:

1. Install the sandwich plates.
2. Preheat the appliance until the green 'Ready' light illuminates.
3. Place two slices of bread with your desired filling onto the bottom plate. The deep plates are designed to seal the edges.
4. Close the lid and cook for approximately 3-5 minutes, or until the sandwich is golden brown and sealed.



Figure 3: Preparing sandwiches using the sandwich plates.

Using Grill Plates:

1. Install the grill plates.
2. Preheat the appliance until the green 'Ready' light illuminates.
3. Place items such as panini, vegetables, or small cuts of meat onto the bottom grill plate.
4. Close the lid and cook for the desired time, checking periodically for doneness.



Figure 4: The appliance with grill plates ready for use.

Using Waffle Plates:

1. Install the waffle plates.
2. Preheat the appliance until the green 'Ready' light illuminates.
3. Pour waffle batter evenly onto the bottom waffle plate, ensuring not to overfill.
4. Close the lid and cook for approximately 4-7 minutes, or until the waffles are golden brown and cooked through.

5. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the life of your appliance.

1. Always unplug the appliance and allow it to cool completely before cleaning.
2. Remove the interchangeable plates by pressing the release buttons (if applicable) and lifting them out.
3. Wash the non-stick plates in warm, soapy water using a soft sponge. Rinse thoroughly and dry

completely. Do not use abrasive cleaners or metal scouring pads, as these can damage the non-stick coating.

4. Wipe the exterior of the appliance with a damp cloth. Do not use harsh chemicals or abrasive materials.
5. Never immerse the main unit in water or any other liquid.
6. Store the appliance with the plates installed and the lid closed in a dry, safe place.

6. TROUBLESHOOTING

If you encounter any issues with your DAEWOO Sandwich Maker, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction; appliance fault.	Ensure the appliance is securely plugged into a working power outlet. Check the circuit breaker. If the problem persists, contact customer support.
Food sticks to the plates.	Plates not properly seasoned; insufficient oil/butter; damaged non-stick coating.	Lightly grease plates before each use. Ensure plates are clean. If coating is damaged, plates may need replacement.
Food is not cooking evenly.	Uneven food placement; insufficient preheating.	Ensure food is spread evenly. Allow the appliance to fully preheat until the green 'Ready' light illuminates.
Smoke or unusual odor during first use.	Residual manufacturing oils burning off.	This is normal for first use. Ensure good ventilation. If smoke persists after initial uses, unplug and contact customer support.

7. SPECIFICATIONS

Brand:	Daewoo
Model Number:	DSM-9780
Color:	Black
Dimensions (L x W x H):	23 x 23 x 8 cm
Power:	750 Watts
Voltage:	220 Volts
Material:	Stainless steel, Cast iron
Automatic Shut-off:	No
Special Features:	Temperature control, Non-stick coating, Removable surface, Cool touch handle

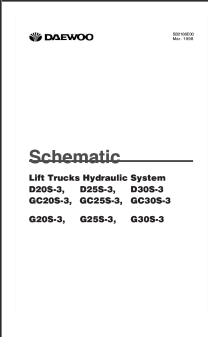 
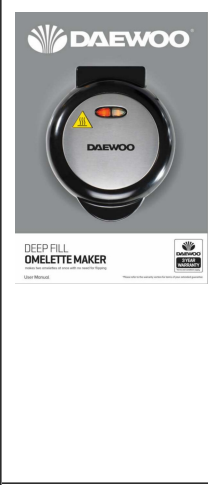 

8. WARRANTY AND SUPPORT

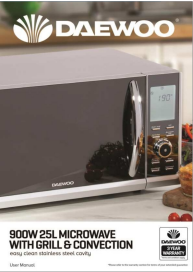 
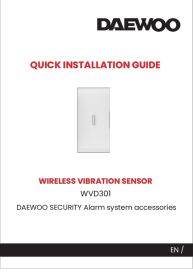 
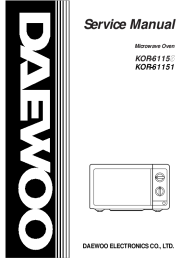 
This DAEWOO appliance comes with a standard manufacturer's warranty. For detailed warranty information, please refer to the warranty card included with your product or visit the official Daewoo website.

For technical support, troubleshooting assistance, or to inquire about replacement parts, please contact Daewoo customer service through the contact information provided in your product documentation.

© 2023 Daewoo. All rights reserved.

Related Documents - DSM-9780

	<p>Daewoo Lift Trucks Hydraulic System Schematic</p> <p>This document provides a schematic of the hydraulic system for Daewoo D, G, and GC series lift trucks, including models D20S-3, D25S-3, D30S-3, GC20S-3, GC25S-3, GC30S-3, G20S-3, G25S-3, and G30S-3.</p>
	<p>Daewoo Deep Fill Omelette Maker SDA1556 User Manual and Safety Guide</p> <p>Official user manual for the Daewoo Deep Fill Omelette Maker (Model SDA1556). Includes safety instructions, operating guide, care and maintenance, technical specifications, troubleshooting, and recipes.</p>
	<p>Daewoo 42L Electric Oven with Hot Plates SDA1610 - User Manual & Cooking Guide</p> <p>Comprehensive user manual for the Daewoo 42L Electric Oven with Hot Plates (Model SDA1610), including safety instructions, operating guides, technical specifications, troubleshooting, recipes, and warranty information.</p>

 <p>900W 25L MICROWAVE WITH GRILL & CONVECTION</p>	<p>Daewoo 900W 25L Microwave with Grill & Convection User Manual</p> <p>Comprehensive user manual for the Daewoo 900W 25L Microwave with Grill & Convection (Model No. SDA2093). Covers safety instructions, installation, operation, features, troubleshooting, cleaning, and warranty information.</p>
 <p>WIRELESS VIBRATION SENSOR WVD301</p>	<p>Daewoo WVD301 Wireless Vibration Sensor Quick Installation Guide</p> <p>This guide provides quick installation instructions for the Daewoo WVD301 Wireless Vibration Sensor. Learn about its product description, technical specifications, installation steps, LED indicators, maintenance, and compliance standards.</p>
 <p>Service Manual</p> <p>KOR-6115 / KOR-61151</p>	<p>DAEWOO KOR-6115 & KOR-61151 Microwave Oven Service Manual</p> <p>Detailed service manual for DAEWOO KOR-6115 and KOR-61151 microwave ovens, covering specifications, installation, operation, troubleshooting, and parts lists for qualified service personnel.</p>