

[Manuals.plus](#) /

› [IKRA](#) /

› IKRA Electric Telescopic Pole Saw IEAS 750 Instruction Manual

IKRA IEAS 750

IKRA Electric Telescopic Pole Saw IEAS 750 Instruction Manual

Model: IEAS 750 | Brand: IKRA

INTRODUCTION

This manual provides essential information for the safe and efficient operation, maintenance, and care of your IKRA Electric Telescopic Pole Saw IEAS 750. Please read these instructions carefully before using the product and keep them for future reference.

SAFETY INFORMATION

Always prioritize safety when operating power tools. Failure to follow safety instructions can result in serious injury or property damage.

- **Read the entire manual:** Understand all warnings and operating instructions before use.
- **Wear appropriate personal protective equipment (PPE):** This includes safety glasses, hearing protection, gloves, sturdy footwear, and a helmet with a face shield.
- **Inspect the tool before each use:** Check for damaged parts, loose connections, or any other condition that may affect safe operation.
- **Keep bystanders away:** Ensure children, pets, and other people are at a safe distance from the work area.
- **Maintain a firm grip:** Always hold the pole saw with both hands.
- **Avoid overhead power lines:** Never operate the pole saw near electrical wires.
- **Work in a clear area:** Ensure there are no obstacles that could cause you to trip or lose balance.
- **Do not overreach:** Maintain proper footing and balance at all times.
- **Disconnect power:** Always unplug the pole saw before performing any adjustments, maintenance, or when not in use.

PACKAGE CONTENTS

Verify that all items are present and undamaged upon unpacking:

- 1x IKRA Electric Telescopic Pole Saw IEAS 750
- 1x OREGON Saw Chain
- 1x Shoulder Strap
- 1x Bar Cover
- 1x Chain File
- 1x Protective Shield
- 1x Instruction Manual



Figure 1: The IKRA Electric Telescopic Pole Saw IEAS 750 along with its accessories, including the shoulder strap, protective shield, and chain file.

1. Assembly of the Pole Saw

1. **Connect the pole sections:** Align the sections of the telescopic pole and securely fasten them. Ensure the connections are tight to prevent wobbling during operation.
2. **Attach the saw head:** Connect the saw head to the end of the telescopic pole.
3. **Install the OREGON Saw Chain:**

- Ensure the power is disconnected.
- Remove the bar cover.
- Place the OREGON chain around the guide bar and sprocket.
- The tool-free chain assembly and tensioning system allows for easy installation. Follow the specific instructions in the detailed manual for your model to ensure correct chain direction and tension.

4. Fill with Chain Oil:

- Locate the oil reservoir cap on the saw head.
- Unscrew the cap and fill the reservoir with appropriate chain lubricant.
- The automatic chain lubrication system with an oil level indicator helps maintain optimal chain performance.
- Replace the cap securely.



Figure 2: Detail of the tool-free chain tensioning mechanism, simplifying chain installation and adjustment.



Figure 3: Overview of key features: automatic chain lubrication with oil level indicator, included shoulder strap, safety switch with start lock, cable strain relief, and comfortable softgrip handle.

OPERATING INSTRUCTIONS

1. Adjusting the Telescopic Pole

The fiberglass and aluminum telescopic handle can be adjusted from 1.85 m to 2.68 m, allowing for a working height of approximately 4 meters. Loosen the locking mechanism, extend or retract the pole to the desired length, and then securely tighten the lock.

2. Starting the Pole Saw

1. Ensure the pole saw is properly assembled and connected to a power source.
2. Attach the shoulder strap for comfortable and back-friendly operation.
3. Engage the safety switch with the start lock before pressing the trigger.
4. Allow the chain to reach full speed before making contact with the branch.

3. Cutting Techniques

- Always make cuts from the underside first to prevent pinching the saw blade.
- Support the branch if possible to avoid uncontrolled falling.
- Do not force the saw; let the chain do the work.
- Be aware of falling branches and maintain a safe distance.



Figure 4: Demonstrating the IKRA pole saw in action, reaching high branches for trimming.



Figure 5: Close-up of the saw head effectively cutting through a branch.

MAINTENANCE

1. Chain Sharpening

Regularly sharpen the saw chain using the included chain file to maintain cutting efficiency and safety. Refer to the detailed manual for the correct sharpening angle and technique.

2. Cleaning

- Always disconnect the power before cleaning.
- Remove sawdust and debris from the saw head, chain, and bar.
- Wipe down the exterior with a damp cloth. Do not use harsh chemicals.

3. Storage

Store the pole saw in a dry, secure location, out of reach of children. Ensure the bar cover is in place to protect the chain.



Figure 6: The OREGON saw chain and bar, designed for efficient cutting and reduced vibration.

TROUBLESHOOTING

If you encounter issues with your IKRA Electric Telescopic Pole Saw IEAS 750, consult the following table for common problems and solutions. For more complex issues, contact customer support.

Problem	Possible Cause	Solution
Saw does not start	No power supply, safety switch not engaged, damaged cable.	Check power connection, ensure safety switch is pressed, inspect cable for damage.
Chain not cutting efficiently	Dull chain, incorrect chain tension, insufficient chain oil.	Sharpen chain, adjust chain tension, refill oil reservoir.

Problem	Possible Cause	Solution
Excessive vibration	Loose chain, damaged chain or bar.	Check and adjust chain tension, inspect chain and bar for damage and replace if necessary.

SPECIFICATIONS

Feature	Detail
Brand	IKRA
Model	IEAS 750
Color	Grey / Red
Blade Material	Chrome Vanadium Steel
Power Source	Corded Electric
Special Feature	Lightweight
Included Components	1x Pole Saw, 1x OREGON Saw Chain, 1x Shoulder Strap, 1x Bar Cover, 1x File, 1x Protective Shield, 1x Instruction Manual
Product Dimensions (L x W x H)	11L x 8W x 266H centimeters
Voltage	230 Volts
Item Weight	3.9 Kilograms
Number of Teeth	63
Wattage	750 watts
Blade Shape	Round
Handle Material	Fiberglass and Aluminum
Country of Origin	China



Figure 7: Technical specifications at a glance, including power, chain speed, cutting length, oil capacity, telescopic range, and weight.

WARRANTY AND SUPPORT

This product comes with a **2-year manufacturer's warranty**. For warranty claims, technical support, or spare parts, please contact IKRA customer service. Keep your proof of purchase for warranty validation. For further assistance, please visit the official IKRA website or contact their customer support channels.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question