

JISOWA Onkyo HT-R393, RC-879M, HT-S370, RC-880M, TX-NR535, HT-R693, HT-R993, HT-S9700THX, HT-RC660, HT-S7700, TX-NR636

JISOWA Replacement Remote Control for Onkyo AV Receivers: User Manual

Model Compatibility: Onkyo HT-R393, RC-879M, HT-S370, RC-880M, TX-NR535, HT-R693, HT-R993, HT-S9700THX, HT-RC660, HT-S7700, TX-NR636, and other compatible models.

1. INTRODUCTION

This manual provides instructions for the JISOWA replacement remote control, designed for use with various Onkyo AV receivers and home theater systems. This remote control offers a direct replacement solution without requiring complex programming.

2. SETUP AND BATTERY INSTALLATION

The JISOWA replacement remote control is pre-programmed and does not require any additional setup, programming, or pairing with your Onkyo AV receiver. Simply install the batteries to begin operation.

2.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert two (2) 1.5V AAA batteries, ensuring correct polarity (+ and -) as indicated inside the compartment.
4. Replace the battery compartment cover by sliding it upwards until it clicks into place.

Note: Batteries are not included with the remote control.

Replacement Remote Control for Onkyo AV Receivers

No Setup Required

No Programming or Pairing Required.



Long-distance Control

Transmission Singal Range is father than 40 ft.

Figure 1: Front and back view of the remote control, illustrating its dimensions (7.68 inches length, 2.13 inches width) and the battery compartment location. No setup or programming is required for operation.

3. OPERATING INSTRUCTIONS

This remote control is designed to function identically to your original Onkyo AV receiver remote. Point the remote control directly at your AV receiver and press the desired function button.

3.1 Key Functions

The remote features standard buttons for controlling your AV receiver, including:

- **Power (RECEIVER, SOURCE):** To turn the receiver and source components on/off.
- **Input Selectors (BD/DVD, CBL/SAT, GAME, PC, AUX, TV/CD, AM/FM, NET, USB, BLUETOOTH):** To switch between different audio/video input sources.

- **Volume Control (VOL +, VOL -):** To adjust the audio output level.
- **Muting (MUTING):** To temporarily silence the audio.
- **Navigation (TOP MENU, GUIDE, PLAYLIST, ENTER, SETUP, AUDIO, RETURN, HOME):** For menu navigation and selection.
- **Playback Controls (Play, Pause, Stop, Fast Forward, Rewind, Skip):** For media playback.
- **Numeric Keypad (0-9, +10, D.TUN, CLR, DISPLAY):** For direct channel/track selection and other functions.
- **Sound Modes (SEARCH, REPEAT, RANDOM, MODE, MOVIE/TV, MUSIC, GAME, STEREO):** To select various audio processing modes.

Note: Some specific button functions, such as "CUSTOM," may not operate correctly if your original receiver remote did not feature that specific button.



Figure 2: Detailed view of the remote control's front panel, showing all available buttons and their labels for various functions.

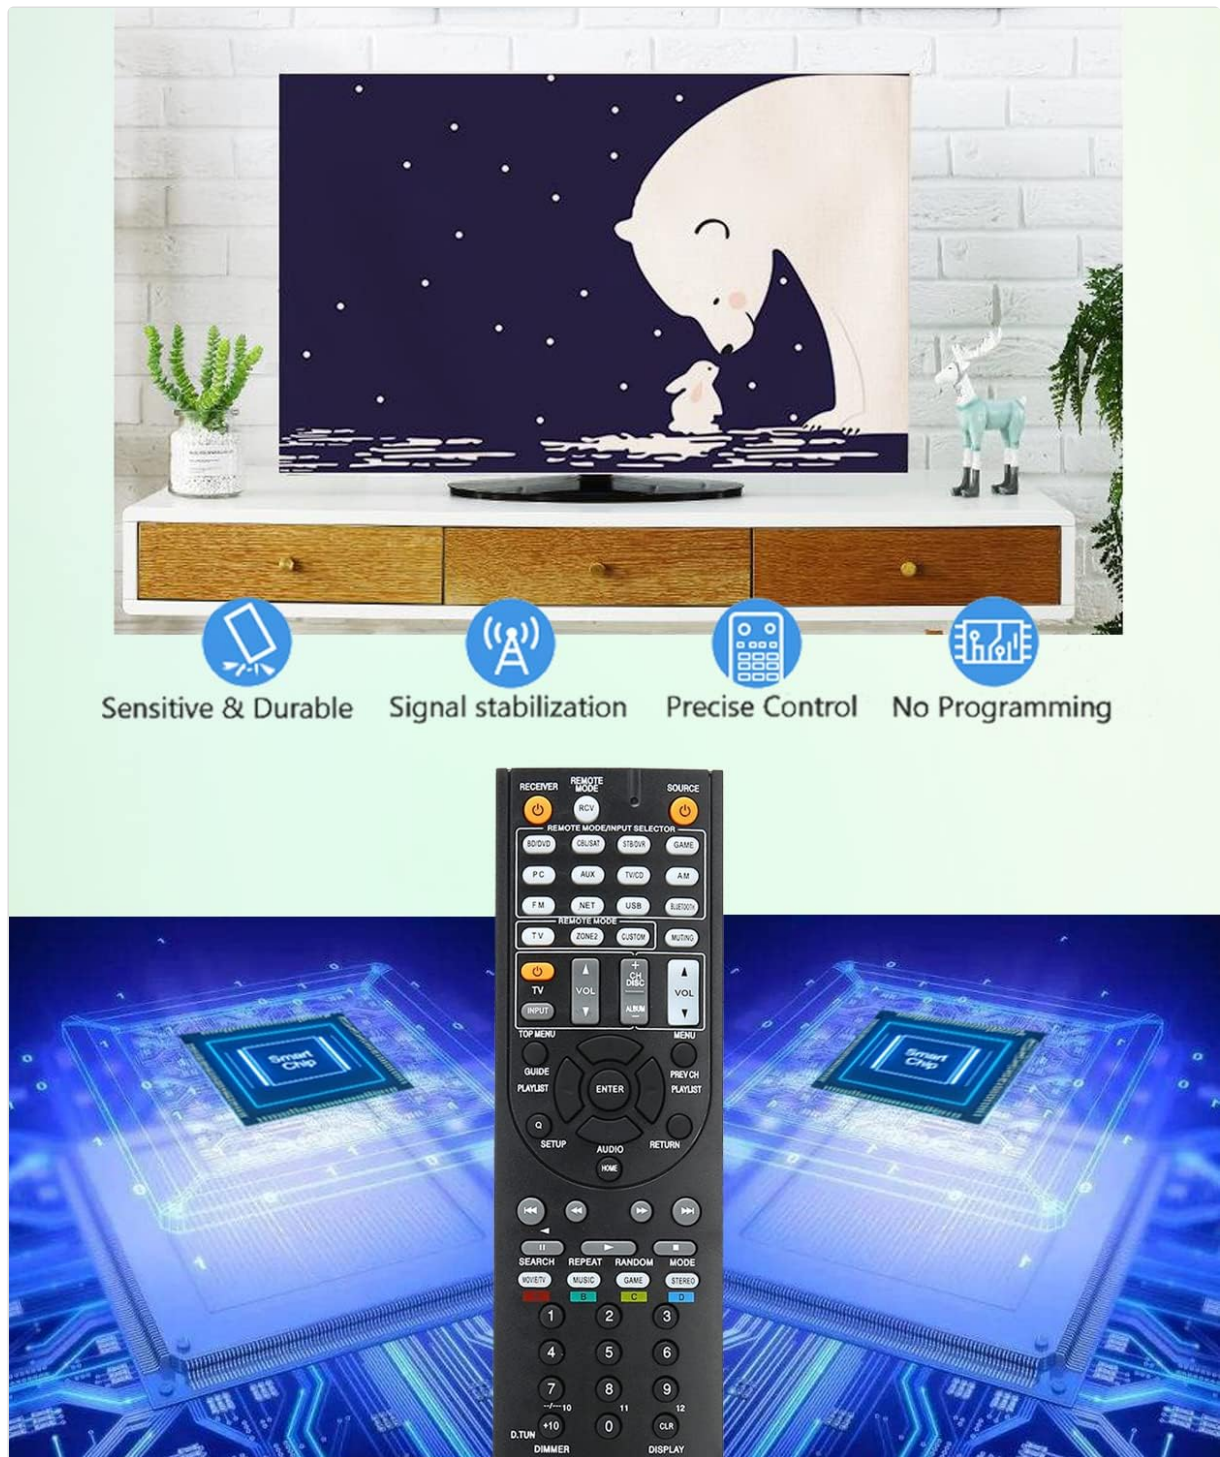


Figure 3: The remote control features an upgraded smart chip for sensitive and durable performance, ensuring stable signal transmission and precise control without the need for programming.

4. MAINTENANCE

Proper care will extend the life of your remote control.

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries promptly when the remote's responsiveness decreases. Remove batteries if the remote will not be used for an extended period to prevent leakage.
- **Storage:** Store the remote in a cool, dry place, away from direct sunlight and extreme temperatures.

- **Handling:** Avoid dropping the remote control or exposing it to moisture.

5. TROUBLESHOOTING

If you experience issues with your remote control, refer to the following common solutions:

- **Remote Not Responding:**
 - Ensure batteries are inserted correctly with the correct polarity.
 - Replace old batteries with new 1.5V AAA batteries.
 - Check for any obstructions between the remote control and the AV receiver's infrared sensor.
 - Ensure you are within the effective operating range (typically over 40 feet).
- **Specific Buttons Not Working:**
 - Verify that your original Onkyo receiver remote had the specific button function. This replacement remote may not support functions not present on the original.

6. SPECIFICATIONS

Product Dimensions	7.68 x 2.13 x 1.22 inches
Item Weight	2.4 ounces
Batteries Required	2 AAA batteries (not included)
Connectivity Technology	Infrared
Compatible Devices	Onkyo AV Receivers (e.g., HT-R393, TX-NR535, HT-S9700THX)
Max Number of Supported Devices	1 (specific Onkyo AV Receiver)

7. WARRANTY AND SUPPORT

For any defective remote control, please contact JISOWA customer service. We will provide a suitable solution within one business day.

Contact information for support is typically available through your purchase platform or the manufacturer's official website.