

- [Manuals.plus](#) /
- › [Nordic Ware](#) /
 - › Nordic Ware Naturals Quarter Sheet with Oven-Safe Nonstick Grid - Model 45383 Instruction Manual

Nordic Ware 45383

Nordic Ware Naturals® Quarter Sheet with Oven-Safe Nonstick Grid

Model: 45383

INTRODUCTION

This instruction manual provides essential information for the proper use, care, and maintenance of your Nordic Ware Naturals® Quarter Sheet with Oven-Safe Nonstick Grid, Model 45383. Please read these instructions thoroughly before first use to ensure optimal performance and longevity of your bakeware.

The Nordic Ware Naturals® Quarter Sheet is designed for baking, roasting, and cooling, offering a durable aluminum sheet paired with an oven-safe nonstick grid for elevated cooking and even air circulation.

PRODUCT OVERVIEW



This image displays the Nordic Ware Naturals Quarter Sheet and its accompanying oven-safe nonstick grid, highlighting the two-piece set.

The Nordic Ware Naturals® Quarter Sheet set includes two primary components:

- **Aluminum Baking Sheet:** Constructed from natural aluminum, this sheet provides excellent heat conductivity for even baking and roasting.
- **Oven-Safe Nonstick Grid:** Designed to fit perfectly within the baking sheet, this grid elevates food for better air circulation, resulting in crispier results and allowing fats to drip away. Its nonstick coating facilitates easy food release.

SETUP AND FIRST USE

1. **Unpack:** Carefully remove all packaging materials and labels from both the baking sheet and the nonstick grid.
2. **Initial Cleaning:** Before first use, wash both the aluminum sheet and the nonstick grid thoroughly with warm, soapy water. Rinse completely and dry immediately with a soft cloth to prevent water spots.
3. **Seasoning (Optional for Grid):** While the grid is nonstick, a light coating of cooking spray or oil can further

enhance its nonstick properties and protect the surface. This is generally not required for the aluminum sheet itself.



The image shows the Nordic Ware Quarter Sheet and its nonstick grid, illustrating the product's design and readiness for baking or cooling.

OPERATING INSTRUCTIONS

The Nordic Ware Naturals® Quarter Sheet with Oven-Safe Nonstick Grid is versatile for various culinary applications.

Baking and Roasting

- Place the nonstick grid inside the aluminum baking sheet.
- Arrange food items on top of the grid, ensuring even spacing for optimal air circulation.
- The grid elevates food, allowing heat to circulate around all sides for even cooking and crisping, and lets excess fats and liquids drain into the sheet below.
- The bakeware is oven-safe. Always use oven mitts when handling hot bakeware.



Seasoned chicken thighs with lemon slices are shown on the nonstick grid, demonstrating its use for roasting meats.




A hand brushes sauce onto chicken wings resting on the nonstick grid, highlighting its use for glazing or marinating during cooking.



Cooked chicken wings are presented alongside bok choy and rice, with the baking sheet and grid visible, indicating its use for roasting.

Cooling

- The nonstick grid can be used independently or within the sheet for cooling baked goods such as cookies, cakes, and breads.
- The elevated design allows air to circulate underneath, preventing condensation and ensuring even cooling.

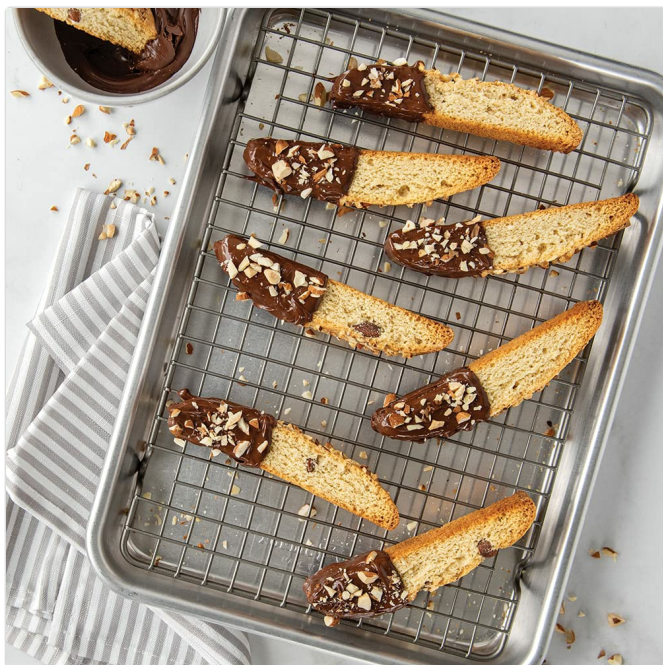

Chocolate-dipped biscotti are shown cooling on the nonstick grid, demonstrating its use for cooling baked goods.



A cake is being glazed while resting on the nonstick grid, illustrating its utility for finishing baked items.

CARE AND MAINTENANCE

Proper care ensures the longevity and performance of your Nordic Ware bakeware.

- **Hand Wash Only:** This product is **not dishwasher safe**. Washing in a dishwasher may cause discoloration and damage to the aluminum and the nonstick coating.
- **Cleaning:** Wash both the sheet and grid with warm, soapy water using a soft sponge or cloth. Avoid abrasive cleaners, scouring pads, or metal utensils, as these can scratch the surface and damage the nonstick coating.
- **Drying:** Dry immediately after washing to prevent water spots and maintain the appearance of the aluminum.
- **Storage:** Store in a dry place. Ensure the bakeware is completely dry before stacking to prevent moisture buildup.

TROUBLESHOOTING

Issue	Possible Cause	Solution
Bakeware Warping in Oven	Rapid temperature changes or very high oven temperatures can cause aluminum bakeware to temporarily warp.	This is a common characteristic of aluminum and usually resolves as the bakeware cools. It does not affect performance. Avoid extreme temperature shocks.
Food Sticking to Grid	Insufficient seasoning or residue buildup on the nonstick coating.	Ensure the grid is clean before use. Apply a light coating of cooking spray or oil, especially for sticky foods. Avoid using metal utensils that can scratch the nonstick surface.
Discoloration of Aluminum Sheet	Exposure to certain foods (e.g., acidic foods), hard water, or dishwasher use.	This is cosmetic and does not affect performance. To minimize, hand wash immediately after use and dry thoroughly. Avoid dishwasher use.

SPECIFICATIONS



A technical diagram illustrating the precise dimensions of the Nordic Ware Quarter Sheet and its grid, including length, width, and height measurements.

Model Number	45383
Material	Aluminum (Sheet), Nonstick Coated Steel (Grid)
Color	Silver
Product Dimensions (Sheet)	Approximately 32.8L x 24.4W x 2.8H Centimeters (12.9L x 9.6W x 1.1H Inches)
Item Weight	Approximately 28.3 grams (1 Ounce)
Dishwasher Safe	No
Material Type Free	Chemical Free, PTFE Free
GTIN/UPC	011172453839

WARRANTY AND SUPPORT

Nordic Ware products are manufactured to high-quality standards. For specific warranty information or support inquiries, please refer to the official Nordic Ware website or contact their customer service directly.

For general inquiries or assistance, you may also contact the importer/packer:

Shop The World
B112 Virwani Industrial estate
Western Express Highway
Goregaon east, Mumbai 400063
Email: care@shoptheworld.in
Website: www.shoptheworld.in
WhatsApp: +919820168421

© 2026 Nordic Ware. All rights reserved.

This manual is for informational purposes only. Product specifications are subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B09W9YZCCG>

More documents and user manuals: <https://manuals.plus/>