

[Manuals.plus](#) /

› [ASHATA](#) /

› ASHATA Media Player Instruction Manual

ASHATA ac23b079-76e8-45a2-a014-d2ba0f778e12

ASHATA Mini 1080P Full Digital Media Player

Instruction Manual

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your ASHATA Mini 1080P Full Digital Media Player. Please read this manual thoroughly before using the device to ensure proper functionality and to maximize your viewing experience. This media player is designed to support a wide range of video and audio formats, allowing you to play content from USB drives, mobile hard drives, and SD cards directly on your television.

PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- ASHATA Mini HD Media Box
- Remote Control
- Power Adapter
- AV Cable



Image: Contents of the ASHATA Mini HD Media Box package, including the media player unit, remote control, power adapter, and AV cable.

PRODUCT OVERVIEW

The ASHATA Mini HD Media Box is a compact device designed for playing various media files. Familiarize yourself with its components and ports.

Front and Side Views

HD Media Box

1080P HD USB

MMC Multi Media Player can connect and play all kinds of media videos.



Image: Front view of the ASHATA Mini HD Media Box, highlighting its compact design and 1080P capability.

Mini High-Definition Media Player

Video formats are supported: MKV, AVI, TS/TP, M2TS, RM/RMVB, MOV, VOB, FLV, WMV



Image: Angled view of the ASHATA Mini HD Media Box, emphasizing its mini size and high-definition media playback capabilities.

Input/Output Ports

The media player features various ports for connectivity:

- **USB Port:** For connecting USB drives and mobile hard drives.
- **SD/MMC Card Slot:** For inserting SD or MMC memory cards.
- **HDMI Port:** For high-definition video and audio output to a TV or monitor.
- **AV Port:** For standard definition video and audio output.
- **Y/IR Port:** For connecting the external IR receiver for the remote control.
- **DC 5V Port:** For power input.
- **LED Indicator:** Shows device status.



Image: Detailed diagram of the ASHATA Mini HD Media Box's input and output ports, including AV, Y/IR, HDMI, DC 5V, USB, LED/IR, and SD/MMC.



Image: Top-down view of the ASHATA Mini HD Media Box, illustrating the USB port, LED indicator, IR receiver, and SD/MMC card slot.



Rich video output interface

Full digital HDMI1.3 interface,
component video terminal YUV, AV

Image: Rear view of the ASHATA Mini HD Media Box, highlighting its rich video output interfaces including HDMI 1.3, YUV, and AV ports.

SETUP

Follow these steps to set up your ASHATA Mini HD Media Box:

1. Connect to TV:

- For High Definition (HD) output, connect an HDMI cable (not included) from the HDMI port on the media player to an HDMI input on your TV.
- For Standard Definition (SD) output, connect the provided AV cable from the AV port on the media player to the corresponding AV input ports (yellow for video, white for left audio, red for right audio) on your TV.

2. **Connect Power:** Plug the power adapter into the DC 5V port on the media player, then plug the adapter into a wall outlet. The LED indicator on the media player should light up.

3. **Insert Media:** Insert your USB drive, mobile hard drive, or SD/MMC card into the appropriate port on the media player.

4. **Select Input:** Turn on your TV and select the correct input source (HDMI or AV) that corresponds to the port you connected the media player to. The media player will automatically adjust its output mode based on the connected

cable (AV or HDMI).



Image: The ASHATA Mini HD Media Box connected to a television, demonstrating 1080P video and image output.



*HDMI/PrPby/AV output allows you to
play videos and images on the TV from SD/MMC
cards and USB devices to achieve a home theater effect.*

Image: The media player connected to a TV, illustrating how HDMI/PrPby/AV output allows playback of videos and images from SD/MMC cards and USB devices for a home theater experience.

AUTO RECOGNITION OUTPUT

when you connect the AV line, the machine will automatically adjust to AV output mode, and when you connect the HDMI line, the machine will automatically adjust to HDMI output mode.



Image: The media player demonstrating its auto-recognition output feature, automatically adjusting to AV or HDMI output mode when the respective cable is connected.

OPERATING INSTRUCTIONS

Once the media player is set up and connected to your TV, you can begin playing media.

Using the Remote Control

The included remote control allows you to navigate menus and control playback. Ensure the remote is pointed towards the media player's IR receiver for optimal performance. The effective range is up to 5 meters, with maximum support for 12 meters without interference.



Super remote reception

Effective range up to 5 m, maximum
support 12M without interference

Image: A family watching television, with the ASHATA Mini HD Media Box in the foreground, demonstrating the super remote reception capability of the device.



Image: A family enjoying media content on a TV, with the ASHATA Mini HD Media Box positioned for optimal remote reception, highlighting its ease of use in a home environment.

Media Playback

The media player supports a wide range of formats and resolutions up to 1080P.

- **Supported Video Formats:** RM/RMVB (Real8/9/10) up to 1080P, H.264 (MKV, MOV, AVI, M2TS, TP, TRP, IFO, ISO) up to 1080P, WMV9/VC-1 up to 1080P. Also supports TS/TP, RM/RMVB, MOV, VOB, FLV, WMV.
- **Supported Audio Formats:** MP3, etc.
- **Supported Image Formats:** JPEG, BMP, GIF, PNG, TIFF.

Navigate through the on-screen menu using the remote control to select the desired media type (Video, Music, Photo) and then browse your connected storage device to find and play your files.

MAINTENANCE

To ensure the longevity and optimal performance of your ASHATA Mini HD Media Box, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the device. Do not use liquid cleaners or aerosols, as they may damage the unit.
- **Ventilation:** Ensure the device is placed in a well-ventilated area to prevent overheating. Do not block any ventilation openings.
- **Storage:** When not in use for extended periods, disconnect the power adapter and store the device in a cool, dry place away from direct sunlight and extreme temperatures.
- **Handling:** Handle the device with care. Avoid dropping or subjecting it to strong impacts.

TROUBLESHOOTING

If you encounter issues with your media player, refer to the following common problems and solutions:

Problem	Possible Cause / Solution
No power / Device not turning on.	◦ Ensure the power adapter is securely connected to the device and a working power outlet. ◦ Check if the power outlet is functional.
No picture or sound on TV.	◦ Verify that the HDMI or AV cable is securely connected to both the media player and the TV. ◦ Ensure your TV is set to the correct input source (HDMI or AV) corresponding to the connection. ◦ Check TV volume settings.
Remote control not working.	◦ Ensure there are fresh batteries in the remote control. ◦ Point the remote directly at the media player's IR receiver. ◦ Remove any obstacles between the remote and the media player.
Cannot play media files.	◦ Ensure the USB drive or SD card is properly inserted. ◦ Verify that the media file format is supported by the player (refer to "Supported Video Formats" in Operating Instructions). ◦ Check if the storage device is formatted correctly (e.g., FAT32, NTFS).


SPECIFICATIONS

Detailed technical specifications for the ASHATA Mini 1080P Full Digital Media Player:

- **Model:** ac23b079-76e8-45a2-a014-d2ba0f778e12
- **Color:** Black
- **Dimensions:** 2.95 x 2.56 x 0.59 inches (7.5 x 6.5 x 1.5 cm)
- **Weight:** 8.4 ounces (approx. 238g)
- **Video Output Resolution:** Up to 1920x1080 Pixels (1080P)
- **Connectivity Technology:** USB, HDMI
- **Connector Type:** Micro USB (for power), HDMI, AV
- **Controller Type:** Remote Control
- **Compatible Devices:** Television
- **Supported Storage:** USB drive, Mobile hard drive (up to 2.5T/3.5 inch), SD Card, MMC Card
- **Supported Video Decoding:** RM/RMVB (Real8/9/10) to 1080P, H.264 (MKV, MOV, AVI, M2TS, TP, TRP, IFO, ISO) to 1080P, WMV9/VC-1 to 1080P.
- **Country of Origin:** China



Image: Dimensions of the ASHATA Mini HD Media Box, showing its compact size.

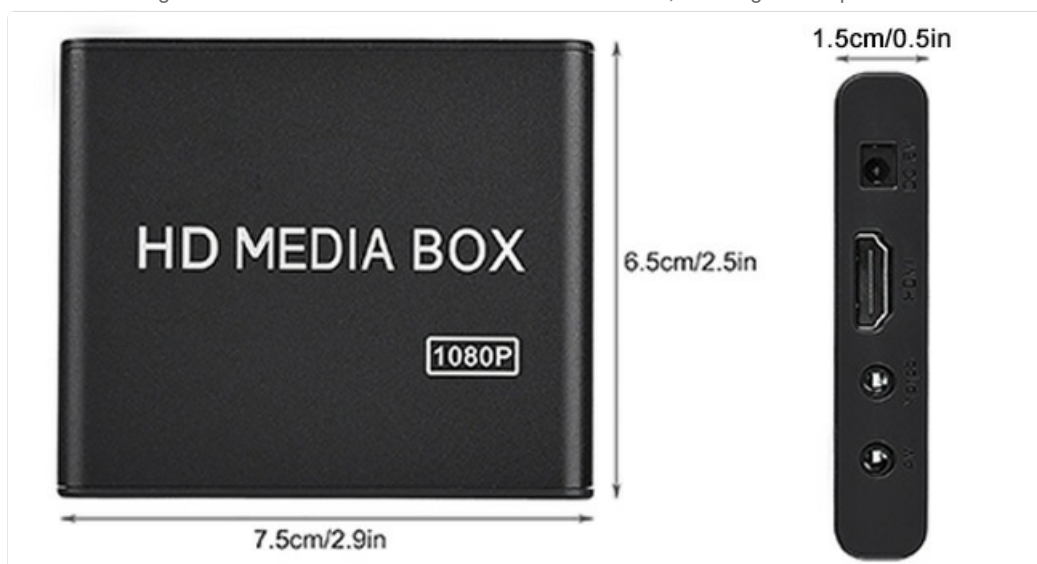

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official ASHATA website. Keep your purchase receipt as proof of purchase for warranty claims.

ASHATA Customer Service: For assistance, please contact your retailer or the manufacturer directly.

© 2024 ASHATA. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B09WBLK32K>

More documents and user manuals: <https://manuals.plus/>