

B09WBZMHJQ

Generic Multifunctional Foldable Clothes and Shoe Dryer Hanger

User Instruction Manual

1. INTRODUCTION

Thank you for purchasing the Generic Multifunctional Foldable Clothes and Shoe Dryer Hanger. This innovative device is designed to efficiently dry clothes and shoes while offering garment care functions such as moisture resistance, mold prevention, moth protection, sterilization, stain resistance, and deodorization. Its compact, foldable design makes it ideal for home use and travel. Please read this manual thoroughly before use to ensure safe and optimal operation.

2. SAFETY INSTRUCTIONS

To prevent injury or damage, please observe the following safety precautions:

- Read all instructions before using the appliance.
- Do not immerse the main unit in water or other liquids.
- Keep the appliance away from children and pets.
- Ensure the power outlet matches the voltage specified for the appliance.
- Do not operate the appliance with a damaged cord or plug.
- Unplug the appliance when not in use and before cleaning.
- Do not block the air inlets or outlets during operation.
- Use the appliance only for its intended purpose as described in this manual.
- Avoid drying delicate fabrics that require specific care instructions not suitable for heated drying.
- Do not touch the heating element directly during or immediately after operation.

3. PACKAGE CONTENTS

Please check the package for the following items:

- 1 x Electric Dryer Hanger Main Unit
- 2 x Extendable Shoe Drying Attachments
- 1 x Storage Bag
- 1 x Instruction Manual (this document)

4. PRODUCT OVERVIEW

Familiarize yourself with the components of your dryer hanger.



Figure 1: Front view of the dryer hanger, showing the main body, power button, and extendable arms.



Figure 2: Detailed view of the control panel with power button, the two extendable shoe drying attachments, and the included storage bag.



Figure 3: Internal airflow diagram, illustrating how air circulates through the unit to dry garments and shoes.

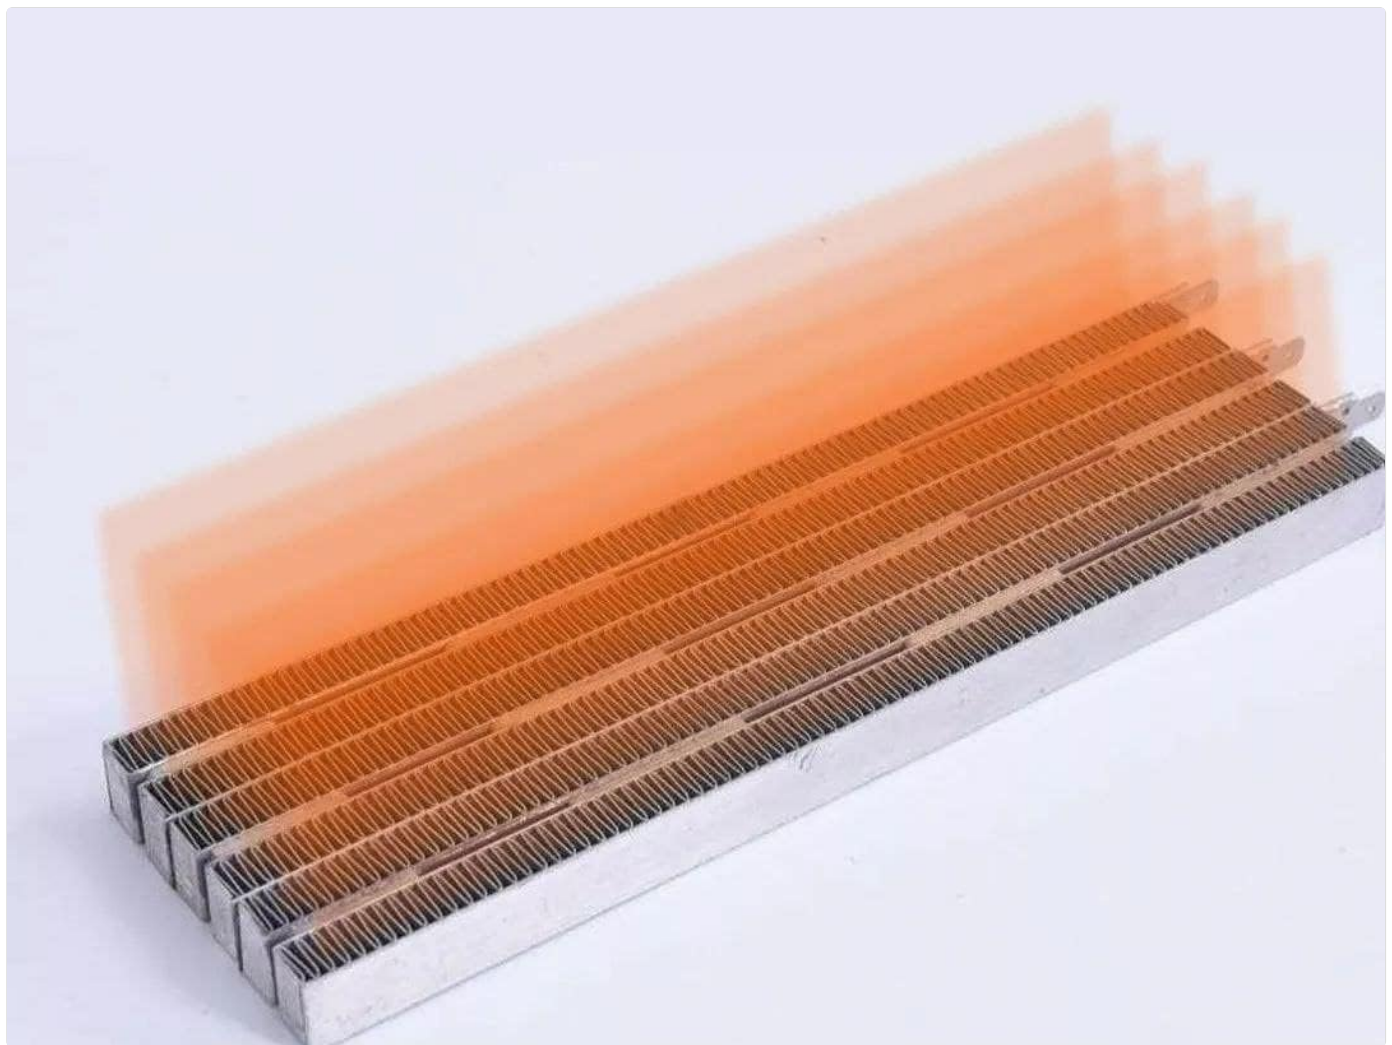


Figure 4: The efficient heating element responsible for generating warm air for drying.

5. SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Inspect:** Check the dryer hanger and accessories for any signs of damage. Do not use if damaged.
3. **Prepare for Use:**
 - For clothes drying: Unfold the hanger arms to their full extent.
 - For shoe drying: Attach the two extendable shoe drying tubes to the outlets on the hanger arms. Ensure they are securely fitted.
4. **Placement:** Hang the dryer hanger on a sturdy rod or hook in a well-ventilated area. Ensure there is enough space around the garment or shoes for proper air circulation.
5. **Power Connection:** Plug the power cord into a suitable electrical outlet.

6. OPERATING INSTRUCTIONS

Follow these steps to operate your dryer hanger:

1. **Load Garment/Shoes:**
 - For clothes: Hang the damp garment directly onto the dryer hanger arms. Ensure the garment is not dripping wet.
 - For shoes: Place one shoe over each extendable shoe drying attachment. Adjust the length of the attachments to fit the shoes properly.

2. **Power On:** Press the power button located on the main unit. The indicator light will illuminate.
3. **Indicator Lights:**
 - A **red light** indicates the unit is actively heating and drying.
 - A **blue light** indicates the unit is in standby mode or has completed a cycle and is cooling down.
4. **Drying Process:** The dryer will automatically circulate warm air. The built-in temperature control system prevents overheating and protects your garments from shrinkage or damage.
5. **Drying Time:** Drying times vary depending on the fabric type, thickness, and humidity. Monitor the drying progress.
6. **Power Off:** Once drying is complete, press the power button again to turn off the unit. Unplug from the power outlet.

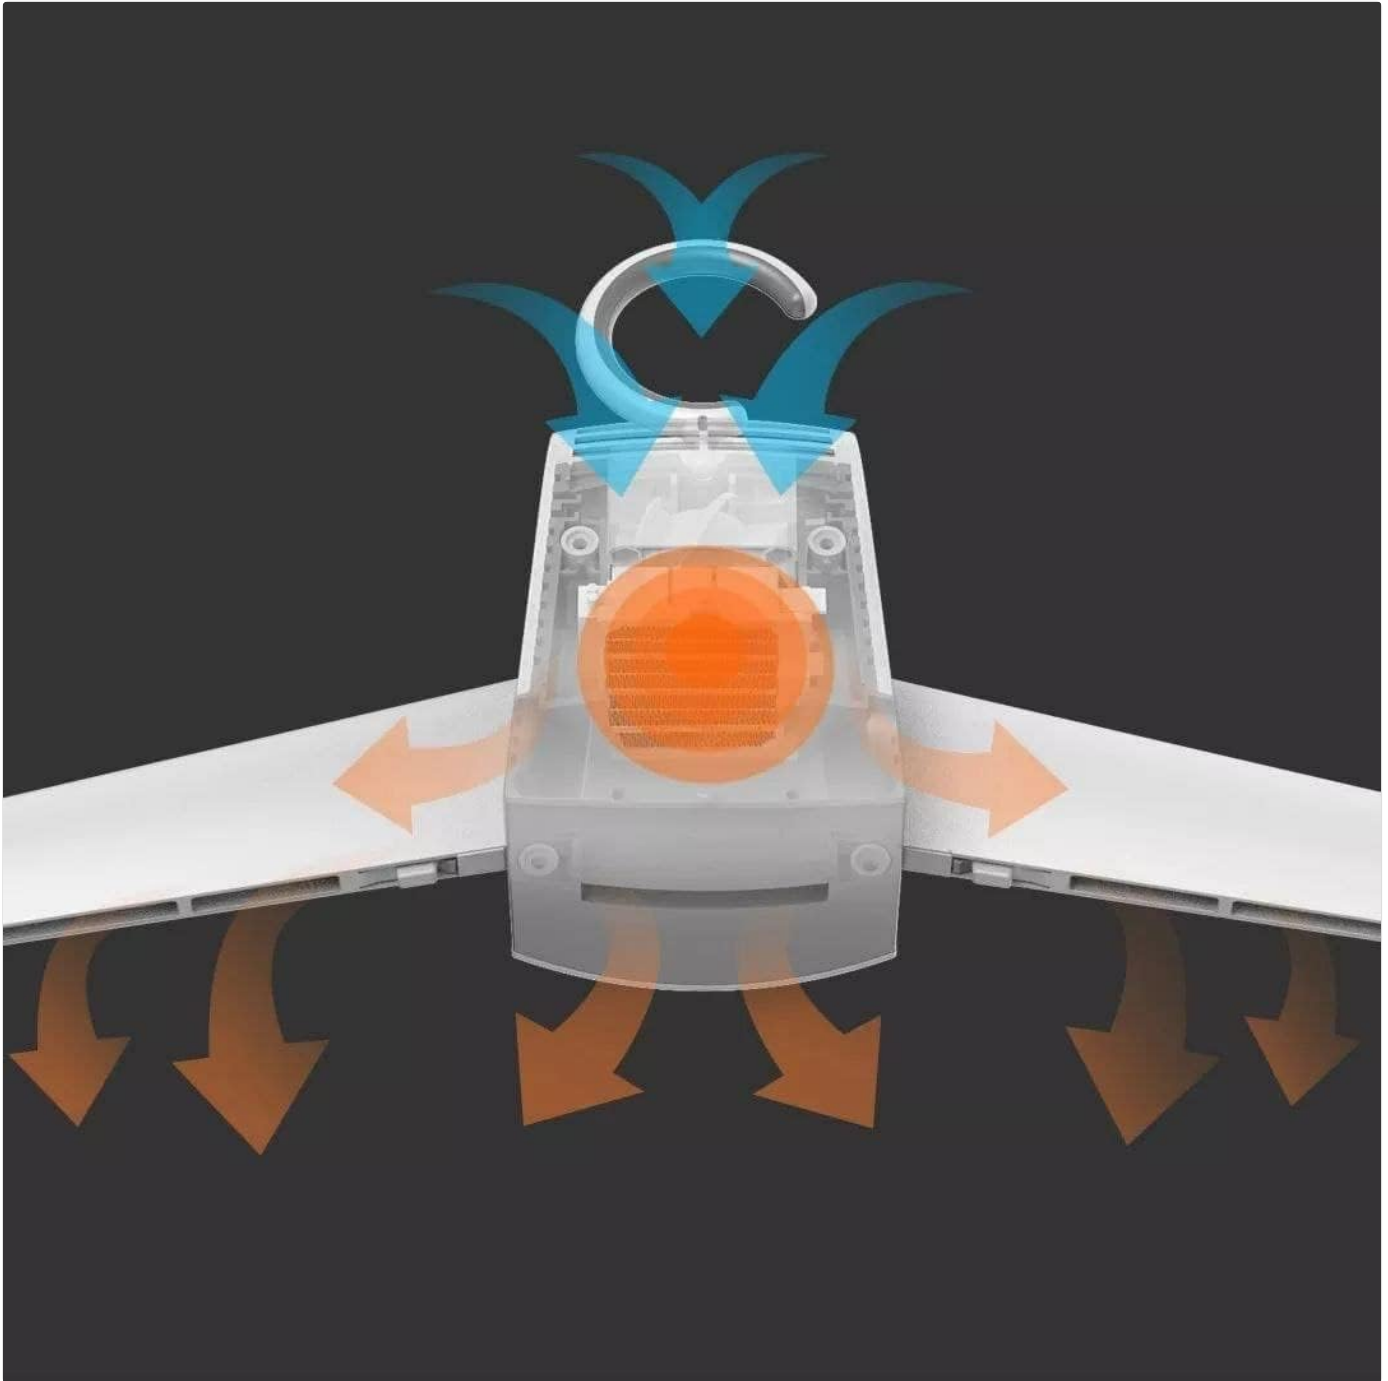


Figure 5: The dryer hanger effectively drying a jacket.

7. MAINTENANCE

Proper maintenance ensures the longevity and performance of your dryer hanger.

- **Cleaning:** Before cleaning, ensure the appliance is unplugged and completely cool. Wipe the exterior with a soft,

damp cloth. Do not use abrasive cleaners or immerse the unit in water.

- **Storage:** When not in use, unplug the dryer hanger. Fold the arms inward and detach the shoe drying attachments if used. Store the unit and accessories in the provided storage bag in a cool, dry place, away from direct sunlight.
- **Air Vents:** Periodically check the air inlet and outlet vents for any lint or dust accumulation. Gently clean with a soft brush or vacuum cleaner attachment to ensure unobstructed airflow.

8. TROUBLESHOOTING

If you encounter any issues, refer to the following troubleshooting guide:

Problem	Possible Cause	Solution
Dryer does not turn on	No power supply Power button not pressed	Check if the plug is securely inserted into a working outlet. Press the power button firmly.
Airflow is weak or no heat	Air vents blocked Overheat protection activated	Ensure air inlets and outlets are clear of obstructions. Unplug the unit, let it cool down for 15-20 minutes, then plug it back in and restart.
Clothes/shoes not drying effectively	Garment too wet/thick Poor air circulation Room humidity too high	Ensure garment is not dripping wet; consider pre-drying. Ensure adequate space around the item being dried. Use in a less humid environment.

If the problem persists, please contact customer support.

9. SPECIFICATIONS

- **Model:** B09WBZMHJQ
- **Material:** ABS (Acrylonitrile Butadiene Styrene) Flame-Retardant
- **Color:** Grey
- **Functions:** Moisture resistance, mold resistance, moth prevention, sterilization, stain resistance, deodorization
- **Features:** Foldable, portable, extendable arms, automatic temperature control, overheat protection
- **Power:** (Specific wattage/voltage not provided, refer to product label)

10. WARRANTY AND SUPPORT

This product is covered by a standard manufacturer's warranty. Please refer to your purchase documentation for specific warranty terms and conditions. For technical support, troubleshooting assistance, or warranty claims, please contact the retailer from whom you purchased this product. Keep your proof of purchase for warranty validation.

© 2023 Generic. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B09WBZMHJQ>

More documents and user manuals: <https://manuals.plus/>