

Dirt Devil BD22025V

Dirt Devil 3-in-1 Versa Stick Vacuum Cleaner

Model: BD22025V User Manual

1. IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the following:

- Read all instructions before using this appliance.
- Always unplug the charger from the outlet before cleaning or servicing.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without dirt cup and/or filters in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Store the appliance indoors. Put away after use to prevent accidents.
- Use only the charger supplied by the manufacturer to recharge.

- Do not incinerate the appliance even if it is severely damaged. Batteries can explode in a fire.
- This appliance is intended for household use only.

2. PRODUCT OVERVIEW

The Dirt Devil 3-in-1 Versa Stick Vacuum Cleaner is a versatile cleaning tool designed for various household tasks. It functions as a full-size stick vacuum for floors, converts into a handheld vacuum for quick clean-ups, and can be used for extended reach cleaning.

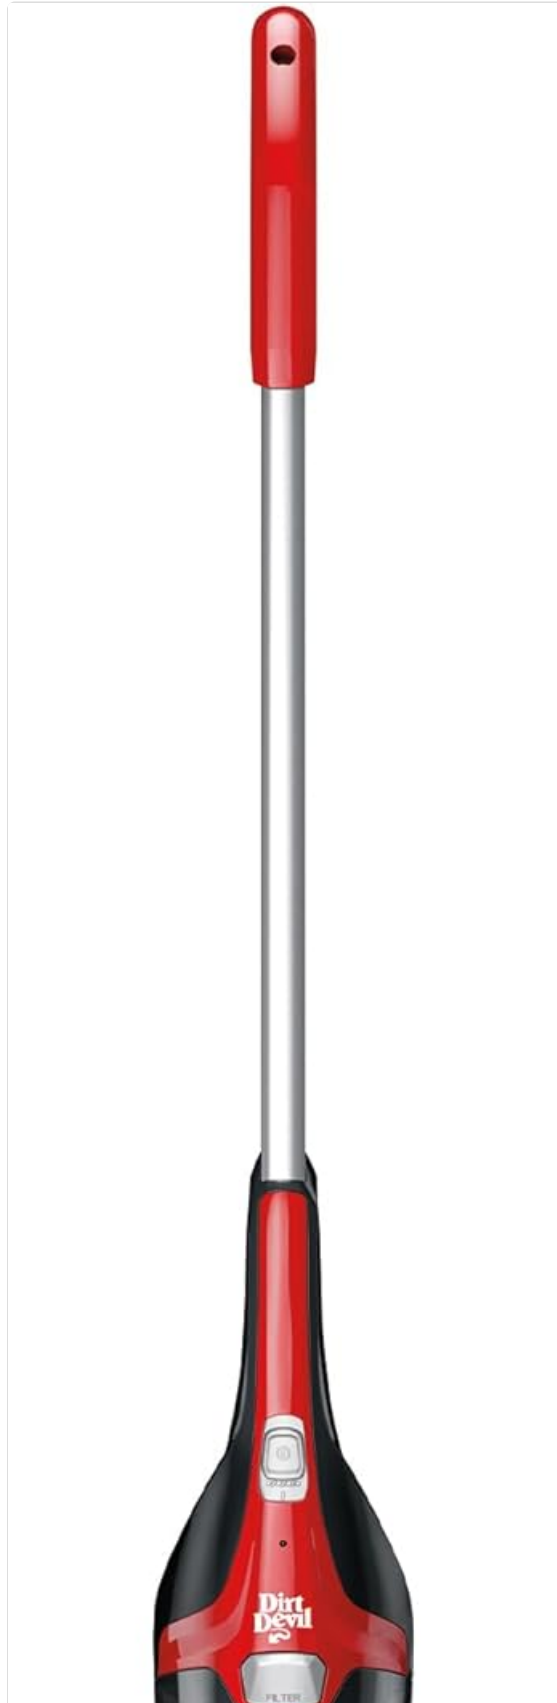




Figure 1: The Dirt Devil 3-in-1 Versa Stick Vacuum Cleaner in its full stick configuration.



Figure 2: Illustration of the vacuum's three cleaning modes: stick, handheld, and extended reach.

Key Components:

- **Main Unit:** Contains the motor, dirt cup, and battery.
- **Handle:** Provides grip and control for stick mode.
- **Floor Nozzle:** Equipped with a Spin4Pro brush roll for effective cleaning on various floor types.
- **Dirt Cup:** Easy-empty design for convenient disposal of debris.
- **16V Lithium Battery:** Provides cordless power.

3. ASSEMBLY

Follow these steps to assemble your Dirt Devil 3-in-1 Versa Stick Vacuum:

1. Insert the handle into the top of the main vacuum body until it clicks securely into place.
2. Attach the floor nozzle to the bottom of the main vacuum body, ensuring it is firmly connected.
3. Verify all connections are secure before initial use.

4. CHARGING THE BATTERY

The Dirt Devil 3-in-1 Versa Stick Vacuum is powered by a 16V lithium battery. Ensure the battery is fully charged before first use to maximize performance and battery life.

SIMPLE CHARGING



Figure 3: The integrated charging plug located on the vacuum handle.

Charging Procedure:

1. Locate the charging plug on the handle of the vacuum.
2. Plug the charger directly into a standard electrical outlet.
3. Allow approximately 6 hours for a full charge. The indicator light will show charging status (refer to your specific model's light indicators for details).
4. Do not leave the vacuum charging for extended periods beyond the recommended time.

5. OPERATING INSTRUCTIONS

Power On/Off:

Press the power button located on the main unit to turn the vacuum on or off.

Stick Vacuum Mode:

Use the vacuum in its full stick configuration for cleaning large floor areas. The Spin4Pro brush roll is designed for effective cleaning on both carpets and hard floors.

MULTI-FLOOR PERFORMANCE



Figure 4: Vacuum operating on a carpeted surface, demonstrating multi-floor performance.



Figure 5: Vacuum effectively picking up debris from a hard floor surface.

Handheld Vacuum Mode:

To convert to handheld mode, detach the main body from the handle and floor nozzle. This mode is ideal for cleaning furniture, car interiors, and small spills.



CONVERTS TO HAND VACUUM

Figure 6: The vacuum in handheld configuration, suitable for quick clean-ups.

Above Floor Cleaning:

For cleaning high or hard-to-reach areas, use the main unit with the extension wand (if applicable) or in handheld mode with appropriate attachments.



Figure 7: Demonstrating the vacuum's capability for cleaning elevated surfaces.

Floor Height Adjustment:

The vacuum features a 4-level floor height adjustment to optimize cleaning performance on different floor types, from hard floors to low or high pile carpets. Adjust as needed for best results.

6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your vacuum cleaner.

Emptying the Dirt Cup:

Empty the dirt cup after each use or when debris reaches the MAX fill line.

1. Ensure the vacuum is turned off.
2. Press the dirt cup release button and remove the dirt cup from the main unit.
3. Hold the dirt cup over a trash receptacle and open the bottom flap to release debris.
4. Close the flap and reattach the dirt cup to the vacuum until it clicks into place.



Figure 8: Demonstrating the process of emptying the dirt cup.

Cleaning the Filter:

The vacuum features a rinsable filter. Clean the filter regularly to maintain suction power.

1. Remove the dirt cup.
2. Carefully remove the filter assembly from the dirt cup.
3. Tap the filter over a trash can to remove loose dirt.
4. Rinse the filter under running water until clean. Do not use detergent.
5. Allow the filter to air dry completely for at least 24 hours before reinserting. Do not use a wet filter.

Cleaning the Brush Roll:

Periodically check the brush roll for tangled hair or debris and remove as necessary.

1. Ensure the vacuum is turned off and disconnected from the charger.
2. Flip the floor nozzle over to access the brush roll.
3. Use scissors or a brush to carefully cut and remove any tangled hair or fibers from the brush roll.
4. Ensure the brush roll spins freely after cleaning.

7. TROUBLESHOOTING

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
Vacuum does not turn on	Battery is not charged	Charge the battery for 6 hours.
Poor suction	Dirt cup is full	Empty the dirt cup.
	Filter is clogged	Clean or replace the filter. Ensure it is completely dry before reinserting.
	Nozzle or hose is blocked	Clear any obstructions from the nozzle or hose.
Brush roll not spinning	Debris tangled in brush roll	Turn off and unplug the vacuum. Remove tangled hair or debris from the brush roll.
	Brush roll is damaged	Contact customer support for a replacement brush roll.

8. SPECIFICATIONS

Feature	Detail
Brand	Dirt Devil
Model Name	3-in-1 Versa Stick Vacuum
Model Number	BD22025V
Special Features	Above Floor Cleaning, Converts to Hand Vacuum, Cordless, Easy Empty Dirt Cup, Lightweight
Filter Type	Cloth (Rinsable)
Included Components	Charger
Cordless	Yes
Capacity	0.4 Liters
Wattage	16 watts
Charging Time	6 Hours
Recommended Uses	Carpet, Hard Floor
Form Factor	Stick

Feature	Detail
Color	Red
Product Dimensions	7"L x 10"W x 42.5"H
Battery Type	Lithium-Ion
Noise Level	80 Decibels
Battery Life	12 minutes
Item Weight	5 pounds
UPC	046034903641




9. WARRANTY AND SUPPORT


For warranty information or technical support, please contact Dirt Devil customer service. Keep your purchase receipt as proof of purchase.

Online Support: Visit the official Dirt Devil website for FAQs, product registration, and contact information.

Telephone Support: Refer to your product packaging or the Dirt Devil website for the most current customer service contact numbers.

Related Documents - BD22025V

	<p>Dirt Devil Versa Cordless 3-in-1 Stick Vacuum User Manual</p> <p>User manual for the Dirt Devil Versa Cordless 3-in-1 Stick Vacuum, covering assembly, operation, maintenance, troubleshooting, and warranty information. Includes safety warnings and instructions.</p>
	<p>Dirt Devil Vibe 3-in-1 Vacuum Cleaner Owner's Manual and Operating Instructions</p> <p>Comprehensive guide for the Dirt Devil Vibe 3-in-1 Vacuum Cleaner (SD20020), covering assembly, operation, maintenance, troubleshooting, and warranty information.</p>
	<p>Dirt Devil Corded Stick Vacuum User Manual: Operation, Safety, and Troubleshooting</p> <p>This user manual provides essential information for the Dirt Devil Corded Stick Vacuum, covering safe operation, assembly, maintenance, troubleshooting common issues, and warranty details. Learn how to use your vacuum effectively and safely.</p>

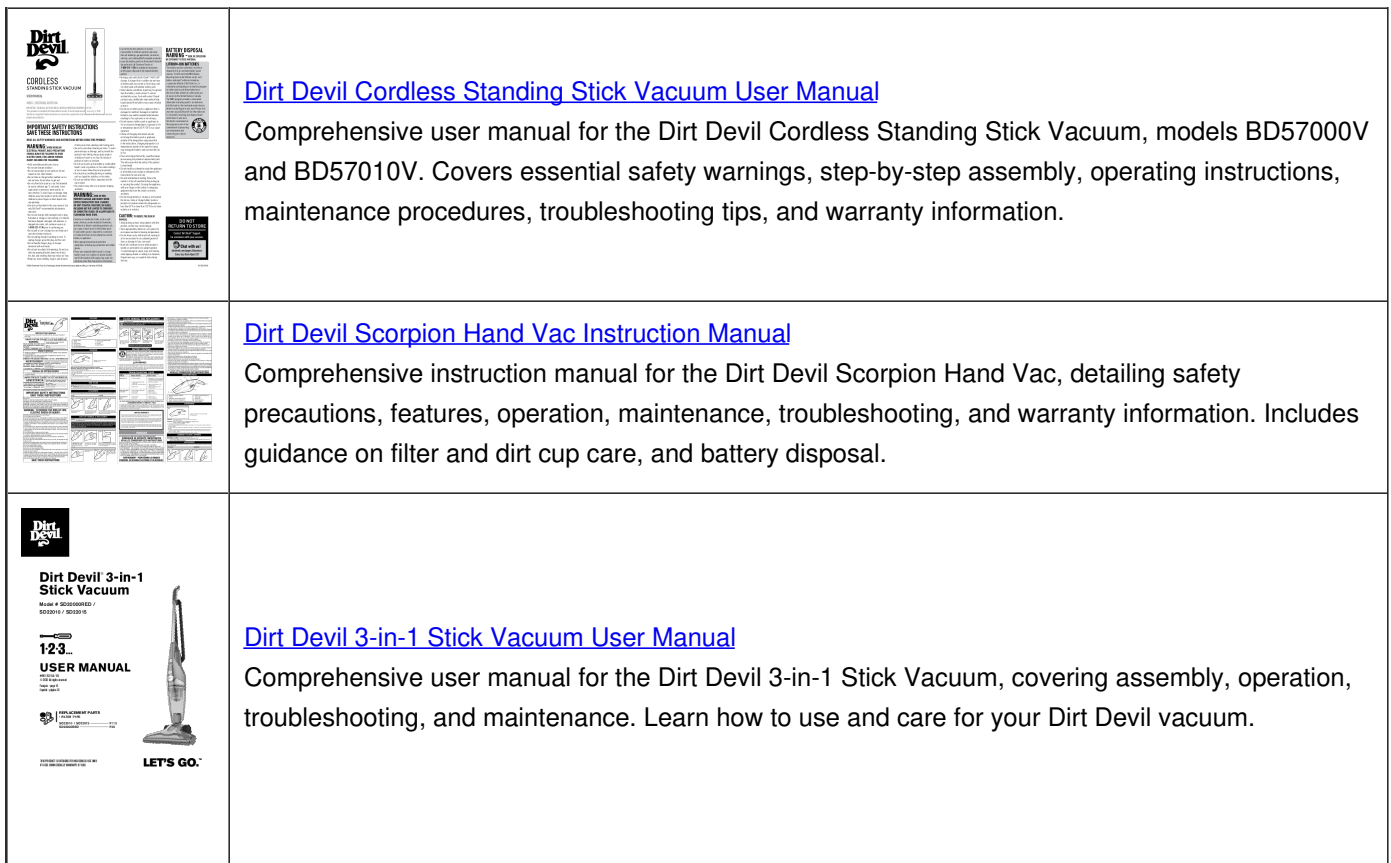

Documents - Dirt Devil – BD22025V



[\[pdf\]](#) Datasheet Safety Datasheet Catalog

Dirt Devil Versa 3 in 1 Bagless Cordless Replaceable Filter Stick Vacuum Cleaner with Handheld for Carpet and Hard Floor Red BD22025V The Home Depot 70475f4c 46fe 4a6e 827b 42952d51e67c images thdstatic catalog Images 70 |||

Safety Data Sheet According to HCS-2012 APPENDIX D TO 1910.1200 Version: 2.0/EN Product name: Lithium-ion Rechargeable Cell Issue date: 2021.08.24 1. Identification a Product identifier Product name: Lithium-ion Rechargeable Cell b Other means of identification Product description: Model...

lang:en score:16 filesize: 274.76 K page count: 10 document date: 2024-03-25