



Manuals.plus /

› MATCOM /

› MATCOM New Smart TV Remote Control for CHIQ Smart TV U55H7A U58H7A U43H7A Controller with Aiwa Led Remote (GCBLTV02ADBBT), black

MATCOM GCBLTV02ADBBT

MATCOM Smart TV Remote Control User Manual

Model: GCBLTV02ADBBT

INTRODUCTION

This user manual provides comprehensive instructions for the MATCOM GCBLTV02ADBBT Smart TV Remote Control. This remote is designed as a direct replacement for various ChangHong CHIQ UHD TV models, including U43H7A, U50H7A, U55H7A, U58H7A, L32H7S, L40H7S, L43H7S, and U58H7S. It offers full functionality without the need for complex programming.



Figure 1: MATCOM GCBLTV02ADBBT Remote Control in hand, showcasing its ergonomic design.

SETUP

The MATCOM GCBLTV02ADBBT remote control is designed for immediate use with compatible TV models. No complex programming or setup procedures are required.

Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery cover.
3. Insert two (2) AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the indicators



Figure 3: Overview of the remote control's button layout.

- **Power Button** (●): Turns the TV on or off.
- **Mute Button** (): Mutes or unmutes the TV sound.
- **Number Buttons (0-9)**: Directly select channels or input numerical data.
- **INFO Button**: Displays information about the current program or input.
- **EPG Button**: Accesses the Electronic Program Guide.
- **Navigation Pad (Up, Down, Left, Right, OK)**: Navigates menus and confirms selections.
- **Back Button** (←): Returns to the previous screen or menu.
- **Home Button** (△): Accesses the TV's main home screen or Smart TV interface.
- **Volume Up/Down (+/-)**: Adjusts the TV volume.
- **Channel Up/Down (P+/P-)**: Changes TV channels.

- **Netflix Button:** Direct access to the Netflix application.
- **YouTube Button:** Direct access to the YouTube application.
- **Prime Video Button:** Direct access to the Prime Video application.
- **Google Play Button:** Direct access to the Google Play Store.
- **Media Control Buttons (Play, Pause, Stop, Rewind, Fast Forward, Previous, Next)** Controls media playback.
- **Colored Buttons (Red, Green, Yellow, Blue):** Functionality varies depending on the TV menu or application.

MAINTENANCE

Cleaning the Remote Control

To maintain the remote control's performance and appearance, follow these cleaning guidelines:

- Use a soft, dry cloth to wipe the surface of the remote control.
- For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid excessive moisture.
- Do not use harsh chemicals, solvents, or abrasive cleaning pads, as these can damage the remote's finish or internal components.

Battery Replacement

Replace batteries when the remote control's responsiveness decreases or it stops functioning. Always replace both batteries at the same time with new ones of the same type (AAA alkaline).

- Remove old batteries from the compartment.
- Dispose of used batteries responsibly according to local regulations.
- Insert new batteries as described in the "Battery Installation" section.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote control not responding.	<ul style="list-style-type: none"> • Low or dead batteries. • Incorrect battery orientation. • Obstruction between remote and TV. • Remote control is out of range. 	<ul style="list-style-type: none"> • Replace batteries with new AAA alkaline batteries. • Ensure batteries are inserted with correct polarity (+/-). • Remove any objects blocking the line of sight to the TV's IR receiver. • Move closer to the TV (within 10-15 meters).
Specific buttons not working.	<ul style="list-style-type: none"> • Dirt or debris under the button. • Internal malfunction. 	<ul style="list-style-type: none"> • Clean the remote control thoroughly. • If cleaning does not resolve the issue, the remote may require replacement.
TV not responding to remote, but remote's IR light flashes.	<ul style="list-style-type: none"> • TV's IR receiver is blocked or faulty. • TV is not compatible with this remote model. 	<ul style="list-style-type: none"> • Ensure nothing is blocking the TV's IR receiver. • Verify your TV model is listed as compatible (e.g., CHIQ UHD TV U43H7A, U50H7A, U55H7A, U58H7A, L32H7S, L40H7S, L43H7S, U58H7S).

SPECIFICATIONS

-
- **Model Number:** GCBLTV02ADBBT
 - **Brand:** MATCOM
 - **Compatible Devices:** ChangHong CHIQ UHD Televisions (U43H7A, U50H7A, U55H7A, U58H7A, L32H7S, L40H7S, L43H7S, U58H7S)
 - **Power Source:** 2 x AAA Batteries (not included)
 - **Color:** Black
 - **Item Weight:** 2.39 ounces (approx. 67.7 grams)
 - **Package Dimensions:** 8.35 x 1.85 x 0.83 inches (approx. 21.2 x 4.7 x 2.1 cm)
 - **Special Feature:** Ergonomic design
 - **Max Number of Supported Devices:** 1

WARRANTY AND SUPPORT

This MATCOM remote control is designed for reliable performance. For any issues not covered in the troubleshooting section, please refer to the retailer's return policy or contact MATCOM customer support.

- **Return Policy:** Typically 30 days from purchase, as per retailer's terms.
- **Manufacturer:** MATCOM
- For further assistance, please visit the official MATCOM website or contact their customer service channels.

