



Manuals.plus /

› BolaButty /

› BolaButty Outdoor Bluetooth Speakers User Manual

## BolaButty BolaButty Bluetooth Speakers

# BolaButty Outdoor Bluetooth Speakers

USER MANUAL

### Product Overview



The BolaButty Outdoor Bluetooth Speakers are designed to deliver powerful, clear stereo sound with punchy bass and dynamic beat-driven light shows. These waterproof wireless speakers are perfect for parties, pools, patios, and other outdoor activities, offering multi-sync capabilities for up to 100 speakers.

**Key Features:**

- 80W Powerful Output for loud and clear stereo sound.
- IPX5 Waterproof rating for weather-resistant outdoor use.
- Multi-Sync technology to connect up to 100 speakers for immersive sound.
- 4 Dynamic Colorful Lighting Modes to enhance your atmosphere.
- Up to 15 hours of playtime on a single charge.
- Bluetooth 5.3 for stable and extended range connectivity (up to 100 meters).

**What's in the Box**

# WHAT'S IN THE BOX

Bluetooth Speaker  
with Light x 2

Stake x 2

Type-C Charging  
Cable x 2

3.5mm AUX  
Cable x 2

Instruction  
Manual x 2



Your BolaButty speaker package includes the following items:

- Bluetooth Speaker with Light x 2
- Type-C Charging Cable x 2
- 3.5mm AUX Cable x 2
- Stake x 2
- Instruction Manual x 2

## Setup

### Powering On

To power on your BolaButty speaker, press and hold the power button located on the control panel until the indicator lights illuminate.



Image: Control panel with power button highlighted.

### Initial Bluetooth Pairing (Single Speaker)

1. Ensure your speaker is powered on and not connected to any other device. The Bluetooth indicator will blink blue.
2. On your mobile device (smartphone, tablet, or laptop), navigate to the Bluetooth settings.
3. Locate and select "PATIOBEAT" from the list of available devices.
4. Once connected, you will hear an audible confirmation, and the Bluetooth indicator on the speaker will turn solid blue.

## Operating Your Speaker

### Multi-Sync Pairing (Up to 100 Speakers)

The BolaButty speakers support multi-sync technology, allowing you to connect multiple speakers for a truly immersive stereo sound experience. Follow these steps to pair two or more speakers:

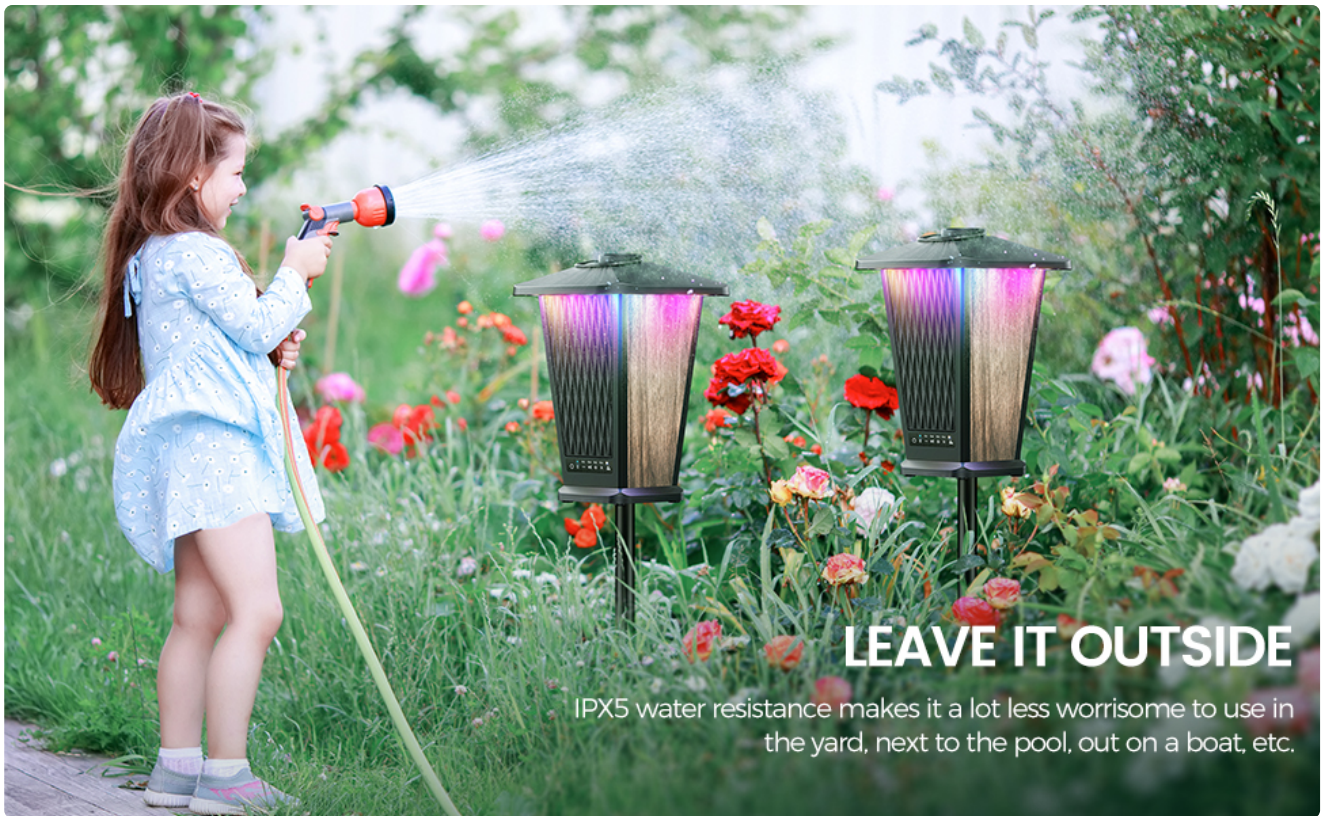


Image: Step-by-step diagram for multi-speaker synchronization.

1. **Step 1 (Primary Speaker):** Long press the power button on one speaker to turn it on. Ensure other speakers are powered off. The Bluetooth indicator will blink blue.
2. **Step 2 (Primary Speaker Pairing):** On your Bluetooth device, pair with this primary speaker (e.g., select "PATIOBEAT").
3. **Step 3 (Primary Speaker Multi-Sync Mode):** Click the Bluetooth button on the primary speaker to enter Multi-sync Mode. Its Bluetooth indicator will blink green.
4. **Step 4 (Secondary Speaker):** Long press the power button on the other speaker (secondary speaker) to turn it on, then click its Bluetooth button to enter Multi-sync Mode.
5. **Step 5 (Synchronization):** Wait for the speakers to sync. Once they are synced, the primary speaker's indicator will flash green, while the secondary speaker's indicator will be solid green.
6. **Step 6 (Additional Speakers):** Repeat Step 4 for each additional speaker you wish to pair.

Video: Demonstrates how to pair two BolaButty Bluetooth speakers together for stereo sound.

## Dynamic Lighting Modes

The BolaButty speakers feature 4 dynamic colorful lighting modes to create the perfect ambiance for any occasion. You can add a beat-driven light show or choose from 3 other lighting modes.

# 4 DYNAMIC COLORFUL LIGHTING MODES

Add a beat-driven light show or choose from 3 other lighting modes



Image: Speakers showcasing various colorful lighting effects.

Video: Shows the dynamic lighting features of the outdoor speakers.

## Enhanced Bass (EX BASS)

Activate the EX BASS feature for a deeper, more powerful bass experience. Simply press the 'EX BASS' button on the control panel to toggle this feature on or off.



*Image: Speaker highlighting the EX BASS button.*

## Maintenance and Care

### Waterproof Feature (IPX5)

Your BolaButty speaker is rated IPX5 waterproof, meaning it is protected against low-pressure water jets from any direction. This makes it suitable for outdoor use and resistant to splashes, rain, and light water exposure.

# IPX5 WATERPROOF

Weather-resistant for outdoor use



*Image: Speaker being exposed to water spray, illustrating its waterproof capability.*

**Important: Do not immerse the speaker in water or expose it to heavy splashes for extended periods. The IPX5 rating protects against jets, not submersion.**

*Video: Demonstrates the water resistance of the outdoor speaker.*

## Cleaning

To clean your speaker, use a soft, damp cloth. Avoid using harsh chemicals or abrasive cleaners, as these may damage the finish or internal components. Ensure all ports are dry before charging or connecting cables.

## Troubleshooting

If you encounter any issues with your BolaButty speaker, please refer to the following common troubleshooting steps:

Problem	Possible Solution
Speaker does not turn on or charge.	Ensure the charging cable is securely connected to both the speaker and a working power source. Try a different charging cable or adapter. Check if the charging indicator light (red) illuminates. If it does not turn green after sufficient charging time (approx. 10 hours playtime), the battery may be faulty or require service.
Cannot pair with Bluetooth device.	Make sure the speaker is in Bluetooth pairing mode (blinking blue indicator). Ensure your device's Bluetooth is enabled and within range (up to 100 meters). Forget the device from your phone's Bluetooth settings and try pairing again. Power cycle both the speaker and your Bluetooth device.
Multi-sync pairing fails.	Ensure only one speaker is initially paired with your Bluetooth device (primary speaker). Make sure all other speakers are powered off before starting the multi-sync process. Follow the multi-sync steps precisely, ensuring each speaker enters multi-sync mode correctly (blinking green indicator).
Sound quality is poor or distorted.	Check the volume levels on both the speaker and your connected device. Ensure there are no obstructions between the speaker and your device. Move closer to the speaker to improve Bluetooth signal. Try playing different audio sources. If using multi-sync, ensure all speakers are properly synced.
Lights are not working correctly.	Press the light mode button to cycle through different lighting modes. Ensure the speaker has sufficient battery charge.

## Technical Specifications

Feature	Specification
Model Name	BolaButty Bluetooth Speakers
Speaker Type	Surround Sound, Outdoor
Special Feature	Waterproof
Recommended Uses	Music, Pool, Indoor, Outdoor, Camping
Compatible Devices	Smartphone, Tablet, Laptop
Controller Type	Battery Powered
Surround Sound Channel Configuration	5.x
Color	Black or Silver
Battery Life	10 Hours (up to 15 hours as per A+ content)
Is Waterproof	True (IPX5)
Control Method	Voice
Wireless Communication Technology	Bluetooth
Speaker Size	3.75 Inches
Power Source	Battery Powered
Woofer Diameter	3.75 Inches
Water Resistance Level	Waterproof
Audio Driver Type	Dynamic Driver
Bluetooth Range	100 Meters
Connectivity Protocol	Bluetooth
Speaker Maximum Output Power	80 Watts
Connectivity Technology	Bluetooth, Auxiliary
Audio Output Mode	Surround, Stereo
Item Weight	13.32 pounds
Package Dimensions	17.3 x 13.7 x 9.7 inches

## Warranty Information

The BolaButty Outdoor Bluetooth Speakers come with a Limited Warranty. Please refer to the product packaging or contact customer support for specific terms and conditions.

## **Customer Support**

For any questions, technical assistance, or warranty claims, please contact BolaButty customer support through the official brand store or the contact information provided with your product packaging. We are committed to providing high-quality audio devices and support.