

[Manuals.plus](#) /

› [Hatteker](#) /

› Hatteker Cordless Hair Clipper & Beard Trimmer Instruction Manual

Hatteker RFC-695

Hatteker Cordless Hair Clipper & Beard Trimmer Kit

Model: RFC-695

INTRODUCTION

Thank you for choosing the Hatteker Cordless Hair Clipper and Beard Trimmer Kit. This versatile 2-in-1 grooming tool is designed for precision and convenience, suitable for hair cutting, beard trimming, and nose hair removal. Featuring a durable design, adjustable blades, and a powerful battery, this kit provides a professional grooming experience at home. Please read this manual thoroughly before first use to ensure safe and optimal performance.



Image: Hatteker 2-in-1 Multifunctional Trimmer Kit.

SAFETY INFORMATION

To ensure safe operation and prevent injury or damage, please adhere to the following safety guidelines:

- Avoid direct contact with eyes and skin, especially with the blades.
- Keep the device out of reach of children.
- Do not immerse the charging cable or adapter in water.
- Ensure the device is fully dry before charging.
- Do not use the device if it is damaged or malfunctioning.
- Only use the provided charging cable and accessories.

PRODUCT OVERVIEW & COMPONENTS

The Hatteker grooming kit includes the following:

- Cordless Hair Clipper with adjustable blade (0.5mm to 2.5mm)
- Nose Hair Trimmer
- 7 Guide Comb Attachments (3mm, 4-6mm, 7-9mm, 10-12mm, 16-18mm, 22-24mm, Thinning hair)
- USB Charging Cable
- Cleaning Brush
- Hair Comb
- Scissors
- Protective Cape



Image: All components included in the Hatteker grooming kit.

Key Features:

- **Sharp & Safe Blade:** Precision-ground ceramic blade for long-lasting sharpness and snag-free cutting.
- **Adjustable Blade Length:** 5-degree adjustable blades from 0.5mm to 2.5mm for precise trimming.
- **IPX7 Waterproof:** Fully washable design for easy and hygienic cleaning under running water.
- **TURBO Switch:** Three-speed settings (5000/6000/7000 rpm) to adapt to different hair types and cutting needs.
- **Smart Digital Display:** LED screen shows current speed (RPM), battery capacity (%), refueling reminder, travel lock status, low battery indicator, and clean reminder.
- **High Capacity Battery:** Provides up to 3 hours of cordless operation after a 90-minute charge for the clipper, and 2 hours for the nose trimmer.



Image: Detailed view of the clipper's LED digital display.

SETUP

Initial Charging:

Before first use, fully charge both the hair clipper and the nose trimmer. Connect the USB charging cable to the device and a compatible USB power source (e.g., laptop, computer, power bank, or USB charger). The LED display on the clipper will illuminate, showing charging progress. The clipper requires approximately 90 minutes for a full charge, providing up to 180 minutes of working time. The nose trimmer requires less time, offering at least 2 hours of use after a full charge.

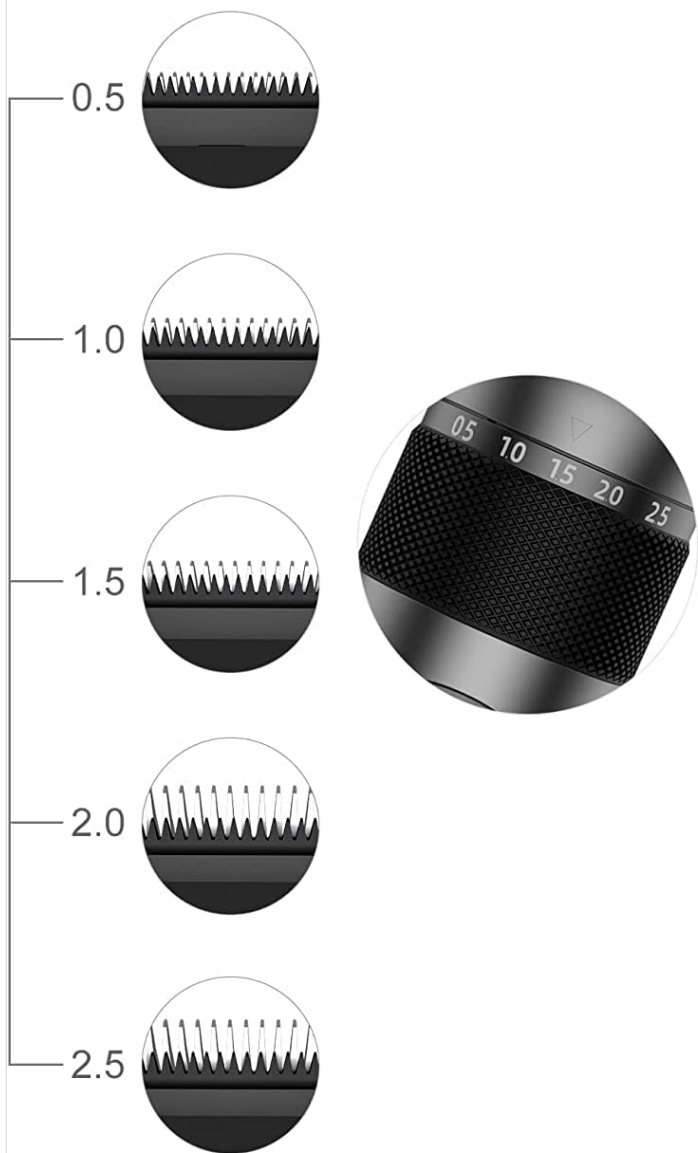


Image: Charging the Hattaker hair clipper via USB.

Attaching Guide Combs:

Select the desired guide comb attachment based on the hair length you wish to achieve. Align the comb with the clipper blade and gently push until it snaps securely into place. To remove, gently pull the comb away from the blade.

5-Degree Tunable Blade From 0.5mm To 2.5mm



7 Guide Combs



Thinning hair



3mm



4-6mm



7-9mm



10-12mm



16-18mm



22-24mm

Image: Guide comb attachments and blade adjustment.

Adjusting Blade Length (Clipper):

The hair clipper features a 5-degree adjustable blade, allowing for precise length settings from 0.5mm to 2.5mm without a guide comb. Rotate the dial located on the body of the clipper, just below the blade, to select your desired cutting length. This allows for fine-tuning even when a guide comb is attached.



Image: Adjusting the clipper blade length.

OPERATING INSTRUCTIONS

Using the Hair Clipper:

1. Ensure the clipper is charged and a suitable guide comb is attached, or the blade is adjusted to the desired length.
2. Press the power button to turn on the clipper. The LED display will illuminate, showing the current speed and battery level.
3. To adjust the speed, press the 'TURBO' button. You can cycle through 5000, 6000, and 7000 RPM settings to match your hair type and cutting preference.
4. Begin cutting hair, moving the clipper against the direction of hair growth for an even cut.
5. After use, press the power button to turn off the clipper.



Image: Various uses of the Hatterker grooming kit.

Using the Nose Hair Trimmer:

The dedicated nose hair trimmer is designed for safe and comfortable removal of unwanted nose and ear hair. Simply turn on the

device and gently insert the trimmer tip into your nostril or ear canal. Move it slowly to trim hairs. Do not insert too deeply.



Image: Using the nose hair trimmer.

Travel Lock Function:

To prevent accidental activation during travel, the hair clipper features a travel lock. To activate the lock, press and hold the power button for approximately 5 seconds until the lock icon appears on the LED display. To unlock, press and hold the power button again for about 5 seconds until the lock icon disappears and the display reactivates.

MAINTENANCE

Regular cleaning ensures optimal performance and extends the lifespan of your grooming kit.

- **Cleaning the Blades:** The hair clipper and nose trimmer are IPX7 waterproof, allowing for easy cleaning. After each use, remove any attached guide combs and rinse the blades under running water. Use the provided cleaning brush to remove stubborn hair particles.
- **Drying:** After rinsing, shake off excess water and allow the devices to air dry completely before storing or recharging.
- **Lubrication:** Periodically apply a small drop of clipper oil (not included) to the blades to maintain smooth operation and prevent rust.
- **Storage:** Store the devices and accessories in a dry, cool place, away from direct sunlight and extreme temperatures.



Image: Cleaning the waterproof hair clipper.

TROUBLESHOOTING

If you encounter any issues with your Hattaker grooming kit, please refer to the following common solutions:

Problem	Possible Cause	Solution
Device not turning on.	Low battery; Travel lock activated.	Charge the device fully. Deactivate travel lock by pressing and holding the power button for 5 seconds.
Poor cutting performance / pulling hair.	Blades are dull or clogged with hair; Insufficient lubrication.	Clean the blades thoroughly. Apply clipper oil to the blades. Ensure the blade is properly aligned.
Device making unusual noise.	Blades are not properly lubricated or are clogged.	Clean and lubricate the blades. If the issue persists, contact customer support.
LED display not working.	Device is off or battery is completely drained.	Turn on the device. Charge the device.

SPECIFICATIONS

- **Model Number:** RFC-695
- **Brand:** Hatteker
- **Power Source:** Cordless (Lithium-Ion Battery)
- **Charging Time:** Approximately 90 minutes (Clipper)
- **Runtime:** Up to 3 hours (Clipper), At least 2 hours (Nose Trimmer)
- **Blade Adjustment:** 0.5mm to 2.5mm (5 degrees)
- **Speed Settings:** 5000 RPM, 6000 RPM, 7000 RPM
- **Waterproof Rating:** IPX7 (100% waterproof)
- **Included Components:** Hair Clipper, Nose Trimmer, 7 Guide Combs, USB Charging Cable, Cleaning Brush, Hair Comb, Scissors, Protective Cape
- **Package Dimensions:** 8.27 x 6.85 x 2.4 inches
- **Item Weight:** 1.43 Pounds

WARRANTY AND SUPPORT

Specific warranty details are not provided in the available product information. For warranty claims, technical support, or any product-related inquiries, please contact Hatteker customer service directly through their official website or the retailer from whom the product was purchased. Please retain your proof of purchase for any warranty-related services.