

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [GEFU](#) /

› [GEFU Digital Timer Safe \(Model 12335\) Instruction Manual](#)

GEFU 12335

GEFU Digital Timer Safe (Model 12335) Instruction Manual

Comprehensive guide for setup, operation, and maintenance

INTRODUCTION

Thank you for choosing the GEFU Digital Timer Safe. This versatile 3-in-1 device combines a precise clock, a reliable alarm, and a smart timer, designed to assist you in various kitchen and household tasks. Please read this manual carefully before first use to ensure proper operation and longevity of your device.

PRODUCT OVERVIEW

The GEFU Digital Timer Safe is a compact and functional kitchen tool. It features a clear digital display and an intuitive rotary knob for setting. The integrated magnet allows for convenient placement on metallic surfaces.

Key Features

- Digital timer with permanent time display
- Triple function: Time display, Alarm clock, and Timer
- Easy setting of clock and alarm via button press
- Intuitive timer setting by turning the rotary knob



Image: Front view of the GEFU Digital Timer Safe, showing the digital display, "MODE" button, and "START STOP" button, along with the rotary dial.

SETUP

Battery Installation

1. Locate the battery compartment on the back of the device.
2. Open the battery compartment cover.
3. Insert the required batteries (e.g., 2 x AAA, not included) ensuring correct polarity (+/-) as indicated inside the compartment.
4. Close the battery compartment cover securely.

Initial Time Setting

1. After battery installation, the display will typically show a default time or flash.
2. Press and hold the **MODE** button until the hour digits begin to flash.
3. Turn the rotary knob to adjust the hour.
4. Press the **MODE** button again to switch to minute adjustment.
5. Turn the rotary knob to adjust the minutes.
6. Press the **MODE** button once more to confirm the time and exit time setting mode.

OPERATING INSTRUCTIONS

The GEFU Digital Timer Safe offers three main functions: Clock, Alarm, and Timer.

1. Clock Mode

In its default state, the device displays the current time. This is the Clock Mode.

2. Alarm Clock Mode

1. From Clock Mode, press the **MODE** button once to enter Alarm Setting Mode. The alarm time will be displayed, possibly flashing.
2. If the hour digits are not flashing, press and hold the **MODE** button until they do.

3. Turn the rotary knob to set the desired alarm hour.
4. Press the **MODE** button again to switch to minute adjustment.
5. Turn the rotary knob to set the desired alarm minutes.
6. Press the **MODE** button once more to confirm the alarm time.
7. To activate/deactivate the alarm, press the **START STOP** button while in Alarm Setting Mode. An alarm icon (e.g., a bell) will appear/disappear on the display.
8. The alarm will sound for a set duration when the set time is reached. Press any button to silence it.

3. Timer Mode

1. From Clock Mode, press the **MODE** button twice to enter Timer Mode. The display will show "00:00" or the last set timer value.
2. To set the timer, turn the large outer rotary knob. Turning clockwise increases the time, counter-clockwise decreases it.
3. The timer can be set up to a maximum of 99 minutes and 59 seconds.
4. Press the **START STOP** button to begin the countdown. The display will show the remaining time.
5. To pause the timer, press the **START STOP** button again. Press it once more to resume.
6. To stop and reset the timer, press and hold the **START STOP** button for a few seconds until the display resets to "00:00".
7. When the timer reaches zero, an alarm will sound. Press any button to silence it.



Image: The GEFU Digital Timer Safe conveniently attached to the side of a modern oven, demonstrating its magnetic mounting feature.

MAINTENANCE

Cleaning

To clean the device, wipe it with a soft, damp cloth. Do not use abrasive cleaners or immerse the device in water.

Battery Replacement

When the display becomes dim or the device functions erratically, it is time to replace the batteries. Follow the battery installation steps outlined in the "Setup" section.

Storage

Store the timer in a dry place, away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is blank or dim.	Batteries are dead or incorrectly installed.	Replace batteries, ensuring correct polarity.
Timer/Alarm does not sound.	Alarm function is deactivated or batteries are low.	Ensure alarm is activated (check for alarm icon). Replace batteries if sound is weak.
Timer setting is difficult or skips values.	Rotary knob might be turned too quickly or mechanism issue.	Turn the knob slowly and deliberately. If problem persists, contact customer support.
Device does not stick to metallic surfaces.	Magnetic base is dirty or surface is not metallic.	Clean the magnetic base and ensure the surface is suitable for magnetic attachment.

SPECIFICATIONS

Brand: GEFU

Model Number: 12335

Material: Plastic

Color: Black

Dimensions (L x W x H): 9.5 cm x 9.5 cm x 3.5 cm

Item Weight: 102 g

Functions: Clock, Alarm, Timer

Display Type: Digital



Image: View of the GEFU Digital Timer Safe from a slightly elevated angle, highlighting the textured rotary knob and the magnetic base.

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official GEFU website.

[Visit GEFU Official Website](#)

Related Documents - 12335

	<p>GEFU CONTARE Digital Timer User Manual</p> <p>User manual for the GEFU CONTARE digital timer (Model 12330). Provides comprehensive instructions on operation, safety, care, specifications, and troubleshooting for this versatile kitchen timer.</p>
	<p>GEFU TEMPERE Digital Roast Thermometer with Timer - User Manual</p> <p>Comprehensive user manual for the GEFU TEMPERE digital roasting thermometer with timer, detailing technical specifications, usage instructions, cleaning, battery replacement, and safety guidelines.</p>
	<p>GEFU Pasta Perfetta De Luxe Pasta Machine User Manual and Recipe</p> <p>Comprehensive user manual for the GEFU Pasta Perfetta De Luxe pasta machine (Art.-Nr. 28300), including setup, operation for various pasta types (tagliolini, tagliatelle, lasagne, spaghetti, ravioli), drying, cooking, cleaning, and a pasta dough recipe.</p>
	<p>GEFU CONTARE Digital Timer User Manual</p> <p>User manual for the GEFU CONTARE digital timer (Model 12330). Provides comprehensive instructions on operation, safety, care, specifications, and troubleshooting for this versatile kitchen timer.</p>
	<p>PLT Solutions PLTS-12335 Plug-In Outdoor Digital Timer Specifications</p> <p>Detailed specifications and features for the PLT Solutions PLTS-12335 digital outdoor timer. Includes electrical ratings, dimensions, applications, and warnings for reliable outdoor power control.</p>
	<p>PLT Solutions PLTS-12335 Plug-in Outdoor Digital Timer: Safety and Installation Instructions</p> <p>Comprehensive safety and installation guide for the PLT Solutions PLTS-12335 Plug-in Outdoor Digital Timer. Learn how to safely install, set up, program, and troubleshoot your digital timer for outdoor use.</p>


[\[pdf\] User Manual](#)



21335 BDA neu indd Taste START STOP drücken Avans pl Digital Timer SAFE Artikelnummer 12335 Item no GEFU Entdecke Deine Kochkunst Discover Culinary Artistry gefu instrukcja obslugi GEFO G srstid AfmBOoqv4tFiHXA9W5ytjFb9Mq8XtkMkUVzSXdEOEUPIfnGkVsliy6 avans products files 53 5335870 |||

A B DE Sicherheits- und Pflegehinweise 1. Bitte lesen Sie vor dem ersten Gebrauch die ... trebu Hasznlati tmutat Manual de utilizare Betjeningsvejledning Digital-Timer SAFE Artikelnummer **12335** Digital Timer SAFE Item no. **12335** GEFU Entdecke Deine Kochkunst. GEFU Discover Culinary Art...

lang:de **score:23** filesize: 4.75 M page_count: 2 document date: 2022-05-09

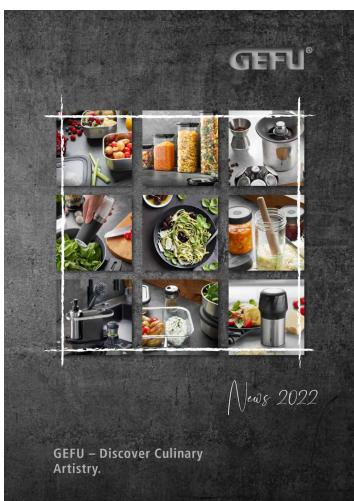

[\[pdf\]](#)

Laadige allaControl Bluetooth köögikaal 2 anduriga Gefu G 21940 FAGefu nowości 2022doc formadore ee kataloog gefu 2022 |||

News 2022 GEFU Discover Culinary Artistry. Das GEFU-Familienteam: Rudolf, Marlene, Ren und Daniel ... diameters of 15-20 mm 3,3 cm / 1 in., H 7,4 cm / 2 in. high-grade stainless steel / plastic NEW **12335** Digital timer SAFE Perfect timing: the 3-in-1 digital timer with a practical magnet is a preci...

lang:en **score:22** filesize: 10.9 M page_count: 40 document date: 2022-02-24



[\[pdf\]](#)

21335 BDA neu indd button Media ExpertPer avviare il TIMER premere tasto START STOP Il conto è alla rovescia con cadenza 5 al secondo 4 Quando suona la sveglia v1mediaexpert pl products files 53 5335870 instrukcja obslugi GEFO G 12335 |||

A B DE Sicherheits- und Pflegehinweise 1. Bitte lesen Sie vor ... re Betjeningsvejledning Digital-Timer SAFE Artikelnummer **12335** Digital Timer SAFE Item no. **12335** GEFU - Entdecke Deine Kochkunst. GEFU - Discover Culinary Ar...

lang:de **score:15** filesize: 4.75 M page_count: 2 document date: 2022-05-09



[Product Catalog - Home Appliances and Consumer Goods](#)

This catalog features a diverse range of home appliances, kitchen gadgets, cleaning devices, and consumer goods from various leading brands. It includes detailed product descriptions, specifications, and pricing information to assist consumers in making informed purchasing decisions.

lang:de **score:12** filesize: 881.59 K page_count: 27 document date: 2019-04-30