

Coleman Classic Rechargeable Lantern

Coleman Classic Rechargeable 400L LED Lantern User Manual

1. INTRODUCTION

This manual provides comprehensive instructions for the safe and effective use of your Coleman Classic Rechargeable 400L LED Lantern. Please read this manual thoroughly before operating the device and retain it for future reference. This lantern is designed for versatile illumination in various outdoor and emergency situations.

2. SAFETY INFORMATION

Warning: This product may expose you to chemicals known to the State of California to cause Cancer or Reproductive Harm. For more information, visit www.p65warnings.ca.gov.

- Do not disassemble or modify the lantern.
- Keep away from extreme temperatures and direct sunlight.
- Ensure charging ports are covered when not in use to maintain water resistance.
- Use only the provided USB to USB-C cord for charging.

3. PACKAGE CONTENTS

- Coleman Classic Rechargeable 400L LED Lantern
- USB to USB-C charging cord

4. PRODUCT FEATURES

- **Rechargeable:** Features a built-in 2600mAh lithium-ion battery and includes a USB to USB-C cord.
- **Ultra-Bright Lumens:** Offers up to 400 lumens on high and 50 lumens on low with lifetime LEDs.
- **Efficient Runtime:** Delivers up to 40 hours runtime on low, 13 hours on medium, and 5 hours on high.
- **Long Reach:** Projects light up to 11 meters on high, 7 meters on medium, or 4 meters on low.
- **Outdoor Durability:** Designed with IPX4 water-resistance and impact-resistance up to 1 meter.
- **Versatile Use:** Flexible options to use on a table or to carry or hang using its bail handle.

5. SETUP & CHARGING

5.1 Initial Charge

Before first use, fully charge the lantern. The built-in 2600mAh lithium-ion battery ensures reliable power.

5.2 Charging the Lantern

1. Locate the USB-C charging port on the side of the lantern. It is protected by a rubber cover.
2. Open the rubber cover.
3. Connect the provided USB to USB-C cord to the lantern's USB-C port.
4. Plug the other end of the USB cord into a compatible USB power source (e.g., wall adapter, power bank, computer USB port).
5. The battery indicator lights will illuminate to show charging progress. All four lights will be solid when fully charged.
6. Once charging is complete, disconnect the cable and securely close the rubber cover to maintain water resistance.



Figure 1: The lantern's USB-C charging port with the included cable connected. Blue indicator lights show the charging status.

5.3 Charging External Devices

The lantern can also serve as a power bank to charge small electronic devices.

1. Open the rubber cover to access the USB-A output port.
2. Connect your device's charging cable (not included) to the USB-A output port on the lantern.
3. The lantern will begin charging your device. Monitor your device's battery status.
4. Disconnect your device when charged and securely close the rubber cover.

Video 1: A demonstration of the Coleman Classic Recharge LED Lantern, highlighting its features including charging capabilities for external devices.

6. OPERATING INSTRUCTIONS

6.1 Power On/Off and Brightness Adjustment

1. Locate the rotary dial on the front of the lantern.
2. Rotate the dial clockwise to turn the lantern ON.
3. Continue rotating the dial clockwise to cycle through brightness settings: Low (50 lumens), Medium (150 lumens), and High (400 lumens).
4. Rotate the dial counter-clockwise to decrease brightness and turn the lantern OFF.



Figure 2: The Coleman Classic Rechargeable 400L LED Lantern, showcasing its classic design and the rotary dial for light control.

6.2 Using the Handle

The lantern features a versatile bail handle for carrying or hanging.

- **Carrying:** Use the sturdy metal bail handle to carry the lantern.
- **Hanging:** The handle can be opened to easily attach the lantern to a hook inside a tent, on a tree branch, or other suitable points for overhead illumination.

Two Ways to Use

Set it on a table or hang it with the bail handle



Figure 3: A hand holding the lantern by its bail handle, demonstrating its portability and hanging capability.

Video 2: A review highlighting the brightness and reliability of the Coleman Classic Rechargeable LED Lantern, suitable for camping.

Video 3: A user demonstrating the various features and modes of the Coleman Classic Rechargeable LED Lantern.

7. CARE & MAINTENANCE

- Clean the exterior of the lantern with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Ensure the charging port cover is always sealed when not in use to prevent water ingress.
- Store the lantern in a cool, dry place when not in use for extended periods.
- For optimal battery life, charge the lantern every 3-6 months even if not in regular use.

8. TROUBLESHOOTING

- **Lantern not turning on:** Ensure the battery is charged. Connect to a power source and check the indicator lights.
- **Device not charging from lantern:** Verify the lantern has sufficient charge. Ensure your device's charging cable is properly connected to the USB-A output port.
- **Reduced brightness or runtime:** This may indicate a low battery. Recharge the lantern fully. Over time,

battery capacity may decrease with extensive use.

9. SPECIFICATIONS

| Feature | Detail |
|-------------------------|---|
| Model Name | Classic Rechargeable Lantern |
| Lumens | 400L (High), 150L (Medium), 50L (Low) |
| Beam Distance | 11m (High), 7m (Medium), 4m (Low) |
| Runtime | 5 hours (High), 13 hours (Medium), 40 hours (Low) |
| Battery Type | Built-in 2600mAh Lithium-Ion |
| Water Resistance | IPX4 |
| Impact Resistance | Up to 1 meter |
| Material | Plastic |
| Included Components | USB to USB-C cord |
| Item Weight | 0.82 Pounds |
| Item Dimensions (LxWxH) | 4.65 x 4.6 x 6.5 inches |

10. WARRANTY & SUPPORT

The Coleman Classic Rechargeable 400L LED Lantern is supported by a 3-year limited warranty for ultimate peace of mind. For warranty claims or technical support, please refer to the contact information provided on the official Coleman website or your purchase documentation.