

[manuals.plus](#) /› [MEEDEN](#) /› [MEEDEN ES-6007-YM Large Art Easel Instruction Manual](#)

MEEDEN ES-6007-YM

MEEDEN ES-6007-YM Large Art Easel Instruction Manual

Model: ES-6007-YM

INTRODUCTION

Thank you for choosing the MEEDEN ES-6007-YM Large Art Easel. This manual provides essential information for the safe assembly, operation, and maintenance of your new easel. Please read these instructions thoroughly before use to ensure proper functionality and longevity of the product. Keep this manual for future reference.

SAFETY INSTRUCTIONS

- Ensure all components are securely fastened before placing a canvas on the easel.
- Do not exceed the maximum loading capacity of 66 lbs (30 kg).
- Keep hands clear of moving parts during adjustments to prevent pinching.
- Position the easel on a stable, level surface. Lock the casters when the easel is in a desired position to prevent unintended movement.
- Avoid exposing the easel to excessive moisture or extreme temperature changes to preserve the wood.

PACKAGE CONTENTS

Verify that all parts are present before beginning assembly. If any parts are missing or damaged, please contact MEEDEN customer support.

- Easel frame components (Beech Wood)
- Movable canvas support slider
- Adjustable central mast
- Carriage tray
- Brass fasteners and star knobs
- PU casters with metal brake pads (4 units)
- Assembly hardware (screws, bolts, tools if included)

ASSEMBLY INSTRUCTIONS

Assembly of the MEEDEN ES-6007-YM easel typically requires one person. Follow these steps carefully:

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, flat surface. Identify each component and ensure all hardware is present.
2. **Attach Casters to Base:** Secure the four PU casters to the bottom of the easel's square base using the provided screws. Ensure they are firmly attached.
3. **Assemble the H-Frame Base:** Connect the horizontal and vertical elements of the H-frame base as per the diagram, using the designated fasteners. Ensure the structure is stable.
4. **Install the Main Mast:** Attach the main vertical mast to the H-frame base. This forms the primary support structure of the easel.
5. **Attach the Movable Slider and Carriage Tray:** Slide the movable canvas support onto the main mast. Attach the carriage tray to this slider using the appropriate brass fasteners and star knobs. Ensure it can move freely up and down the mast when loosened, and lock securely when tightened.
6. **Install the Adjustable Central Mast:** Position the adjustable central mast at the top of the main mast. This component holds the top of your canvas.
7. **Final Checks:** Once assembled, gently shake the easel to ensure all connections are secure and stable. Tighten any loose fasteners.



Figure 1: Fully assembled MEEDEN ES-6007-YM Large Art Easel. This image shows the overall structure and design of the easel, highlighting its natural beech wood finish and the integrated casters.

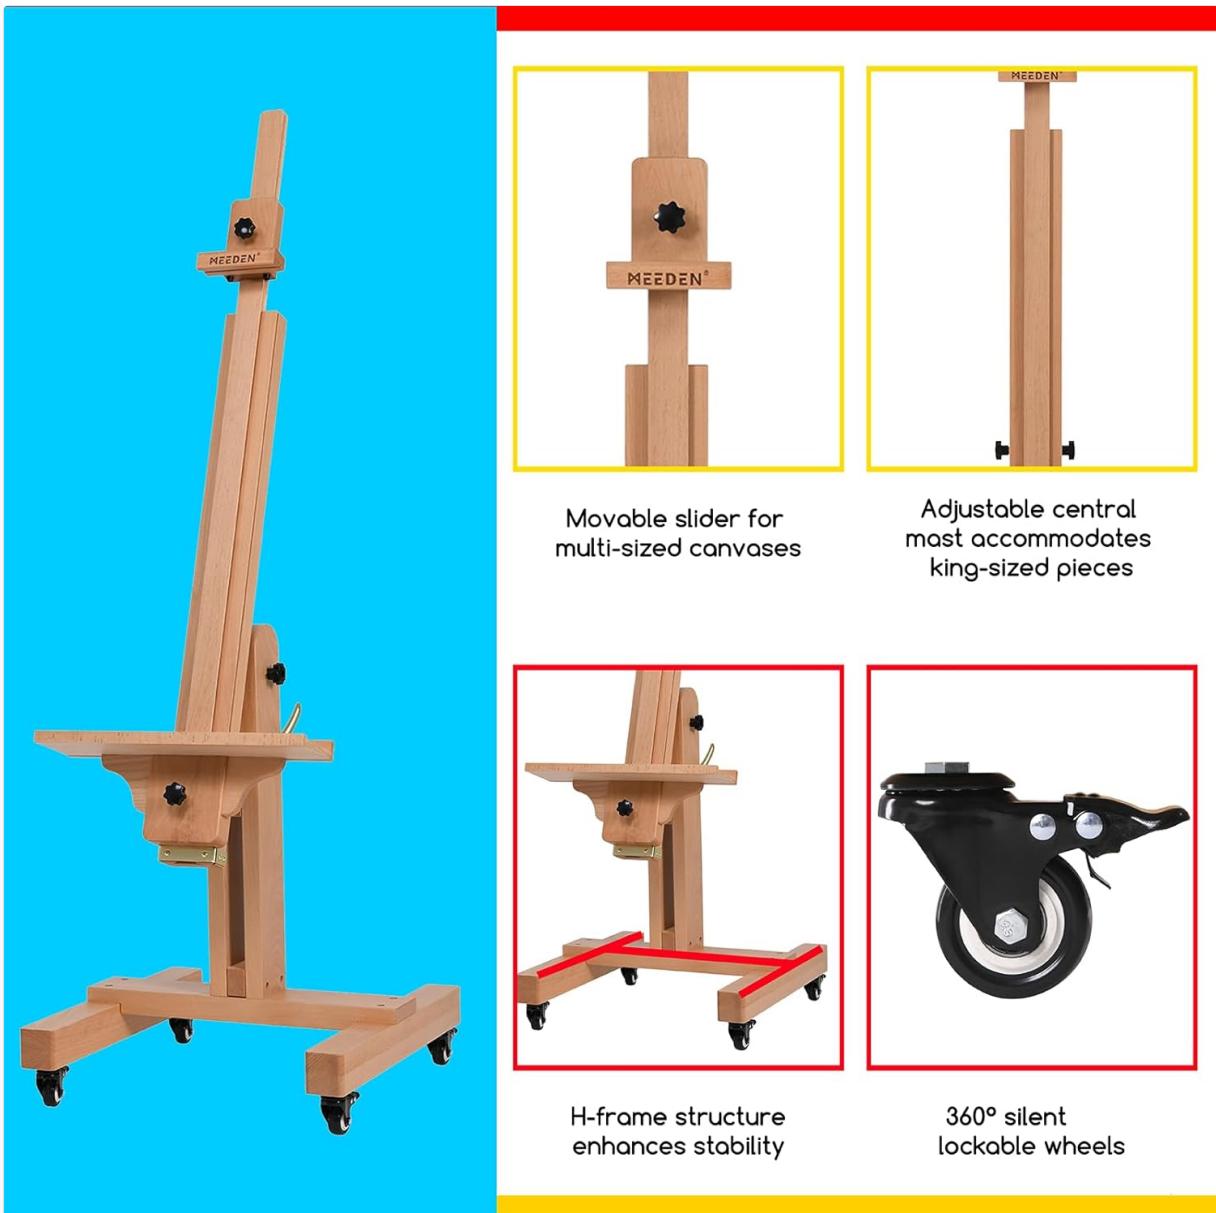


Figure 2: Detailed view of key easel features. This image illustrates the movable slider for canvas support, the adjustable central mast for varying canvas heights, the stable H-frame structure, and the 360-degree silent lockable wheels.

OPERATING INSTRUCTIONS

Adjusting Easel Height and Angle

- **Canvas Height Adjustment:** Loosen the star knob on the movable canvas support slider. Adjust the slider up or down the main mast to the desired height for your canvas. Tighten the knob firmly to secure the canvas support.
- **Canvas Top Support:** Loosen the star knob on the adjustable central mast. Slide it up or down to firmly hold the top edge of your canvas. Tighten the knob.
- **Easel Angle Adjustment:** The easel allows for angle adjustments from 0 to 90 degrees (horizontal to vertical). Loosen the brass fasteners located on the side of the easel's main support. Carefully tilt the easel to your preferred angle. Re-tighten the fasteners securely to lock the angle.

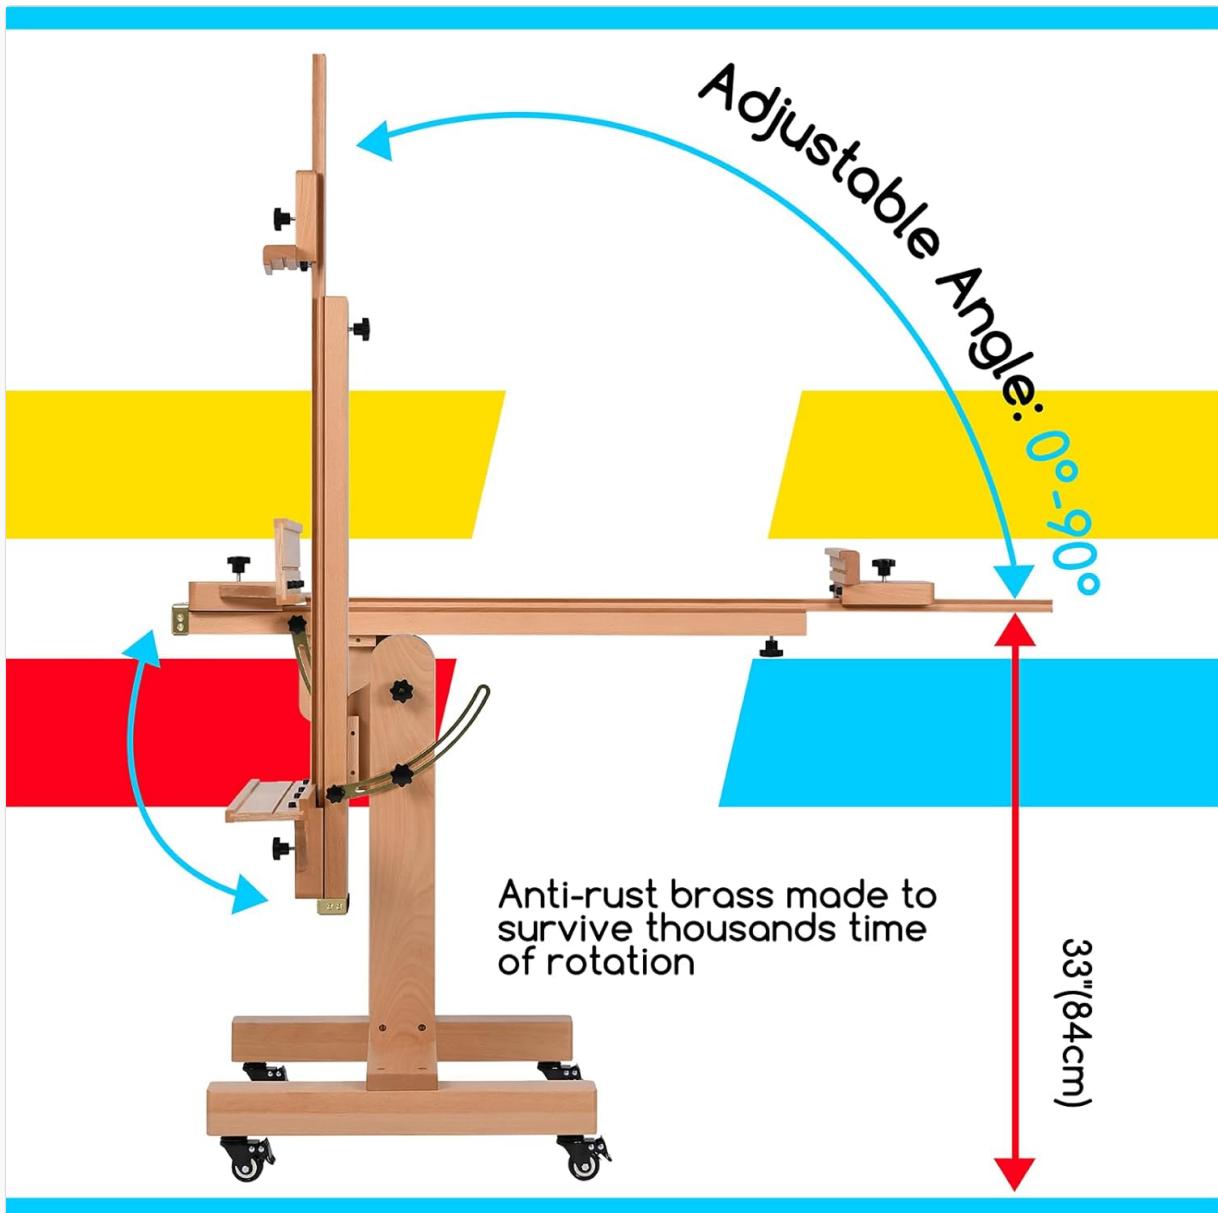


Figure 3: Illustration of the easel's adjustable angle. This diagram shows how the easel can be tilted from a vertical position to a flat, horizontal position, allowing for versatile painting techniques.

Placing a Canvas

Place the bottom edge of your canvas onto the carriage tray. Adjust the movable slider to support the canvas from below. Then, adjust the central mast to secure the top edge of the canvas. Ensure the canvas is centered and stable before beginning to paint.



Figure 4: Close-up of the heavy-duty carriage tray. This image highlights the tray's capacity to accommodate various canvas sizes and its function as a convenient storage space for brushes and paints.

Using the Casters

The easel is equipped with 360-degree rotating casters for easy mobility. To move the easel, unlock the casters by flipping the metal brake pads upwards. Once the easel is in the desired position, press the brake pads downwards to lock the casters and prevent movement during use.



Figure 5: An artist utilizing the MEEDEN Large Art Easel in a studio setting. This image demonstrates the easel's practical application and its ability to support large canvases.

MAINTENANCE

- **Cleaning:** Wipe the easel with a soft, dry cloth to remove dust. For stubborn marks, use a slightly damp cloth and dry immediately. Avoid harsh chemicals or abrasive cleaners.
- **Wood Care:** The beech wood is durable, but occasional treatment with wood oil or wax can help maintain its finish and prevent drying.
- **Hardware:** Periodically check all screws, bolts, and knobs for tightness. Re-tighten as necessary to ensure stability.
- **Storage:** When not in use for extended periods, store the easel in a dry environment away from direct sunlight or extreme temperatures.

TROUBLESHOOTING

- **Easel is Unstable:** Ensure all assembly fasteners are fully tightened. Check that the casters are locked if the easel is stationary. Verify the easel is on a level surface.
- **Difficulty Adjusting Height/Angle:** Loosen the star knobs or brass fasteners sufficiently before

attempting to adjust. Do not force adjustments. If a screw is difficult to thread during assembly, check for any obstructions in the hole.

- **Casters Not Rolling Smoothly:** Check for debris caught in the wheels. Ensure the brake pads are fully disengaged.

SPECIFICATIONS

Feature	Specification
Model Name	ES-6007-YM
Brand	MEEDEN
Material	Beech Wood
Color	Natural
Product Dimensions (D x W x H)	24"D x 24"W x 98"H
Item Weight	44 pounds (20 Kilograms)
Max Canvas Height	Up to 71" (180cm)
Max Loading Capacity	66 lbs (30 kg)
Easel Type	Single Mast Easel
Assembly Required	Yes

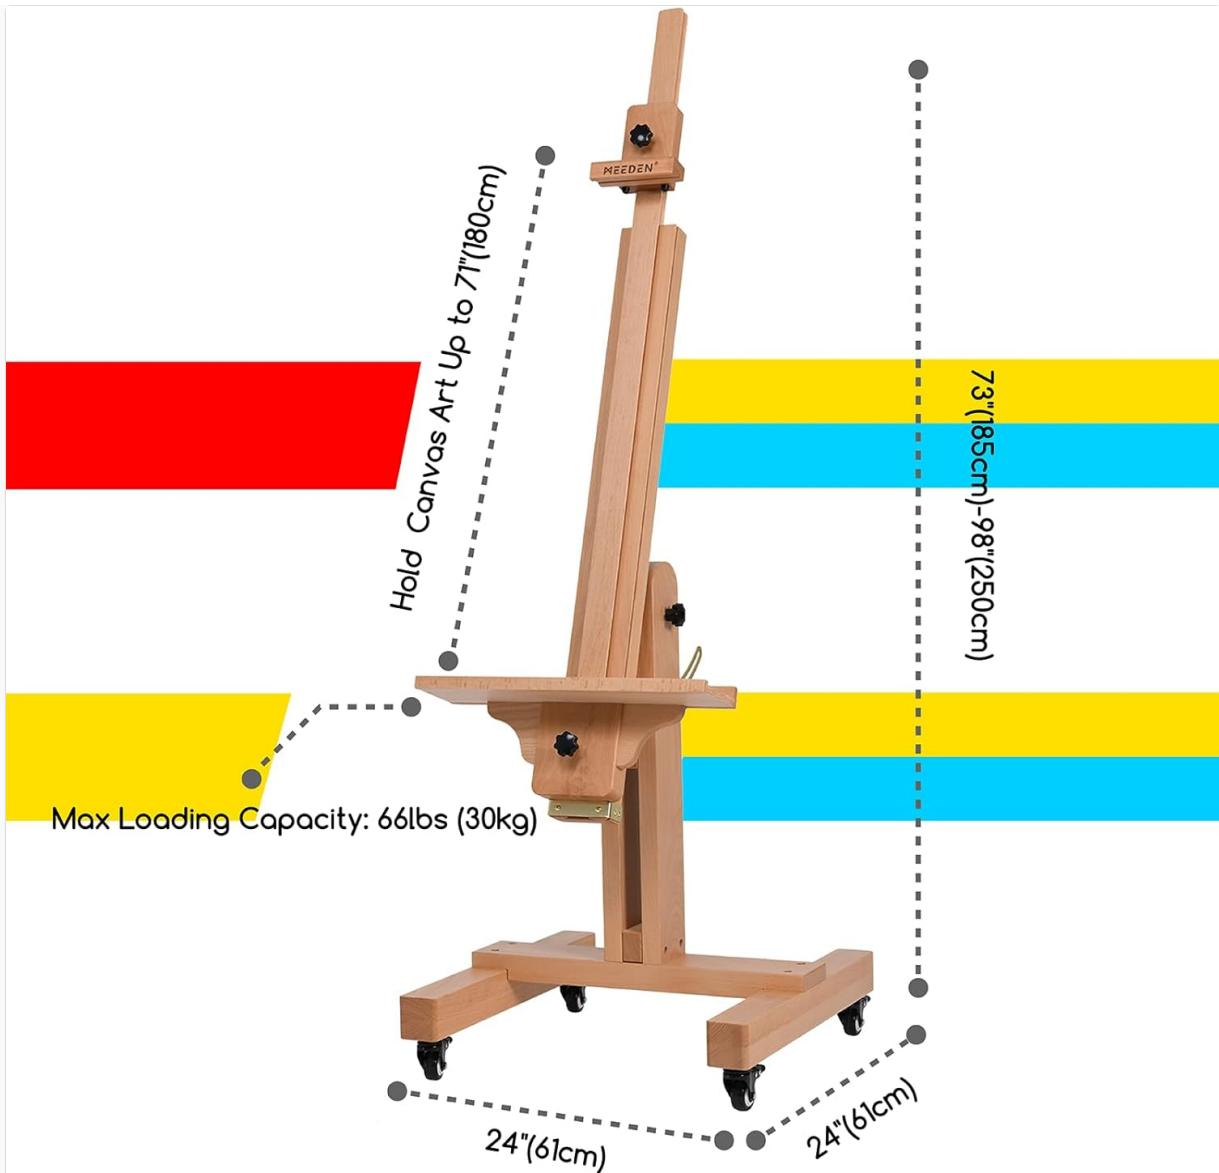


Figure 6: Dimensional overview of the easel. This image provides key measurements including the maximum canvas height (71 inches), overall easel height (73-98 inches), base dimensions (24x24 inches), and maximum loading capacity (66 lbs).



WARRANTY AND SUPPORT

MEEDEN products are designed for quality and durability. For specific warranty information, please refer to the documentation included with your purchase or visit the official MEEDEN website. If you encounter any issues or have questions regarding your ES-6007-YM Large Art Easel, please contact MEEDEN customer support for assistance.

Contact information can typically be found on the MEEDEN brand store page or through your retailer.

Related Documents - ES-6007-YM

	<p>MEEDEN DHJ-3 Art Easel: Assembly Instructions and Product Warranty</p> <p>Comprehensive assembly instructions and warranty information for the MEEDEN DHJ-3 Art Easel. Learn how to assemble your easel and understand its limited lifetime warranty.</p>
---	---

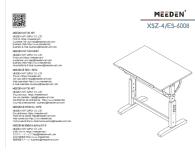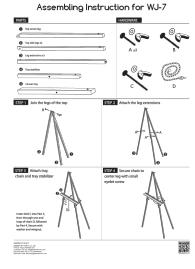	<p>MEEDEN XSZ-4/ES-6008 Drafting Table Assembly and Warranty Information</p> <p>Comprehensive guide for the MEEDEN XSZ-4/ES-6008 drafting table, including assembly instructions, part lists, hardware details, and limited lifetime warranty information.</p>
	<p>MEEDEN W10B Art Easel Assembly Instructions and Warranty</p> <p>Detailed assembly instructions and limited lifetime warranty information for the MEEDEN W10B Art Easel. Includes a parts list, step-by-step assembly guide, and warranty terms for original purchasers.</p>
	<p>MEEDEN WJ-7 Art Easel Assembly Instructions</p> <p>Step-by-step guide for assembling the MEEDEN WJ-7 art easel, including parts, hardware, and detailed instructions for a secure and stable setup.</p>
	<p>MEEDEN KIDS DB-T10 Art Table and Chair Set: Assembly Guide & Warranty</p> <p>Comprehensive assembly instructions and product warranty details for the MEEDEN KIDS DB-T10 Art Table and Chair Set. Find part lists, hardware guides, and step-by-step assembly procedures for your child's art desk.</p>