

[Manuals.plus](#) /

› [ALEASHA](#) /

› ALEASHA Freestanding Tub Faucet (Model 3080500B-US-C) User Manual - Matte Black

ALEASHA 3080500B

ALEASHA Freestanding Tub Faucet (Model 3080500B-US-C) User Manual - Matte Black

Comprehensive instructions for installation, operation, and maintenance.

1. INTRODUCTION

Thank you for choosing the ALEASHA Freestanding Tub Faucet. This manual provides detailed instructions for the safe and efficient installation, operation, and maintenance of your new faucet. Please read this manual thoroughly before beginning installation or use, and retain it for future reference.

Safety Information

- Always turn off the main water supply before installing or servicing the faucet.
- Wear appropriate personal protective equipment, such as safety gloves and eye protection, during installation.
- Ensure all connections are secure to prevent leaks.
- If you are unsure about any part of the installation process, consult a qualified plumber.
- Keep this manual in a safe place for future reference.

2. PRODUCT OVERVIEW

The ALEASHA Freestanding Tub Faucet is designed for modern bathrooms, offering both a waterfall spout and a handheld shower. It features solid brass construction for durability and a matte black finish for a contemporary aesthetic.





Image: The ALEASHA Freestanding Tub Faucet in Matte Black, showcasing its sleek design and integrated handheld shower.

Key Features

- **Material:** High-quality solid brass construction for corrosion and rust resistance.
- **Water Modes:** Two modes - waterfall spout and handheld shower, easily switchable with a diverter.
- **High Flow Rate:** Max 6.74 GPM for quick tub filling.
- **Swivel Spout:** 360-degree swivel for adjustable water direction.
- **Handheld Shower:** Includes a 59-inch (150 cm) stainless steel hose for extended reach.
- **Stable Base:** Floor-mounted design with a brass 4-pod base and expansion bolts for secure installation.
- **Finish:** Durable Matte Black finish.

3. PRODUCT COMPONENTS

Before installation, ensure all parts are present and undamaged. Refer to the diagram below for identification.

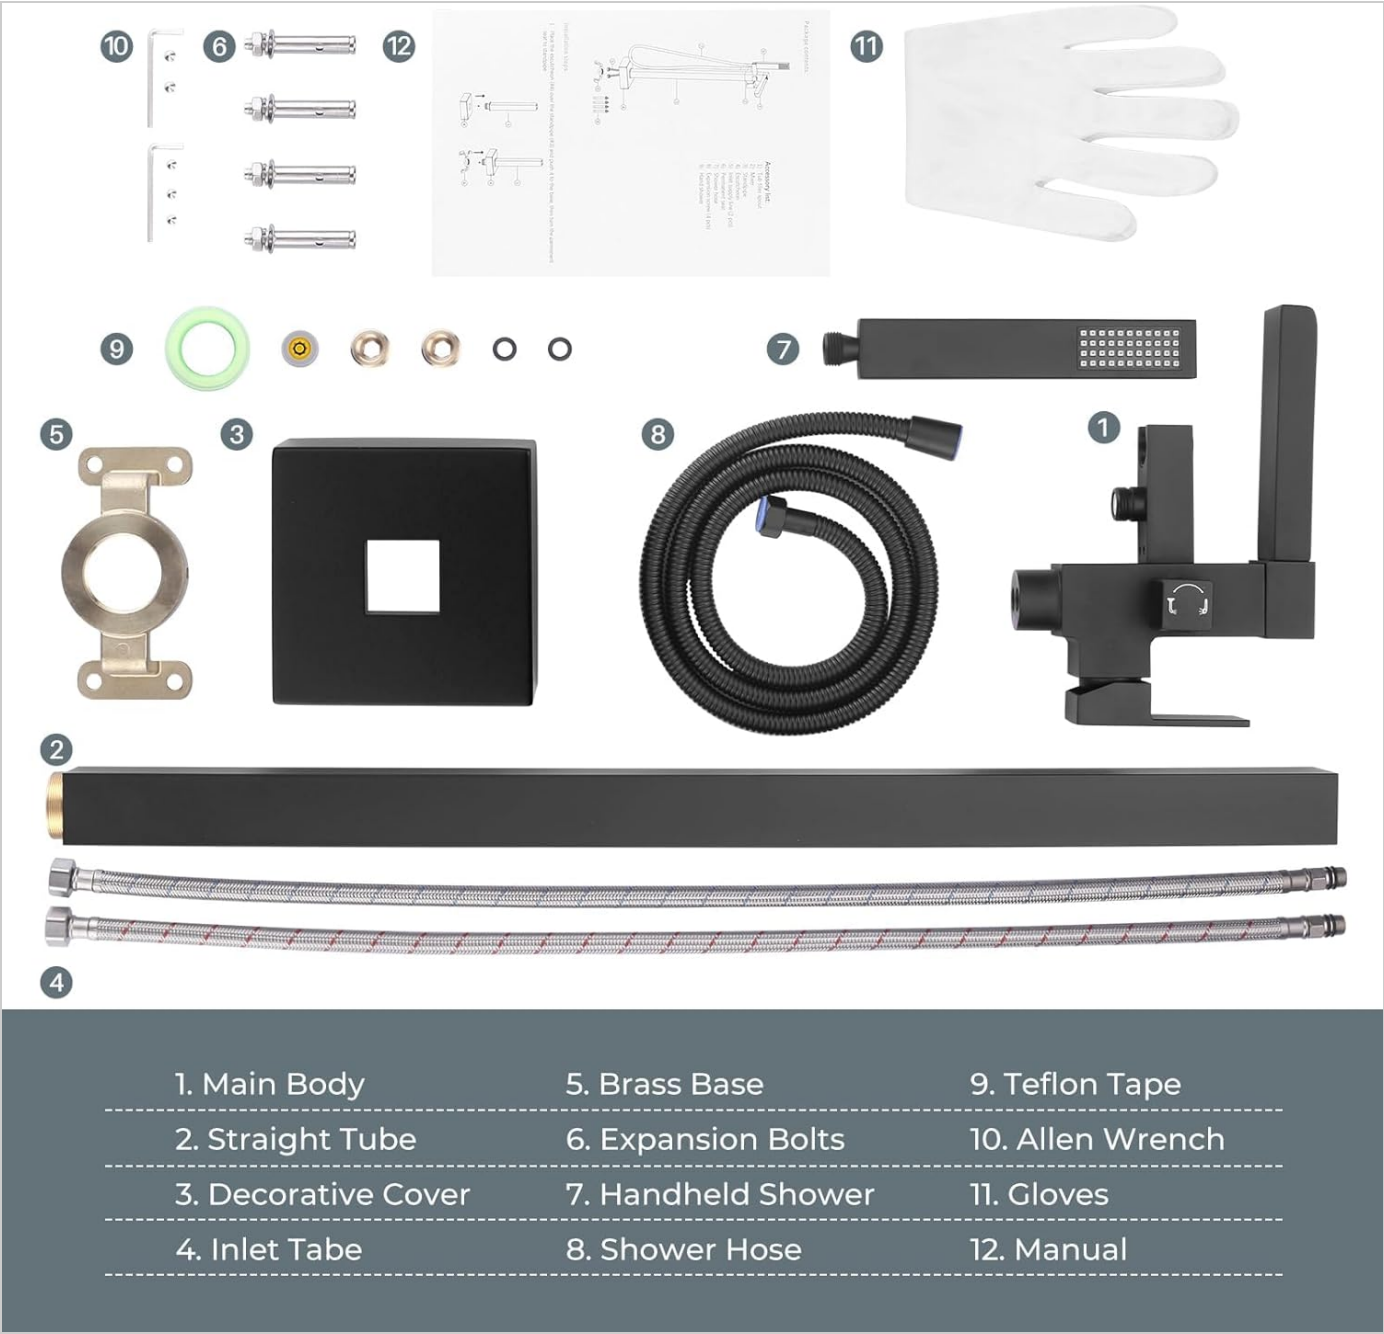


Image: An exploded view showing all components included with the ALEASHA Freestanding Tub Faucet, including the main body, straight tube, decorative cover, inlet tube, brass base, expansion bolts, handheld shower, shower hose, Teflon tape, Allen wrench, gloves, and manual.

1. Main Body

- 2. Straight Tube
- 3. Decorative Cover
- 4. Inlet Tube (1/2" Hot & Cold Supply Hose)
- 5. Brass Base
- 6. Expansion Bolts (4 pcs)
- 7. Handheld Shower
- 8. Shower Hose (59" Stainless Steel)
- 9. Teflon Tape
- 10. Allen Wrench
- 11. Gloves
- 12. Manual
- 13. 3/8" Hose Adapter (if applicable)

4. SPECIFICATIONS

Feature	Detail
Brand	ALEASHA
Model Number	3080500B-US-C
Color	Matte Black
Material	Brass, Stainless Steel, Zinc
Finish Type	Matte
Number of Handles	1
Mounting Type	Floor Mount
Flow Rate (Max)	6.74 GPM
Handheld Shower Hose Length	59 inches (150 cm)
Supply Hose Length	32 inches (81.28 cm)
Product Dimensions	30.5 x 12.8 x 4.25 inches (approximate)
Item Weight	11.58 pounds

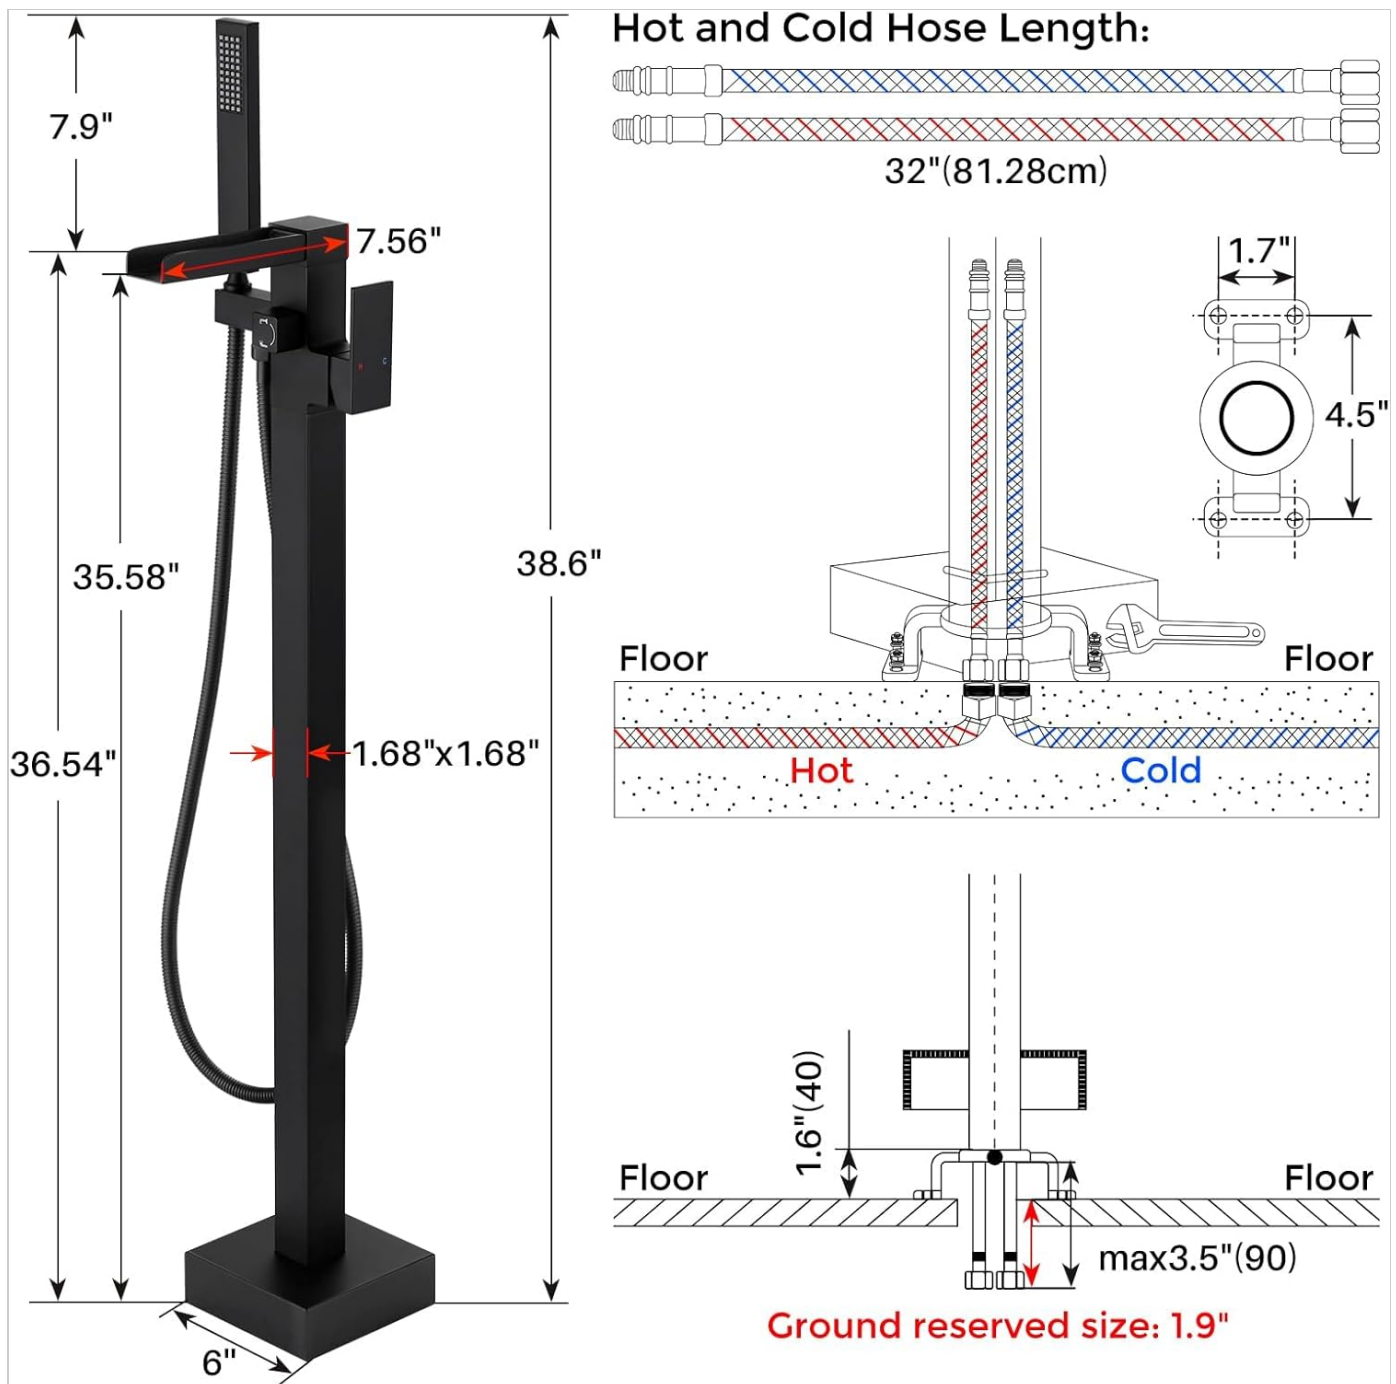


Image: Technical drawing illustrating the dimensions of the faucet and the recommended floor mounting specifications, including hot and cold hose lengths and reserved floor space.

5. INSTALLATION INSTRUCTIONS

Careful installation is crucial for proper function and longevity. Follow these steps precisely.

Pre-Installation Checklist

- Ensure you have all components listed in Section 3.
- Verify that the water supply lines (hot and cold) are accessible and correctly positioned in the floor.
- Confirm the reserved hole depth in the floor is at least 1.9 inches (5cm) to accommodate water pipes and the base.
- Turn off the main water supply.

Installation Steps

1. **Prepare the Floor:** Drill holes on the floor according to the dimensions provided in the specifications diagram. The recommended reserved depth for water pipes is 1.9 inches (5cm).

2. **Install the Brass Base:** Position the brass base (Part 5) over the prepared holes. Secure it to the ground using the four expansion bolts (Part 6). Ensure the base is stable and firmly locked to the floor.

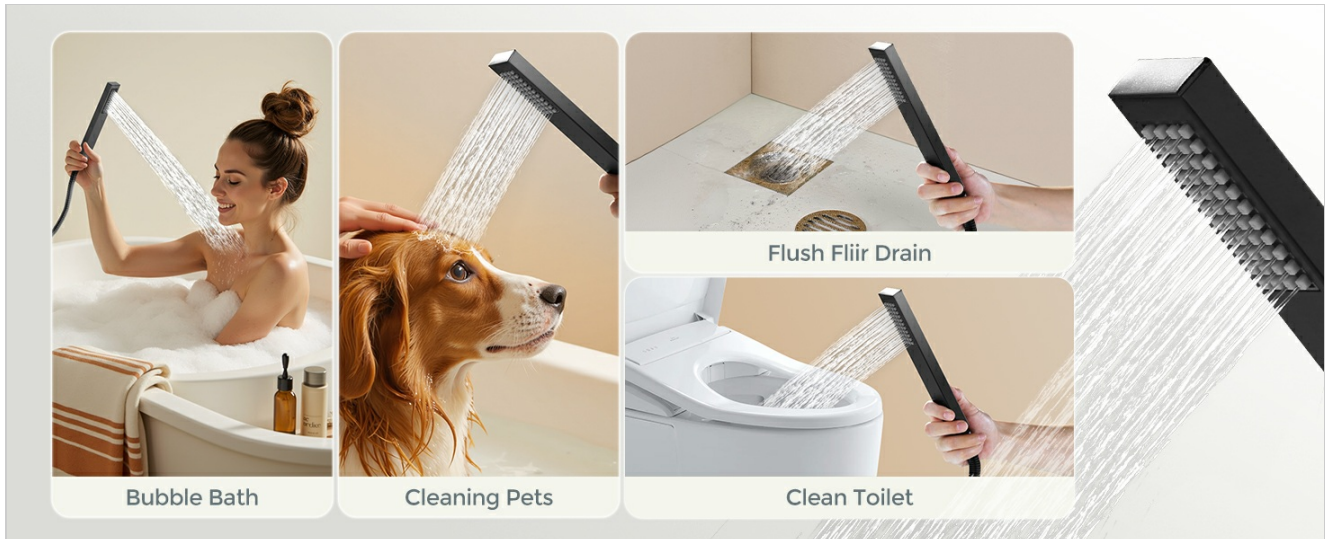


Image: Diagram showing the solid brass 4-pod base being secured to the floor with expansion bolts, highlighting its stability.

3. **Connect Water Supply Hoses:** Attach the 1/2" hot and cold supply hoses (Part 4) to the corresponding water lines in the floor. Use Teflon tape (Part 9) on all threaded connections to ensure a watertight seal. The supply hoses are 32 inches long.
4. **Assemble the Faucet Body:** Connect the straight tube (Part 2) to the main body (Part 1). Carefully align and secure these components.
5. **Mount the Faucet to the Base:** Attach the assembled faucet body to the brass base (Part 5). Ensure it is securely fastened and upright.
6. **Install Decorative Cover:** Place the decorative cover (Part 3) over the base to conceal the mounting hardware.
7. **Connect Handheld Shower:** Connect the 59-inch stainless steel shower hose (Part 8) to the handheld shower (Part 7) and to the designated outlet on the main faucet body.
8. **Test for Leaks:** Slowly turn on the main water supply. Check all connections for any signs of leaks. If leaks are detected, turn off the water supply, tighten the connections, and re-test.

6. OPERATING INSTRUCTIONS

Your ALEASHA Freestanding Tub Faucet offers two water modes for versatile use.

Water Flow Control

- **Temperature Control:** The single handle controls both water temperature and flow. Move the handle left for hot water and right for cold water. Lift the handle to increase water flow.

WHAT YOU GET

1. Main Body
2. Straight Tube
3. Base Cover Plate
4. 1/2" Hot & Cold Supply Hose
5. Brass Base
6. Expansion Bolts(4 pcs)
7. Handheld Shower
8. 59" Stainless Steel Hose
9. Teflon Tape
10. Allen Wrench
11. Gloves
12. Manual
13. 3/8" Hose Adapter

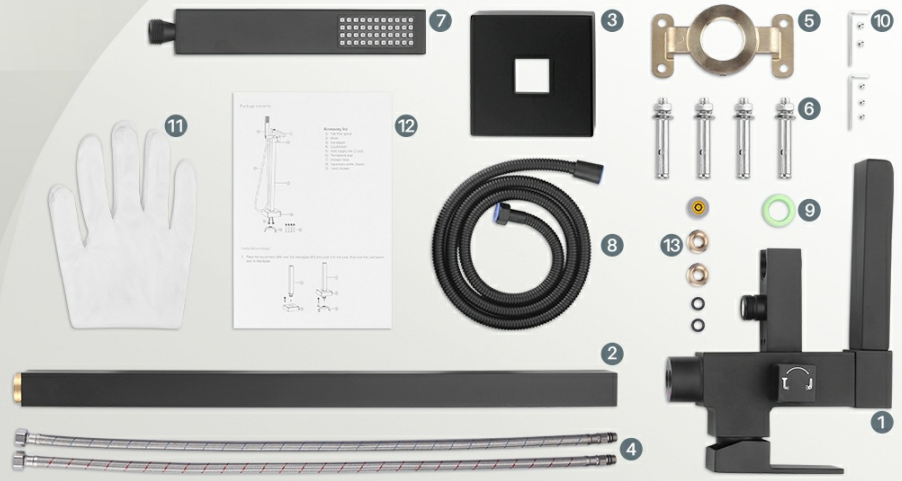


Image: Close-up of the faucet handle, indicating the hot (H) and cold (C) water temperature adjustment range.

- **Spout Mode:** To use the waterfall spout, ensure the diverter knob is set to the spout position. Water will flow from the wide spout, providing a high flow rate of up to 6.74 GPM for fast tub filling.

2-IN-1 WATER MODE TUB FAUCET



Spout Mode

6.74 GPM@60 PSI for fast filling



Handheld Mode

1.8 GPM@60 PSI for directional rinsing



Image: The faucet operating in spout mode, showing a wide stream of water filling a tub. The diverter knob is visible, set to direct water to the spout.

- **Handheld Shower Mode:** To use the handheld shower, turn the diverter knob to the handheld shower position. Water will divert from the spout to the handheld shower.



Image: A visual representation of the two water outlet modes, waterfall spout and handheld shower, with an arrow indicating the switch mechanism.

- **Swivel Spout:** The spout can swivel 360 degrees. Gently rotate the spout to adjust the water direction as needed.



Image: The faucet spout shown rotating 360 degrees, illustrating its flexibility in directing water flow.

7. MAINTENANCE

Regular cleaning and maintenance will help preserve the finish and functionality of your faucet.

Cleaning the Faucet

- Clean the faucet regularly with a soft cloth and mild soap.
- Avoid using abrasive cleaners, harsh chemicals, or scouring pads, as these can damage the matte black finish.
- Rinse thoroughly with clean water after cleaning and dry with a soft cloth to prevent water spots.

Ceramic Valve Care

The faucet is equipped with a durable ceramic valve, tested for over 500,000 on/off cycles to ensure leak-proof performance and smooth operation. No special maintenance is typically required for the valve itself under normal use.



Image: An internal view of the faucet highlighting the ceramic valve, emphasizing its durability and leak-proof design.

8. TROUBLESHOOTING

If you encounter any issues, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Low Water Flow	◦ Partially closed shut-off valves. ◦ Clogged aerator or showerhead nozzles. ◦ Kinked supply hoses.	◦ Ensure shut-off valves are fully open. ◦ Clean the aerator or showerhead nozzles. ◦ Check and straighten supply hoses.

Problem	Possible Cause	Solution
Leaks at Connections	◦ Loose connections. ◦ Insufficient Teflon tape. ◦ Damaged O-rings/washers.	◦ Turn off water supply and gently tighten connections. ◦ Reapply Teflon tape if necessary. ◦ Inspect and replace O-rings/washers if damaged.
Water Temperature Issues	◦ Incorrect handle position. ◦ Issues with hot/cold water supply.	◦ Adjust the handle to the desired temperature. ◦ Check your home's hot and cold water supply lines.
Diverter Not Switching Properly	◦ Obstruction in diverter mechanism.	◦ Ensure the diverter knob is fully rotated to the desired position. If issues persist, contact customer support.

9. WARRANTY AND SUPPORT

ALEASHA stands behind the quality of its products.

Warranty Information

This ALEASHA Freestanding Tub Faucet comes with a **5-year warranty** from the date of purchase. This warranty covers manufacturing defects in materials and workmanship under normal use. It does not cover damage resulting from improper installation, misuse, abuse, accident, or normal wear and tear.

Return Policy

A **30-day free return policy** is offered for this product. Please refer to your purchase platform's return guidelines for detailed instructions.

Customer Support

If you have any questions, require assistance with installation, or need to claim warranty service, please contact ALEASHA customer support through the retailer where you purchased the product. Please have your model number (3080500B-US-C) and purchase date available when contacting support.

