

Playmobil 71153

PLAYMOBIL City Action Airport with Airplane

MODEL: 71153 INSTRUCTION MANUAL

Brand: Playmobil

1. Introduction

This manual provides detailed instructions for the assembly, operation, and maintenance of your PLAYMOBIL City Action Airport with Airplane playset (Model 71153). Please read these instructions carefully before beginning assembly or play to ensure proper use and longevity of the product.

Product Contents:

- 1 PLAYMOBIL Airplane with detachable roof and 360° swivel wheels
- 1 Airport building with control center, billing, and passenger control
- 1 Control Tower with rotating monitors and steerable cameras
- 8 figures (1 pilot, 1 flight attendant, 6 passengers/staff)
- 135 accessories (including luggage, seating, and other airport equipment)

Note: This set contains small parts and is recommended for children aged 4 to 14 years. Adult supervision is advised during assembly and play, especially for younger children.

2. Setup and Assembly

Assembly of the PLAYMOBIL City Action Airport with Airplane is designed to be straightforward. Follow the numbered bags and the visual instructions provided to construct the playset components.

Assembly Steps:

1. **Unpack Components:** Carefully remove all parts from the packaging. Organize them by numbered bags to simplify the assembly process.
2. **Airport Building Assembly:** Begin with the main airport structure. Connect the wall panels, roof, and floor pieces as indicated in the visual guide.
3. **Control Tower Construction:** Assemble the control tower, ensuring the rotating monitor and steerable camera mechanisms are correctly installed.
4. **Airplane Assembly:** Attach the wings, tail, and landing gear to the airplane body. The roof section is designed

to be detachable for easy access to the interior.

5. **Accessory Placement:** Position the various accessories, such as luggage, seating, and figures, within the airport and airplane as desired.



Image 2.1: Visual representation of assembly steps for the PLAYMOBIL Airport and Airplane playset, as depicted on the product packaging.

For detailed visual instructions, refer to the assembly guide included in your product box. Parental assistance is recommended for younger children during assembly.

3. Operating the Playset

The PLAYMOBIL City Action Airport with Airplane offers various interactive features for imaginative play.

Airplane Features:

- **Detachable Roof:** The top section of the airplane can be removed to easily place figures inside the cockpit and passenger cabin.
- **Swivel Wheels:** The airplane features 360° swivel wheels, allowing for smooth movement and taxiing on play

surfaces.



Image 3.1: A close-up view of the PLAYMOBIL airplane cockpit, showing a pilot figure seated at the controls, highlighting the detailed interior.

Airport and Control Tower Features:

- **Control Center:** The airport building includes areas for check-in, security, and passenger waiting.
- **Rotating Monitors:** The control tower features monitors that can be rotated to simulate air traffic control operations.
- **Steerable Cameras:** Cameras on the control tower can be adjusted to monitor different areas of the airport.



Image 3.2: An interior view of the PLAYMOBIL control tower, featuring an air traffic controller figure at a console with multiple screens and microphones, demonstrating the functional design.

4. Maintenance

To ensure the longevity and cleanliness of your PLAYMOBIL playset, follow these simple maintenance guidelines:

- **Cleaning:** All plastic parts (without stickers) can be cleaned under running water. Use a mild soap if necessary. Avoid using harsh chemical agents, as these may damage the plastic or printed details.
- **Drying:** After cleaning, allow all parts to air dry completely before reassembling or storing.
- **Storage:** Store the playset in a clean, dry place away from direct sunlight and extreme temperatures to prevent material degradation.

5. Troubleshooting

If you encounter any issues with your PLAYMOBIL City Action Airport with Airplane, consider the following:

- **Missing Parts:** If any parts are missing upon unboxing, please contact Playmobil customer support with your product model number and a description of the missing component.
- **Assembly Difficulties:** Refer to the detailed visual assembly instructions provided in the box. Ensure all pieces are oriented correctly and snapped firmly into place. Do not force parts together.

- **Damaged Parts:** If any parts are damaged, please contact Playmobil customer support for assistance.

6. Specifications

Feature	Detail
Product Dimensions	18.11 x 11.18 x 5.91 inches (Airplane: Approx. 41 x 44 x 15 cm; Airport: Approx. 46.5 x 23 x 18.5 cm; Tower: Approx. 24 x 15 x 16 cm)
Item Weight	5.4 pounds (1660 g)
Model Number	71153
Recommended Age	4 - 14 years
Material	Plastic
Number of Pieces	146

7. Warranty Information

PLAYMOBIL products are manufactured to high-quality standards. Specific warranty details are typically provided with the product packaging or can be found on the official Playmobil website. Please retain your proof of purchase for any warranty claims.

8. Support

For further assistance, questions, or to purchase replacement parts, please contact Playmobil customer support:

- **Manufacturer:** Playmobil
- **Online Support:** Visit the official [Playmobil Store](#) for product information and support resources.

© 2025 Playmobil. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question