

[Manuals.plus](#) /

› [Peach Street](#) /

› Peach Street Immersion Blender User Manual

Peach Street PE-20/30

Peach Street Immersion Blender User Manual

Model: PE-20/30

INTRODUCTION

Thank you for choosing the Peach Street Immersion Blender. This powerful and versatile kitchen tool is designed to simplify your blending tasks, from creating smooth soups and purees to delicious smoothies and sauces. Please read this manual carefully before first use to ensure safe and optimal operation.



Figure 1: Peach Street Immersion Blender with various color options and packaging.

IMPORTANT SAFETY INSTRUCTIONS

- Always unplug the appliance from the power supply before assembly, disassembly, or cleaning.
- Do not immerse the motor unit in water or any other liquid. Only the detachable blending shaft is submersible.
- Keep hands, hair, clothing, and utensils away from the moving blades during operation to prevent injury.
- Blades are sharp. Handle with care when assembling, disassembling, or cleaning.
- Do not use the appliance for purposes other than its intended use.
- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning

use of the appliance by a person responsible for their safety.

SETUP

Unpacking and Initial Cleaning

1. Carefully remove all packaging materials and promotional labels from the blender.
2. Wash the detachable blending shaft (including the blade guard) in warm, soapy water. Rinse thoroughly and dry.
3. Wipe the motor unit with a damp cloth. Do not immerse the motor unit in water.
4. Ensure all parts are completely dry before assembly.

Assembly

1. Align the blending shaft with the motor unit.
2. Twist the blending shaft clockwise until it locks securely into place. You should hear a click.



Figure 2: The detachable blending shaft easily connects to the motor unit for quick assembly and disassembly.

OPERATING INSTRUCTIONS

General Blending Tips

- Always ensure the blending shaft is fully submerged in the ingredients to prevent splashing.
- Use an up-and-down motion to ensure all ingredients are thoroughly blended.
- For best results, use the blender in a deep pot, bowl, or the included container.
- Do not operate the blender continuously for more than 1 minute. Allow it to cool down for at least 3 minutes before resuming.

Using the Power and Turbo Modes

The Peach Street Immersion Blender features two operating modes:

- **Power Button:** Press and hold the main power button for regular blending tasks, ideal for softer ingredients and general mixing.
- **TURBO Button:** For additional power and speed, press and hold the TURBO button. This mode is perfect for blending tougher ingredients like frozen fruits or hard vegetables, ensuring a smooth consistency.



Figure 3: The immersion blender provides a powerful yet smooth blend, minimizing splatter when used correctly.

Recommended Uses

This versatile immersion blender is perfect for:

- **Soups & Purees:** Directly blend hot soups in the pot for creamy textures. Ideal for baby food purees.
- **Smoothies & Milkshakes:** Quickly mix fruits, vegetables, and liquids for refreshing drinks.
- **Sauces & Dips:** Create smooth sauces, dressings, and dips like mayonnaise or guacamole.
- **Batters:** Effortlessly mix pancake, waffle, or cake batters.



Figure 4: The immersion blender is perfect for a variety of kitchen tasks, including making sauces, dips, and purees.

MAINTENANCE AND CLEANING

Proper cleaning and maintenance will ensure the longevity and performance of your immersion blender.

1. **Unplug:** Always unplug the blender from the power outlet before cleaning.
2. **Detach Blending Shaft:** Press the release buttons on the side of the motor unit and twist the blending shaft counter-clockwise to detach it.
3. **Clean Blending Shaft:** The stainless steel blending shaft and blades are dishwasher safe. For hand washing, rinse under running water immediately after use. Use a brush to clean around the blades carefully.
4. **Clean Motor Unit:** Wipe the motor unit with a soft, damp cloth. Never immerse the motor unit in water or any other liquid.

5. **Drying:** Ensure all parts are completely dry before reassembling or storing.
6. **Storage:** Store the blender in a dry place, ideally detached for compact storage.



Figure 5: The detachable design allows for easy cleaning of the blending shaft, which is dishwasher safe.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Blender does not turn on.	Not plugged in; Power outlet malfunction; Blending shaft not securely attached.	Ensure the blender is properly plugged into a working outlet. Check the outlet with another appliance. Re-attach the blending shaft until it clicks into place.

Problem	Possible Cause	Solution
Poor blending results / Ingredients not smooth.	Too little liquid; Too many ingredients; Ingredients too large/hard; Blending shaft not fully submerged.	Add more liquid. Reduce the amount of ingredients. Cut ingredients into smaller pieces. Ensure the blending shaft is fully submerged and use an up-and-down motion. Use TURBO mode for tougher ingredients.
Blender stops during operation.	Overheating due to continuous use; Motor overload.	Unplug the blender and let it cool down for at least 3 minutes. Reduce the load or amount of ingredients.
Splashing during blending.	Blending shaft not fully submerged; Container too shallow.	Ensure the blending shaft is fully submerged before starting. Use a deeper container or pot.

SPECIFICATIONS

Feature	Detail
Brand	Peach Street
Model Number	PE-20/30
Power Source	AC
Voltage	110 Volts
Wattage	500 Watts
Number of Speeds	1 (with Turbo mode)
Special Features	Adjustable Speed Control, Heavy Duty, Detachable Attachment, Compact
Blade Material	304 Stainless Steel
Product Dimensions	3"D x 3"W x 15.5"H
Item Weight	1.59 pounds
Material Type Free	PFOA Free, Lead Free, BPA Free, PVC Free, PTFE Free, Phthalate Free

Powerful 500 Watts Motor



UP TO 17,000
ROUNDS
PER MINUTE



REGURAL
SPEED
Uses basic
electric power
for softer items

TURBO
SPEED
Uses full
electric power
for tougher
items



Figure 6: The powerful 500-watt motor provides up to 17,000 rounds per minute for efficient blending.

WARRANTY & SUPPORT

For warranty information or technical support, please contact Peach Street customer service through the retailer's platform or visit the official Peach Street website. Please have your model number (PE-20/30) and purchase date available when contacting support.

Visit the [Peach Street Store](#) for more products and information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question