

[Manuals.plus](#) /

› [Yoidesu](#) /

› Yoidesu Retro Bluetooth Speaker User Manual (Model Yoidesum7hgyd0a525663-11)

Yoidesu Yoidesum7hgyd0a525663-11

Yoidesu Retro Bluetooth Speaker User Manual

Model: Yoidesum7hgyd0a525663-11

1. INTRODUCTION

Thank you for purchasing the Yoidesu Retro Bluetooth Speaker. This manual provides essential information for the safe and efficient operation of your device. Please read it thoroughly before use and retain it for future reference.

2. SAFETY INFORMATION

- Do not expose the speaker to water, moisture, or extreme temperatures.
- Avoid dropping or subjecting the speaker to strong impacts.
- Do not attempt to disassemble or repair the speaker yourself. Contact qualified service personnel.
- Keep the speaker away from heat sources and direct sunlight.
- Use only the provided charging cable or a certified equivalent.

3. PRODUCT OVERVIEW

3.1 Package Contents

- Yoidesu Retro Bluetooth Speaker
- USB Charging Cable
- 3.5mm AUX Audio Cable
- User Manual (this document)



Figure 3.1: The Yoidesu Retro Bluetooth Speaker shown with its accompanying USB charging cable and 3.5mm AUX audio cable.

3.2 Controls and Ports



Figure 3.2: Detailed view of the speaker's control panel, including buttons for volume, mode, and power, along with the TF card slot, AUX input, and charging port.

1. **VOL-/PREV:** Volume Down / Previous Track
2. **VOL+/NEXT:** Volume Up / Next Track

3. **MODE:** Switch between Bluetooth, TF Card, AUX, USB, and FM Radio modes
4. **PLAY/PAUSE/CALL:** Play/Pause music, Answer/End calls
5. **MIC:** Built-in Microphone
6. **TF:** TF Card Slot
7. **INPUT:** 3.5mm AUX Input
8. **DC5V:** Micro USB Charging Port
9. **OFF/ON:** Power Switch

4. SETUP

4.1 Charging the Speaker

Before first use, fully charge the speaker. Connect the provided USB charging cable to the DC5V port on the speaker and the other end to a USB power adapter (not included) or a computer's USB port. The charging indicator will illuminate during charging and turn off when fully charged.



Figure 4.1: The speaker is equipped with a 3000mAh battery for extended playback.

4.2 Powering On/Off

To power on the speaker, slide the **OFF/ON** switch to the 'ON' position. To power off, slide the switch to the 'OFF' position.

4.3 Bluetooth Pairing

1. Ensure the speaker is powered on and in Bluetooth mode. If not, press the **MODE** button until you hear the Bluetooth pairing prompt.
2. Enable Bluetooth on your smartphone, tablet, or other Bluetooth-enabled device.
3. Search for available devices and select "Yoidesu Speaker" (or similar name) from the list.
4. Once paired, the speaker will indicate a successful connection.



0-10m/0-32.8ft effective
transmission distance
More stable transmission

Figure 4.2: The speaker can be wirelessly connected to a smartphone or other Bluetooth device for audio playback.

4.4 Connecting via AUX

Insert one end of the 3.5mm AUX audio cable into the **INPUT** port on the speaker and the other end into the audio output jack of your device (e.g., laptop, MP3 player). Press the **MODE** button to switch to AUX mode.

4.5 Using TF Card

Insert a TF (MicroSD) card with MP3, WMA, or MPG audio files into the **TF** card slot. The speaker will automatically switch to TF card mode and begin playback. If not, press the **MODE** button to select TF card mode.



Figure 4.3: The speaker supports TF (MicroSD) cards for direct music playback.

4.6 Using USB

Insert a USB flash drive with MP3, WMA, or MPG audio files into the USB port (if available, typically shared with charging port or a dedicated port). The speaker will automatically switch to USB mode and begin playback. If not, press the **MODE** button to select USB mode.

5. OPERATING INSTRUCTIONS

5.1 Music Playback

- **Play/Pause:** Press the **PLAY/PAUSE/CALL** button.
- **Next Track:** Press and hold the **VOL+/NEXT** button.
- **Previous Track:** Press and hold the **VOL-/PREV** button.
- **Volume Up:** Short press the **VOL+/NEXT** button.
- **Volume Down:** Short press the **VOL-/PREV** button.

5.2 Hands-Free Calling

When connected via Bluetooth to a smartphone:

- **Answer Call:** When an incoming call rings, press the **PLAY/PAUSE/CALL** button.
- **End Call:** During a call, press the **PLAY/PAUSE/CALL** button.
- **Reject Call:** Press and hold the **PLAY/PAUSE/CALL** button for 2 seconds.

5.3 Alarm Clock Function

The speaker features an integrated alarm clock. Refer to the display and control panel for setting the time and alarm. Specific instructions for setting the alarm may vary; generally, long-pressing the **MODE** button or a dedicated clock button (if present) allows for time adjustment.

Wooden clock wireless speaker



Figure 5.1: The speaker's LED display shows the current time, indicating its alarm clock functionality.

5.4 FM Radio

To use the FM radio function, press the **MODE** button until you enter FM radio mode. The speaker will automatically scan and save available stations. Use the **VOL+/NEXT** and **VOL-/PREV** buttons to navigate between saved stations.

Powerful functions

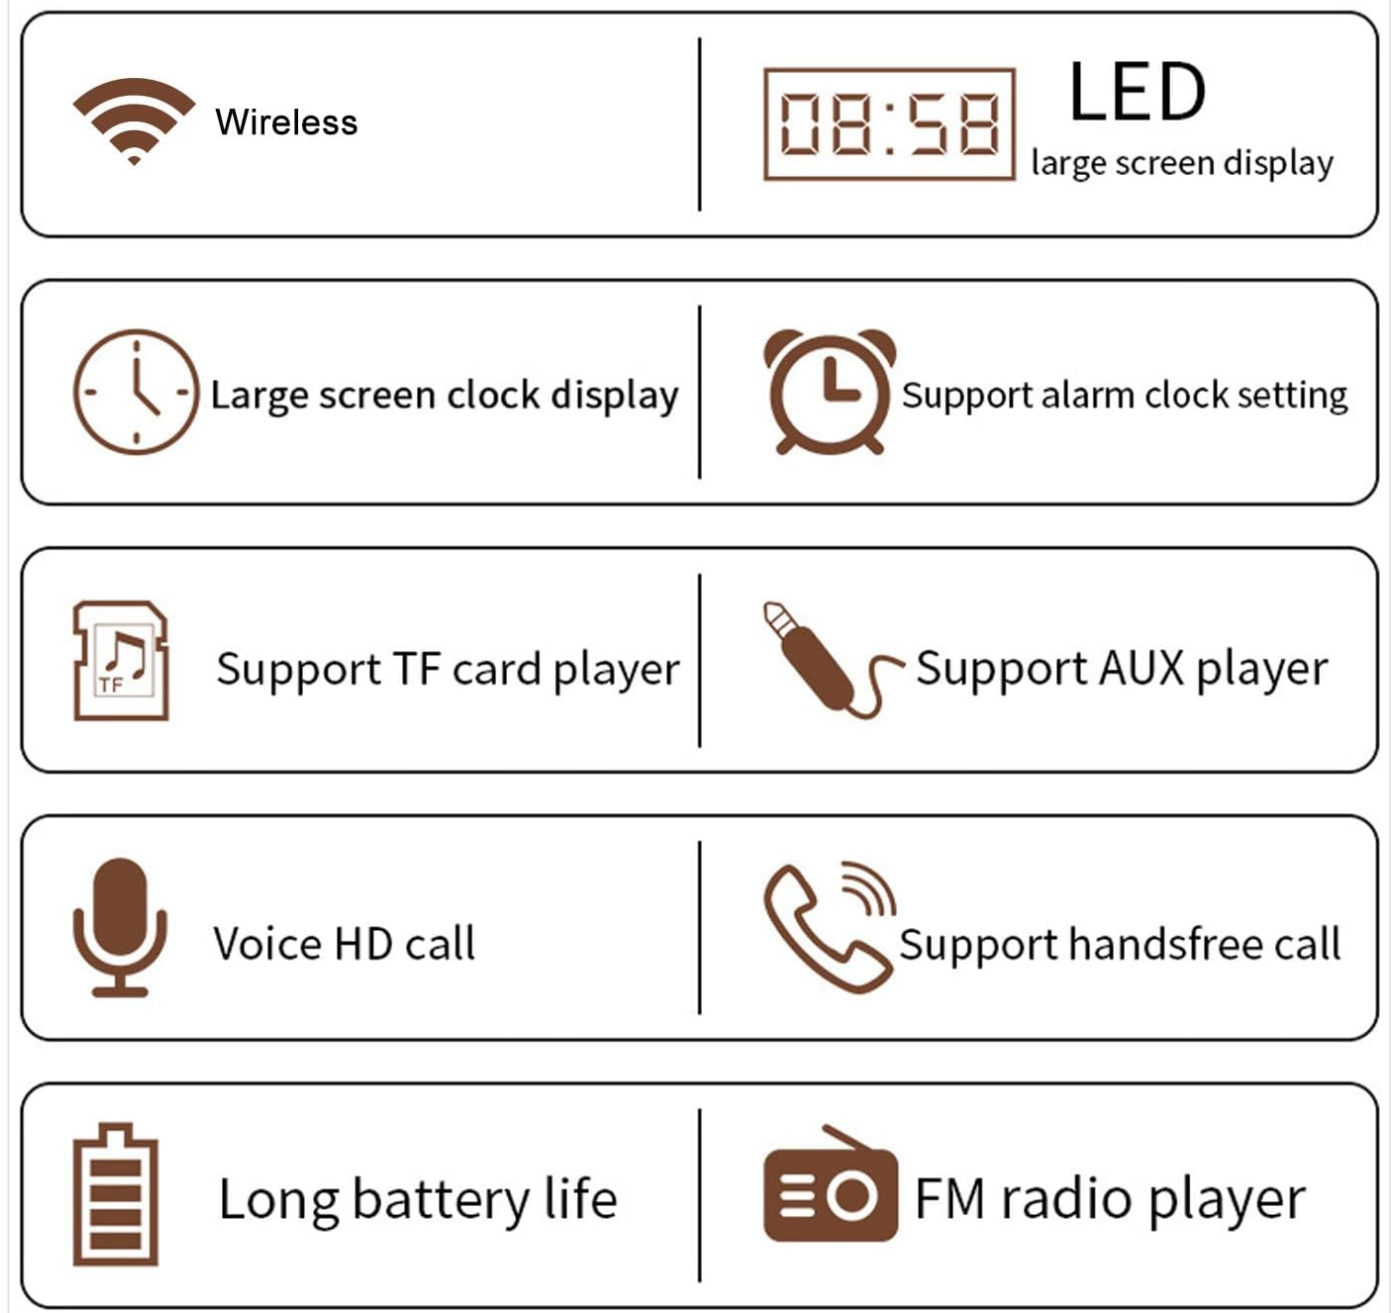


Figure 5.2: Overview of speaker functions, including wireless connectivity, LED display, clock, alarm, TF card, AUX, HD call, hands-free call, long battery life, and FM radio.

6. MAINTENANCE

- Clean the speaker with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Store the speaker in a cool, dry place when not in use.
- Avoid blocking the speaker grilles to ensure optimal sound quality and prevent overheating.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Speaker does not power on	Low battery; Power switch off	Charge the speaker; Slide power switch to 'ON'
No sound	Volume too low; Incorrect mode; Device not connected	Increase volume; Press MODE button to select correct input; Reconnect device
Bluetooth pairing fails	Speaker not in pairing mode; Device Bluetooth off; Too far apart	Ensure speaker is in Bluetooth mode; Enable Bluetooth on device; Move devices closer (within 10m/32.8ft)
TF card not recognized	Card inserted incorrectly; Unsupported file format	Reinsert TF card correctly; Ensure files are MP3, WMA, or MPG

8. SPECIFICATIONS

Feature	Detail
Model Number	Yoidesum7hgyd0a525663-11
Speaker Type	Subwoofer, Surround Sound
Connectivity Technology	Bluetooth, Auxiliary (3.5mm), TF Card, USB
Audio Output Mode	Surround
Speaker Maximum Output Power	5 Watts
Power Source	Battery Powered
Battery Capacity	3000mAh (estimated from image)
Control Method	Buttons on device
Built-in Microphone	Yes (HD mic for hands-free calling)
Supported Audio Formats	MP3, WMA, MPG
Additional Features	LED Clock Display, Alarm Clock, FM Radio
Item Weight	2.99 pounds
Package Dimensions	17.8 x 5.4 x 4.7 inches

9. WARRANTY AND SUPPORT

This product is covered by a standard manufacturer's warranty. For specific warranty terms, please refer to the documentation provided at the time of purchase or contact your retailer. For technical support or service inquiries, please contact the seller or manufacturer directly.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B09WF69MGN>

More documents and user manuals: <https://manuals.plus/>