

Peach Street 500 Watt

Peach Street 500 Watt Immersion Blender Instruction Manual

Model: 500 Watt

[Introduction](#) [Safety Information](#) [Product Components](#) [Setup](#) [Operating Instructions](#)
[Cleaning & Maintenance](#) [Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

Thank you for choosing the Peach Street 500 Watt Immersion Blender. This versatile handheld kitchen appliance is designed to simplify your food preparation, allowing you to effortlessly create smooth soups, purees, smoothies, and more. With its powerful motor and durable stainless steel blades, it delivers consistent results for a variety of culinary tasks. Please read this manual carefully before use to ensure safe and optimal operation.

2. IMPORTANT SAFETY INFORMATION

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before using the appliance.
- To protect against electric shock, do not immerse the motor unit, cord, or plug in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been dropped or damaged in any manner.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter or touch hot surfaces.
- Keep hands and utensils out of the container while blending to prevent the possibility of severe injury to persons or damage to the unit. A scraper may be used but only when the unit is not running.
- Blades are sharp. Handle carefully.

- Do not use the appliance for other than intended household use.

3. PRODUCT COMPONENTS

Your Peach Street Immersion Blender consists of the following main parts:

- **Motor Unit:** The main body containing the 500-watt motor and control buttons.
- **Blender Stick Attachment:** The detachable shaft with stainless steel blades and a splatter-proof head.
- **Power Cord:** For connecting the blender to an electrical outlet.



Image: The Peach Street 500 Watt Immersion Blender in red, showing the motor unit and the blender stick attachment.

Powerful 500 Watts Motor



UP TO 17,000
ROUNDS
PER MINUTE



REGURAL
SPEED
Uses basic
electric power
for softer items

TURBO
SPEED
Uses full
electric power
for tougher
items



Image: The detachable motor unit and blender stick attachment of the Peach Street Immersion Blender, highlighting its modular design for easy cleaning and storage.

4. SETUP

Before first use, wash all parts that will come into contact with food. Ensure the motor unit is unplugged from the power outlet.

1. **Attach the Blender Stick:** Align the blender stick attachment with the motor unit. Push and twist until it clicks securely into place.
2. **Prepare Ingredients:** Place your ingredients into a suitable container (pot, bowl, or blending cup). Ensure the container is deep enough to prevent splashing.
3. **Connect to Power:** Plug the power cord into a standard electrical outlet.

Your browser does not support the video tag.

Video: An official Peach Street video demonstrating the assembly and use of the immersion blender, including attaching the blender stick to the motor unit.

5. OPERATING INSTRUCTIONS

The Peach Street Immersion Blender features two operating modes for versatile blending.

- **Normal Speed:** Press and hold the top button for regular blending tasks, ideal for softer ingredients and general mixing.
- **Turbo Mode:** Press and hold the "TURBO" button for additional power and speed. This mode is perfect for tougher ingredients like frozen fruits or hard vegetables, ensuring a smooth blend.

Usage Tips:

- Immerse the blender stick into the ingredients before turning it on to prevent splashing.
- Move the blender up and down gently to ensure all ingredients are processed evenly.
- Do not operate the blender continuously for more than 1 minute to prevent overheating. Allow it to cool down before resuming.
- Always unplug the blender when not in use or before changing attachments.



Image: The immersion blender in action, blending ingredients in a clear bowl, demonstrating its splatter-proof design and smooth blending capability.



Perfect for:

- Soups & Puree
- Sauces & Dips
- Smoothies
- Milkshakes

Image: The Peach Street Immersion Blender being used directly in a pot to blend soup, showcasing its convenience for in-pot blending.

6. CLEANING AND MAINTENANCE

Proper cleaning and maintenance will extend the life of your immersion blender.

1. **Unplug:** Always unplug the appliance from the power outlet before cleaning.
2. **Detach Blender Stick:** Press the release buttons on the sides of the motor unit and twist to detach the blender stick.
3. **Wash Blender Stick:** The stainless steel blender stick and blades are dishwasher safe. Alternatively, wash them by hand with warm, soapy water. Rinse thoroughly and dry immediately.
4. **Clean Motor Unit:** Wipe the motor unit with a damp cloth. **Do not immerse the motor unit in water or any other liquid.**

5. **Storage:** Store the blender in a dry place. The detachable design allows for compact storage.



Image: The detachable blender stick being rinsed under running water in a sink, illustrating the ease of cleaning the blade attachment.

7. SPECIFICATIONS

Feature	Detail
Brand	Peach Street
Model	500 Watt
Power	500 Watts
Voltage	110 Volts
Speeds	1 (with Turbo mode)

Blade Material	304 Stainless Steel
Dimensions (D x W x H)	3"D x 3"W x 15.5"H
Item Weight	1.56 Pounds
Special Features	Adjustable Speed Control, Compact, Detachable Attachment, Heavy Duty

8. WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the contact details provided with your product packaging or visit the official Peach Street website. Keep your purchase receipt as proof of purchase for any warranty claims. You can visit the Peach Street store for more information:[Peach Street Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question