



Manuals.plus /

› RecZone /

› RecZone LLC Password Safe Electronic Storage Organizer Keeper Device and Stylus Bundle User Manual

## RecZone 595

# RecZone LLC Password Safe Electronic Storage Organizer Keeper Device and Stylus Bundle User Manual

Model: 595 | Brand: RecZone

[Introduction](#)

[Safety Information](#)

[Package Contents](#)

[Product Overview](#)

[Setup](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty & Support](#)

## 1. INTRODUCTION

The RecZone LLC Password Safe is an electronic device designed to securely store your login credentials and other sensitive information offline. This device helps protect your digital identity by keeping your passwords isolated from internet-connected systems, reducing the risk of online hacking. It features a large backlit LCD screen, a full QWERTY keyboard for easy data entry, and built-in flash memory to retain your passwords even during battery changes. The device can store up to 400 website or account entries, accessible via a single PIN number.

## 2. SAFETY INFORMATION

- **Battery Safety:** Use only AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries. Remove batteries if the device will not be used for an extended period.
- **Water Resistance:** This device is **not water resistant**. Avoid exposure to liquids to prevent damage.
- **Temperature:** Do not expose the device to extreme temperatures or direct sunlight.
- **Cleaning:** Use a soft, dry cloth for cleaning. Do not use liquid cleaners or abrasive materials.
- **Disassembly:** Do not attempt to disassemble or repair the device yourself. This will void the warranty.
- **Data Security:** While the device is designed for offline security, always keep it in a safe and secure location to prevent unauthorized physical access.

### 3. PACKAGE CONTENTS

---

Please check the package contents to ensure all items are present:

- RecZone LLC Password Safe Device
- Stylus
- 3 x AAA Batteries (pre-installed or included separately)
- User Manual (this document)

### 4. PRODUCT OVERVIEW

---



Figure 1: RecZone LLC Password Safe Electronic Storage Organizer Keeper Device.

The RecZone Password Safe is a compact, handheld device. It features a large, easy-to-read backlit LCD screen at the top, displaying information clearly. Below the screen is a full QWERTY keyboard for efficient text and number input. Navigation buttons (OK, up, down, left, right) are located to the right of the screen for menu selection and scrolling. A dedicated 'ACTION' button allows for various functions, and 'Shift' and 'Caps Lock' buttons are available for character input. The device also includes a mini stylus for precise keypad entry, which can be stored conveniently. The battery compartment is located on the back of the device.

### 5. SETUP

---

## 5.1. Battery Installation

The device operates on three (3) AAA batteries. These may be pre-installed or included separately in the package. If not pre-installed, follow these steps:

1. Locate the battery compartment cover on the back of the device.
2. Slide the cover open in the direction indicated by the arrow.
3. Insert three (3) AAA batteries, ensuring correct polarity (+/-) as marked inside the compartment.
4. Replace the battery compartment cover, sliding it until it clicks securely into place.

## 5.2. Initial PIN Setup

Upon first use or after a factory reset, you will need to set your personal identification number (PIN). This PIN is your master key to access all stored information. Choose a strong, memorable PIN.

1. Turn on the device by pressing the Power button (usually red).
2. The screen will prompt you to "Please enter PIN:".
3. Since it's the first time, you will be guided to set a new PIN. Follow the on-screen instructions to enter your desired PIN.
4. Confirm your PIN when prompted.
5. Once confirmed, your PIN is set. Remember this PIN as it is essential for accessing your data.

Your browser does not support the video tag.

Video 1: Demonstrates how to store passwords and PIN codes on a similar electronic password manager device.

## 6. OPERATING INSTRUCTIONS

---

### 6.1. Accessing the Device

To access your stored passwords, turn on the device and enter your master PIN when prompted. Press the 'OK' button to confirm.

### 6.2. Adding a New Entry

To add a new website or account entry:

1. From the main menu, select 'ADD' (or similar option, navigate using arrow keys and 'OK').
2. Use the QWERTY keyboard to enter the website/account name. Press 'OK'.
3. Enter the username/login ID. Press 'OK'.
4. Enter the password. Use 'Shift' for uppercase letters and special characters. Press 'OK'.
5. You may have an option to add a password hint or notes. Enter any relevant information. Press 'OK'.
6. The device will save the entry.

### 6.3. Searching for Entries

The device includes a search function to quickly find your stored information:

1. From the main menu, select 'SEARCH' (or similar option).
2. Begin typing the name of the website or account you are looking for. The device will filter results as you type.
3. Use the arrow keys to scroll through the matching entries.
4. Press 'OK' to view the full details of a selected entry.

### 6.4. Editing or Deleting Entries

To modify or remove an existing entry:

1. Search for and select the desired entry.
2. From the entry's detail screen, look for 'EDIT' or 'DEL' (Delete) options. Navigate and select the desired action.
3. Follow the on-screen prompts to make changes or confirm deletion. Be cautious when deleting, as this action is usually permanent.

## 7. MAINTENANCE

---

### 7.1. Battery Replacement

When the battery indicator on the screen shows low power, replace the batteries promptly. The built-in flash memory ensures that all your stored passwords are retained even when the batteries are removed or completely drained. Follow the battery installation steps in Section 5.1.

### 7.2. Cleaning the Device

To keep your Password Safe in optimal condition:

- Wipe the exterior of the device with a soft, dry, lint-free cloth.
- Do not use abrasive cleaners, solvents, or aerosol sprays.
- Avoid getting moisture into any openings.

## 8. TROUBLESHOOTING

---

### 8.1. Device Not Turning On

- Check if the batteries are correctly installed with the proper polarity.
- Replace the batteries with fresh AAA alkaline batteries.

### 8.2. Locked Out (Incorrect PIN Attempts)

For security purposes, the unit will automatically lock for 30 minutes after five (5) consecutive incorrect PIN attempts. During this time, the device cannot be used. Wait for the lockout period to expire before attempting to enter your PIN again.

### 8.3. Erasing All Data (Factory Reset)

The device can be reset to permanently erase all stored data. This action is irreversible. Refer to the device's on-screen menu or specific instructions for the 'RESET' or 'ERASE ALL DATA' function. This is typically found within the 'SETTINGS' menu.

## 9. SPECIFICATIONS

---

Feature	Detail
Brand	RecZone
Model Number	595
Product Dimensions	3.5"D x 4.88"W x 1"H
Item Weight	8.2 ounces (0.23 Kilograms)
Color	Black
Material	Plastic
Lock Type	Electronic lock
Special Feature	Portable
Power Source	3 x AAA Batteries (Alkaline)
Storage Capacity	Up to 400 website/account entries
Screen	Large backlit LCD screen
Keyboard	Full QWERTY keyboard
Data Retention	Built-in flash memory retains passwords during battery change
Security Feature	Automatic 30-minute lockout after 5 incorrect PIN attempts
Connectivity	Not connected to the Internet (offline security)

## 10. WARRANTY & SUPPORT

---

For warranty information, technical support, or any questions regarding your RecZone LLC Password Safe, please refer to the contact information provided in your product packaging or visit the official RecZone website. Keep your purchase receipt as proof of purchase for warranty claims.