

[Manuals.plus](#) /

> [MOPUP](#) /

> MOPUP Automatic Motion-Sensor Bathroom Trash Can User Manual

## MOPUP GCFY18

# MOPUP Bathroom Trash Can User Manual

Model: GCFY18

## INTRODUCTION

---

Thank you for choosing the MOPUP Automatic Motion-Sensor Bathroom Trash Can. This product is designed to provide a hygienic and convenient waste disposal solution for your home. Featuring a touchless motion sensor and durable stainless steel construction, it is ideal for bathrooms, bedrooms, and dormitories. Please read this manual carefully before use to ensure proper operation and maintenance.

## SAFETY INFORMATION

---

- Do not immerse the electronic components of the trash can in water. While designed for bathroom use, direct submersion can cause damage.
- Keep the sensor area clean and unobstructed to ensure proper function.
- Use only the specified battery type and ensure correct polarity during installation.
- Do not force the lid open or closed manually, as this may damage the automatic mechanism.
- Keep out of reach of small children and pets to prevent accidental injury or damage to the unit.
- Dispose of batteries responsibly according to local regulations.

## SETUP

---

### 1. Battery Installation

Locate the battery compartment, typically on the underside of the lid or at the back of the unit. Insert the required batteries (e.g., AA or AAA, check product specifications for exact type) ensuring correct positive (+) and negative (-) polarity. Close the battery compartment securely.



**Figure 1:** Illustration of battery installation within the lid compartment. Ensure correct polarity when inserting batteries.

## 2. Placement

Place the MOPUP trash can on a flat, stable surface in your desired location. Its compact design and waterproof features make it suitable for various rooms, including bathrooms, bedrooms, and dormitories. Ensure there is enough clear space above the sensor for proper operation.



**Figure 2:** The MOPUP trash can seamlessly integrates into different indoor environments, including bathrooms, bedrooms, and living spaces.

## OPERATING INSTRUCTIONS

---

### 1. Automatic Lid Opening (Motion Sensor)

The trash can features a smart motion sensor for hands-free operation. Simply wave your hand or approach the sensor area (usually located on the top front of the lid) within approximately 10-15 cm. The lid will automatically open in about 0.3 seconds. It will remain open for a few seconds (typically 5-7 seconds) before closing automatically. This ensures a hygienic disposal experience.



**Figure 3:** Activating the motion sensor by waving a hand over the lid for touchless opening.

## 2. Knee Induction Opening

For added convenience, the trash can also supports knee induction. Gently bring your knee close to the lower front sensor area. The lid will open automatically, allowing for hands-free disposal without needing to bend down.

# Two ways to open the lid

0.3 seconds fast response



Wave sensor,  
no touch required



Knee induction,  
no need to bend

**Figure 4:** Two convenient ways to open the lid: wave sensor for quick access and knee induction for hands-free operation without bending.

### 3. Manual Opening (If Applicable)

In case of battery depletion or if manual operation is preferred, some models may feature a manual open/close button or a mechanism to lift the lid. Refer to the specific design of your unit. Avoid forcing the lid if it's an automatic-only model.

### 4. Changing the Trash Bag

To change the trash bag, open the lid (either automatically or manually). Remove the inner ring or frame that holds the bag in place. Lift out the full bag, dispose of it, and insert a new trash bag. Secure the new bag by placing the inner ring/frame back into position, ensuring the bag edges are neatly tucked. Close the lid.

# Completed in one second, one pull to pack

No contact with garbage in the whole process



Figure 5: The simple process of changing the trash bag, ensuring no direct contact with waste.

## MAINTENANCE

### 1. Cleaning the Unit

The MOPUP trash can is made of stainless steel and features sealed electronics, making it suitable for damp environments. To clean, wipe the exterior with a soft, damp cloth and a mild detergent. Avoid abrasive cleaners or harsh chemicals that could damage the finish or electronic components. Do not rinse the lid directly under water. For the interior, wipe with a damp cloth as needed.

# Sealed electronics, waterproof for everyday use

Especially suitable for bathrooms and kitchens



**Figure 6:** The sealed electronics and polished finish make the trash can easy to clean and resistant to splashes, ideal for bathrooms and kitchens.

## 2. Battery Replacement

When the lid's response becomes slow or stops functioning, it is likely time to replace the batteries. Follow the battery installation steps outlined in the "Setup" section. Always replace all batteries at once with new ones of the same type.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Lid does not open automatically.	Batteries are low or dead. Batteries are inserted incorrectly. Sensor is dirty or obstructed. Object too far from sensor.	Replace batteries. Check battery polarity. Clean sensor area with a soft, dry cloth. Ensure hand/knee is within 10-15 cm of sensor.
Lid opens and closes repeatedly.	Sensor is in a high-traffic area. Direct sunlight or strong artificial light interfering with sensor.	Relocate the trash can to a less busy area. Adjust lighting or reposition the unit.
Lid closes too quickly or too slowly.	Low battery power. Obstruction in lid mechanism.	Replace batteries. Check for any debris or objects blocking the lid's movement.

## SPECIFICATIONS

Feature	Detail
Brand	MOPUP
Model Number	GCFY18
Colour	Grey
Material	Stainless Steel
Capacity	4 gallons
Opening Mechanism	Motion-Sensor, Knee Induction
Product Dimensions (L x W x H)	31.75 x 17.78 x 38.1 cm
Item Weight	1.81 kg
Recommended Uses	Indoor (Bathroom, Bedroom, Dormitory)
Special Feature	Automatic, Waterproof Electronics
Finish Type	Polished



**Figure 7:** Detailed dimensions of the MOPUP trash can, showing height, width, and depth.

## WARRANTY AND SUPPORT

MOPUP is committed to providing high-quality products. For specific warranty information regarding your MOPUP Bathroom Trash Can, please refer to the warranty card included with your purchase or visit the official MOPUP website. If you encounter any issues or have questions not covered in this manual, please contact MOPUP customer support through the retailer where you purchased the product or via the contact information provided on the official MOPUP website.

Please have your model number (GCFY18) and purchase date ready when contacting support.