



Manuals.plus /

› charmast /

› Charmast 10000mAh Power Bank User Manual

charmast W1148

Charmast 10000mAh Power Bank User Manual

Model: W1148

INTRODUCTION

Thank you for choosing the Charmast 10000mAh Power Bank. This portable charger is designed for convenience and versatility, featuring built-in cables and multiple output/input options to keep your devices powered on the go. Its compact and lightweight design makes it an ideal companion for daily use and travel.

This manual provides essential information on setting up, operating, maintaining, and troubleshooting your power bank. Please read it carefully before use to ensure optimal performance and longevity of your device.

PACKAGE CONTENTS

- 1 x Charmast 10000mAh Power Bank
- 1 x User Manual (this document)
- 1 x Mesh Pouch

Packaging Accessories



10000mAh Power Bank * 1

User Manual * 1

Mesh Pouch * 1

Image: Charmast Power Bank and its included accessories: the power bank itself, a user manual, and a mesh carrying pouch.

PRODUCT OVERVIEW

The Charmast Power Bank is equipped with a digital LED display to show the remaining battery percentage, ensuring you always know when to recharge. It features multiple built-in cables and additional ports for broad compatibility.



Image: The Charmast 10000mAh Power Bank, showcasing its sleek black design, integrated charging cables, and clear digital LED display.

Inputs and Outputs

This power bank offers a comprehensive set of charging options:

- **Outputs (6 Total):**

- Built-in Lightning Cable Output
- Built-in USB-C Cable Output
- Built-in Micro USB Cable Output
- USB Output 1 (USB-A port)
- USB Output 2 (USB-A port)
- USB-C Input/Output Port (functions as output when charging devices)

- **Inputs (3 Total):**

- Built-in USB-A Cable Input (for recharging the power bank)
- USB-C Input/Output Port (functions as input when recharging the power bank)
- Micro USB Input Port (for recharging the power bank)

6 Outputs & 3 Inputs

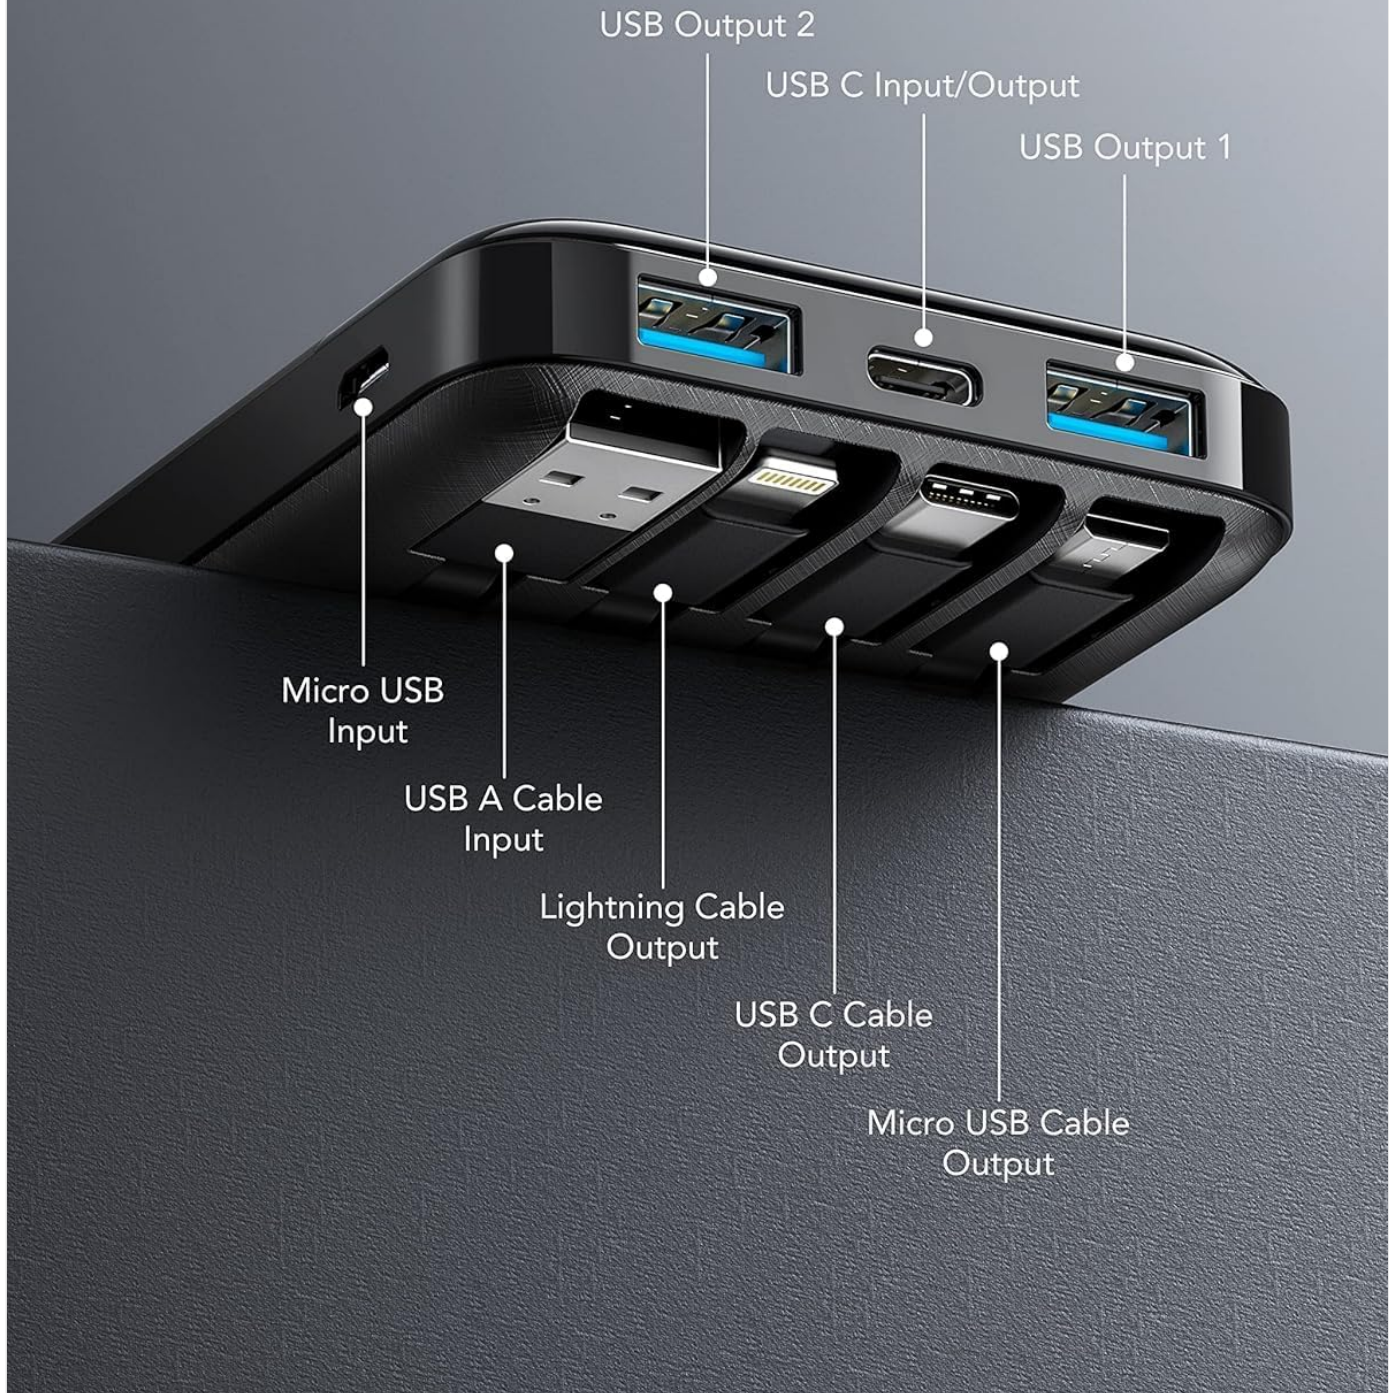


Image: A detailed diagram illustrating the location and type of all six output ports (three built-in cables, two USB-A ports, one USB-C port) and three input ports (built-in USB-A cable, USB-C port, Micro USB port) on the power bank.

SETUP AND FIRST USE

Before using your Charmast Power Bank for the first time, it is recommended to fully charge it.

1. **Initial Charge:** Connect the power bank to a power source using one of its input options (built-in USB-A cable, USB-

C port, or Micro USB port). The LED display will show the charging progress.

2. **Full Charge Indication:** The LED display will show "100" when the power bank is fully charged.



Image: The Charmast Power Bank held in hand, with its LED digital display clearly showing "100", indicating a full charge.

Note: Only one input method can be used at a time for recharging the power bank.

OPERATING INSTRUCTIONS

Charging Your Devices

The power bank can charge up to six devices simultaneously.

1. **Identify Cable/Port:** Select the appropriate built-in cable (Lightning, USB-C, Micro USB) or use your own cable with one of the USB-A or USB-C output ports.
2. **Connect Device:** Plug the cable into your device's charging port. The power bank will automatically begin charging.
3. **Monitor Charge:** The LED display on the power bank will show the remaining battery percentage.

Up to 6 Devices Charging Simultaneously

3 Cable Outputs + 3 Outputs



Image: An overhead view showing the Charmast Power Bank connected to and simultaneously charging multiple electronic devices, including smartphones and a speaker, demonstrating its multi-output capability.

Power for Days

1.6 Charge
Samsung S20

2.0 Charge
iPhone 11

1.3 Charge
iPad mini 6

1.5 Charge
Fire 7 tablet

0.8 Charge
Tab S8



Image: A hand holding the Charmast Power Bank, which is connected via its built-in cable to a smartphone, illustrating its use for portable charging.

Recharging the Power Bank

You have three options to recharge your power bank:

- **Using Built-in USB-A Cable:** Pull out the built-in USB-A cable and plug it into any USB wall adapter or computer USB port.

- **Using USB-C Port:** Connect a USB-C cable from a power source to the power bank's USB-C input/output port.
- **Using Micro USB Port:** Connect a Micro USB cable from a power source to the power bank's Micro USB input port.

The LED display will show the battery percentage increasing during charging. It is fully charged when the display shows "100".

MAINTENANCE AND CARE

- Keep the power bank away from extreme temperatures (hot or cold), direct sunlight, and humid environments.
- Do not disassemble, modify, or attempt to repair the device yourself. This will void the warranty and may cause safety hazards.
- Avoid dropping or subjecting the power bank to strong impacts.
- Clean the power bank with a soft, dry cloth. Do not use harsh chemicals or abrasive materials.
- If storing for an extended period, charge the power bank to approximately 50-70% every three months to preserve battery health.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Power bank not charging devices.	Low battery on power bank; incorrect cable/port; device not compatible; loose connection.	Recharge power bank; ensure correct cable/port is used; check device compatibility; ensure connections are secure.
Power bank not recharging.	Faulty charging cable/adaptor; incorrect input port; only one input can be used at a time.	Try a different charging cable or adaptor; ensure you are using a valid input port; disconnect other input cables if multiple are connected.
LED display not working.	Power bank is off; internal issue.	Press the power button to activate the display; if issue persists, contact customer support.
Slow charging.	Cable quality; device input limit; multiple devices charging.	Use original or high-quality cables; note that charging multiple devices may reduce individual charging speed.

SPECIFICATIONS

Feature	Detail
Model Number	W1148
Battery Capacity	10000mAh
Battery Cell Composition	Lithium Polymer
Number of Outputs	6 (3 built-in cables, 2 USB-A ports, 1 USB-C port)
Number of Inputs	3 (1 built-in USB-A cable, 1 USB-C port, 1 Micro USB port)
Voltage	5 Volts
Charging Time	Approximately 4.5 Hours (using optimal input)
Dimensions (L x W x H)	14.43 x 6.69 x 1.77 cm
Weight	240 g
Compatible Devices	Smartphones, Tablets, and other 5V USB-powered devices

WARRANTY AND SUPPORT

Charmast provides an **18-month warranty** for this power bank, covering manufacturing defects and issues arising from normal use. Additionally, lifetime technical support is available to assist you with any questions or problems you may encounter.

For warranty claims or technical assistance, please contact Charmast customer support through the retailer where you purchased the product or visit the official Charmast website for contact information.

Please retain your purchase receipt as proof of purchase for warranty purposes.