

[Manuals.plus](#) /

> [OGORI](#) /

> OGORI Cordless Electric Mop User Manual

## OGORI B07

# OGORI Cordless Electric Mop User Manual

Model: B07

## INTRODUCTION

Thank you for choosing the OGORI Cordless Electric Mop. This powerful dual-motor spin mop is designed to provide efficient and effortless cleaning for various hard floor surfaces, including vinyl, hardwood, tile, and laminate floors. Featuring a water spray function, LED headlight, and an adjustable handle, it simplifies your cleaning routine. Please read this manual thoroughly before use to ensure proper operation and maintenance.

## SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury. Keep the appliance out of reach of children. Do not immerse the main unit in water. Use only the provided power adapter for charging. Do not use the mop if any part is damaged. For detailed safety guidelines, refer to the full user manual.

**Important Note:** This product includes a 1-YEAR FREE BATTERY REPLACEMENT and LIFETIME TECHNIQUE SUPPORT from OGORI.

## PACKAGE CONTENTS

Before assembly, please verify that all items listed below are included in your package:

- 1 x Handle
- 1 x Adjustable Tube
- 1 x Mop Head
- 1 x Detachable Battery
- 2 x AAA Battery (for LED headlight)
- 1 x Funnel
- 1 Pair of Cleaning Pads (Soft Pink)
- 1 Pair of Waxing Mop Pads (Blue)
- 1 Pair of Scrubby Pads (White)

- 1 x Power Charging Cord
- 1 x User Manual



Image: The OGORI Cordless Electric Mop main unit shown with the three types of included mop pads: pink cleaning pads, blue waxing pads, and white scrubby pads.

## SETUP AND ASSEMBLY

---

1. **Attach the Handle:** Connect the handle to the adjustable tube, ensuring it clicks securely into place.
2. **Connect the Tube to Mop Head:** Insert the adjustable tube into the mop head until it is firmly connected.
3. **Install Battery:** Insert the detachable battery into its compartment on the mop head. Ensure it is fully charged before first use.
4. **Attach Mop Pads:** Select the desired mop pads (cleaning, waxing, or scrubby) and attach them to the bottom of the mop head. The pads are designed to adhere easily.
5. **Charge the Mop:** Connect the power charging cord to the mop and a power outlet. The battery indicator lights will show charging status. A full charge takes approximately 2.5-3 hours.



## DETACHABLE BATTERY

Support Powerful Spin Mop Up To 60mins Working Time



50-60 mins

Dry Mopping

30-40 mins

Wet Mopping

2.5-3 hours

Fast Charging

2550mAh

Battery Capacity

Image: A close-up view illustrating the detachable battery and the charging process for the OGORI Electric Mop. The image also displays battery life estimates for dry and wet mopping, and charging time.

### OPERATING INSTRUCTIONS

#### 1. Power On/Off and Operation

Press the power button on the handle to turn the mop on. The dual powerful motors will begin spinning, and the mop will automatically move forward, assisting with cleaning. To turn off, press the power button again.

# DUAL MOTOR & LESS THAN 50dB NOISE

Powerful clean, optimized noise reducing technology brings you a low noise working experience.




Image: An illustration highlighting the dual powerful motors of the OGORI Electric Mop, emphasizing its 300r/min rotating speed and quiet operation (less than 50dB noise level).

## 2. Water Spray Function

The mop features a built-in 300ml water tank. To fill, open the water tank cap and use the included funnel to add water and cleaning fluid. The recommended ratio of cleaning fluid to water is 1:30. Press the water spray button located on the grip to dispense liquid onto the floor as needed during cleaning.

# ON-DEMAND SPRAY

Spray trigger allows you to control how much formula you want during cleaning.

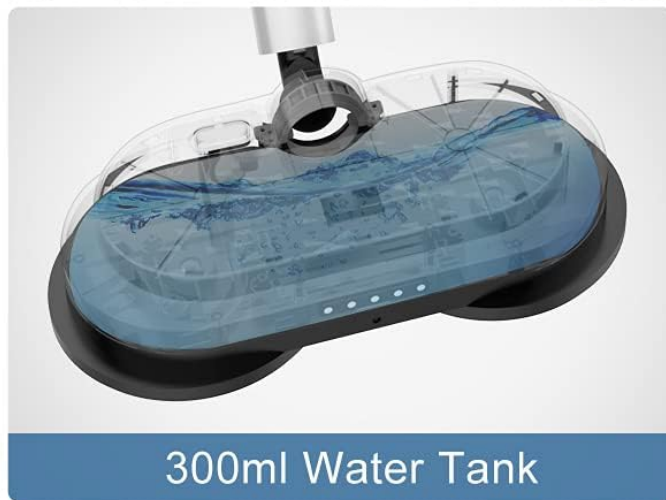

300ml Water Tank



Easy to Fill

Image: This image demonstrates the on-demand spray feature, showing the spray trigger on the handle and a diagram of the 300ml water tank, along with an illustration of how to easily fill it.

### 3. LED Headlight

The mop head is equipped with powerful LED headlights. These lights illuminate the cleaning path, making it easier to spot dirt, dust, and stains, especially in dimly lit areas or under furniture.

# LED HEAD LIGHTS, CORDLESS FOR EVERY CORNERS


Cordless design with LED head light let you clean every corners around funitres easily. Stain can't hide any more.



No Time-consuming & Laborious



No Knee Pain & Backache

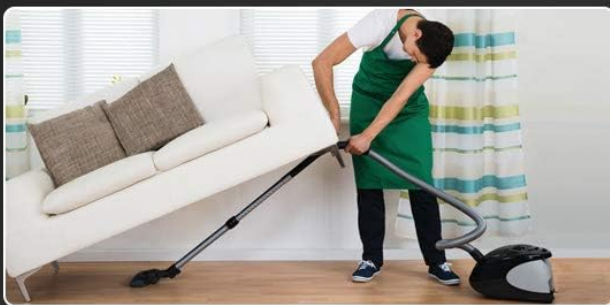

No Space Restricted



No Harmful to Floor

Image: The OGORI Electric Mop is shown with its LED headlights activated, casting light on the floor to reveal hidden dirt and debris, particularly useful for cleaning under furniture.

## 4. Adjustable Grip Pole and Maneuverability

The grip pole can be adjusted in length from 39 inches to 50 inches to suit your height and comfort. The mop head can also adjust its cleaning angle up to 180° horizontally or 90° vertically, allowing it to reach extremely low places such as under sofas or beds.



Image: This image illustrates the mop's flexibility, showing it easily reaching and cleaning under a bed and other low-clearance furniture, thanks to its adjustable handle and low-profile design.

## 5. Mop Pad Usage

- **Soft Pink Cleaning Pads:** Ideal for general cleaning, wiping off stains, and absorbing pet fur, hair, or dust.
- **Blue Waxing Pads:** Designed for cleaning and waxing floors, providing a polished finish.
- **White Scrubby Pads:** Best for tackling tough and sticky messes on hard floors. For stubborn stains, it is recommended to soak the area with cleaning liquid or water for 2-3 minutes before mopping.



Image: This image showcases the reusability and machine washability of the mop pads, along with examples of different areas and floor types where the mop can be effectively used, such as laundry rooms, bathrooms, kitchens, and hardwood floors.



Image: A user operating the OGORI Electric Mop, with an accompanying graphic illustrating its effectiveness against various stains (e.g., tea, splotch, dust, wine) and its suitability for different floor types (tile, wood, laminate, marble).

## MAINTENANCE

- **Cleaning Mop Pads:** The included mop pads are reusable and machine washable. After each use, remove the pads from the mop head and wash them according to their care instructions. Allow them to air dry completely before reattaching or storing.
- **Water Tank:** After each use, empty any remaining liquid from the water tank. Rinse the tank with clean water to prevent residue buildup. Do not put cleaning solutions directly into the water tank that are not recommended for spray mops.
- **Mop Head and Body:** Wipe the mop head and main body with a damp cloth to remove any dirt or dust. Do not use abrasive cleaners or immerse the unit in water.
- **Storage:** The OGORI electric tile floor mop features a free-standing design, allowing it to stand upright without leaning. Store the mop in a dry place away from direct sunlight.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Mop does not turn on.	Battery is not charged or not properly installed.	Ensure the detachable battery is fully charged and correctly inserted. Check the power charging cord connection.
Water spray not working.	Water tank is empty or clogged.	Refill the water tank. Check for any blockages in the spray nozzle and clean if necessary.
Mop pads not cleaning effectively.	Pads are dirty or worn out. Incorrect pad type for the task.	Clean or replace mop pads. Ensure you are using the appropriate pad type for the floor and stain. For stubborn stains, pre-soak the area.
Mop is making unusual noise.	Obstruction in the motor area or loose parts.	Turn off the mop and inspect the mop head for any foreign objects. Ensure all parts are securely assembled. If the issue persists, contact customer support.

## SPECIFICATIONS

**Model Number:** B07

**Product Dimensions:** 3.94 x 3.15 x 3.15 inches; 8.6 Pounds

**Water Tank Capacity:** 300 Milliliters

**Battery Type:** Detachable (1 included), 2 AAA batteries (for LED headlight, included)

**Charging Time:** Approximately 2.5-3 hours

**Motor Speed:** Up to 300r/min

**Noise Level:** Less than 50dB

**Adjustable Pole Length:** 39" to 50"

**Manufacturer:** OGORI

**Specific Uses:** Cordless Electric Mop for Hardwood / Tile / Wood / Laminate / Vinyl / Marble Floors

## WARRANTY AND SUPPORT

OGORI is committed to providing excellent customer service. Your OGORI Cordless Electric Mop comes with **6-month product warranty**. Additionally, we offer a **1-YEAR FREE BATTERY REPLACEMENT** and **LIFETIME TECHNIQUE SUPPORT**.

If you encounter any problems or have questions regarding your cordless spin mop, please do not hesitate to contact OGORI customer support. We aim to respond and assist you within 24 hours.

For support, please visit the official OGORI website or refer to the contact information provided in your product packaging.