

Smartby SMTB-SANYO-OTT

Universal Replacement Remote for SANYO TVs

Model: SMTB-SANYO-OTT

1. INTRODUCTION

This manual provides comprehensive instructions for the operation and maintenance of your new Universal Replacement Remote for SANYO TVs. This remote is designed to be compatible with a wide range of SANYO LED, LCD, and Smart TVs, excluding models with built-in Roku functionality. Please read this manual thoroughly before use to ensure proper functionality and to maximize your product experience.

2. PRODUCT OVERVIEW

The Smartby Universal Replacement Remote is a pre-programmed remote control designed for immediate use with compatible SANYO televisions. It features dedicated hotkeys for popular streaming services and standard television controls.

2.1 Key Features

- No setup or pairing required for most SANYO TV models.
- Dedicated hotkeys for Netflix, YouTube, VUDU, and PIX SHAPE.
- Compatible with SANYO LED, LCD, and Smart TVs (excluding Roku built-in models).
- Replaces numerous original SANYO remote models.

2.2 Package Contents

- 1 x Smartby Universal Replacement Remote Control
- *Note: Instructions and batteries are not included in the package.*

2.3 Remote Control Layout



Image: Front view of the Smartby Universal Replacement Remote Control, showing all buttons including power, number pad, channel, volume, navigation, and hotkeys for Netflix, YouTube, VUDU, and PIX SHAPE.



Replacement Remote for All **SANYO** TV, LCD, LED, Smart TVs

- No Setup Required
- Netflix/YouTube/VUDU/PIX SHAPE Hot Keys

Universal **SANYO** TV Remote for:

- MC42FN01, MC42NS00, RC200NS00, NH315UP, NH312UP, NH311UP, NH316UP, NH414UD, NH002UD, NH316UD, NH432UD
- GXEA, GXGA, GXHA, GXJA, GXFA, GXEC, GXDB, GXCF, GXCC, GXCB, GXBJ, GXCA, GXBM, GXBL, MC42NS00, HTR-029, GXBG, GXBD, GXBE and more

Image: The remote control shown alongside text highlighting its key features: "Replacement Remote for All SANYO TV, LCD, LED, Smart TVs", "No Setup Required", "Netflix/YouTube/VUDU/PIX SHAPE Hot Keys", and a list of compatible SANYO remote models.





Image: A side-by-side view of the remote control, displaying both its front (button side) and its plain black back side.



Image: A three-panel view showing the front, side profile, and back of the remote control, illustrating its ergonomic design and slim profile.



Image: A detailed close-up of the remote control's front, emphasizing the texture of the buttons and the clear labeling of functions.



Image: An angled shot of the remote control, providing a perspective that highlights its overall shape and button arrangement.

3. SETUP

3.1 Installing Batteries

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards to open.
3. Insert two AAA batteries (not included), ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.

Important: Always use new batteries of the same type. Do not mix old and new batteries, or different types of batteries. Remove batteries if the remote will not be used for an extended period.

3.2 Initial Use (No Setup Required)

This universal replacement remote is pre-programmed for most SANYO TV models. No manual setup, programming, or pairing is typically required. Once batteries are installed, the remote should function immediately with your compatible SANYO television.

To test functionality, point the remote at your SANYO TV and press the **Power** button. The TV should turn on or off. If it does not respond, ensure the remote is pointed directly at the TV's infrared receiver and that there are no obstructions.

4. OPERATING INSTRUCTIONS

This section details the functions of the various buttons on your Smartby Universal Replacement Remote.

4.1 Basic TV Controls

Button	Function
Power (●)	Turns the TV on or off.
Mute ()	Mutes or unmutes the TV audio.
Number Pad (0-9)	Directly enters channel numbers.
SUB CH	Accesses sub-channels (e.g., 7.1, 7.2).
VOL +/-	Adjusts the volume level up or down.
CH ^/v	Changes the TV channel up or down.
SOURCE	Cycles through available input sources (HDMI, AV, etc.).
MENU	Opens the TV's main menu.
OK	Confirms selections within menus.
Navigation Arrows (Up, Down, Left, Right)	Navigates through menus and options.
EXIT	Exits the current menu or screen.
INFO	Displays information about the current program or input.
PICTURE	Accesses picture settings.
TV	Switches to TV mode.
USB	Accesses USB media playback.

Button	Function
SMART	Opens the Smart TV home screen or app launcher.
CAPTION	Toggles closed captions on/off.
RESET	Resets certain TV settings (functionality may vary by TV model).
AUDIO	Accesses audio settings or audio track selection.
FAV	Accesses favorite channels or content.
P.MODE	Cycles through picture modes (e.g., Standard, Movie, Dynamic).
S.MODE	Cycles through sound modes (e.g., Standard, Music, Movie).
SLEEP	Sets the sleep timer.

4.2 Streaming Hotkeys

- **Netflix:** Directly launches the Netflix application.
- **YouTube:** Directly launches the YouTube application.
- **VUDU:** Directly launches the VUDU application.
- **PIX SHAPE:** Directly launches the PIX SHAPE application (functionality may vary based on TV model and region).

Note: For streaming hotkeys to function, your SANYO Smart TV must be connected to the internet and the respective applications must be installed and accessible on your TV.

5. MAINTENANCE

5.1 Cleaning the Remote

To clean the remote control, gently wipe its surface with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not use harsh chemicals, abrasive cleaners, or spray liquids directly onto the remote.

5.2 Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Follow the battery installation steps in Section 3.1. Dispose of used batteries according to local regulations.

6. TROUBLESHOOTING

If you experience issues with your remote control, please refer to the following common solutions:

Problem	Possible Cause / Solution
---------	---------------------------

Problem	Possible Cause / Solution
Remote not responding to TV.	◦ Batteries: Check if batteries are inserted correctly (+/-). Replace with fresh AAA batteries. ◦ Line of Sight: Ensure there are no obstructions between the remote and the TV's infrared sensor. Point the remote directly at the TV. ◦ Distance: Ensure you are within the effective range of the remote (typically up to 20 feet). ◦ TV Compatibility: Verify your SANYO TV model is not a Roku built-in TV, as this remote is not compatible with those models.
Some buttons do not work.	◦ TV Model Variation: Some advanced functions or specific hotkeys may not be supported by all SANYO TV models. ◦ Application Status: For streaming hotkeys (Netflix, YouTube), ensure your TV is connected to the internet and the applications are installed and functional on your TV. ◦ Stuck Button: Check if any button is physically stuck.
Remote works intermittently.	◦ Low Batteries: Replace batteries. ◦ Interference: Other electronic devices or strong light sources might interfere with the infrared signal. Try using the remote in a different environment.

7. SPECIFICATIONS

Feature	Detail
Model Number	SMTB-SANYO-OTT
Brand	Smartby
Product Dimensions	7.8 x 2 x 0.75 inches
Item Weight	3 ounces
Connectivity Technology	Infrared (IR)
Compatible Devices	SANYO Televisions (LCD, LED, Smart TVs, excluding Roku built-in)
Power Source	2 x AAA Batteries (not included)

8. WARRANTY AND SUPPORT

Specific warranty information for this product is typically provided at the point of purchase or within the product packaging. For detailed warranty terms and conditions, please refer to the documentation included with your purchase or contact the retailer.

For technical support or inquiries regarding product compatibility, please contact Smartby customer service through the retailer's platform or their official website. Please have your product model number (SMTB-SANYO-OTT) and purchase details ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question