

[Manuals.plus](#) /

› [NOBKLEN](#) /

› NOBKLEN 10.1 Inch Digital Picture Frame Instruction Manual

NOBKLEN Digital Picture Frame WiFi 10.1 Inch

NOBKLEN 10.1 Inch Digital Picture Frame Instruction Manual

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your NOBKLEN 10.1 Inch Digital Picture Frame. Please read this guide thoroughly to ensure proper usage and to maximize your enjoyment of the product.

PRODUCT OVERVIEW

What's in the Box

Upon unboxing, please verify that all components are present:

- NOBKLEN Digital Picture Frame (1 pc)
- Power Adapter (1 pc)
- OTG Cable (1 pc)
- User Manual (1 pc)



Image: Contents of the NOBKLEN Digital Picture Frame packaging.

Product Features

- **10.1 Inch IPS Full HD Touchscreen:** Provides clear and vibrant display of photos and videos.
- **32GB Internal Storage:** Ample space for storing a large collection of memories.
- **Wi-Fi Connectivity:** Enables instant sharing of photos and videos from anywhere via the Frameo app.
- **Frameo App Integration:** Seamlessly send photos and short videos (up to 15 seconds) directly to the frame from iOS and Android devices.
- **Auto-Rotate Function:** Automatically adjusts display orientation for both landscape and portrait viewing.
- **Motion Sensor:** Energy-saving feature that turns the screen off after 30 minutes of no motion detection.
- **Caption and Reaction Features:** Add text captions to photos and react to received content directly on the frame.

Specifications

Specification	Detail
Product Dimensions	10.2 x 7.2 x 0.99 inches
Item Weight	2.51 pounds
Screen Size	10.1 Inches
Resolution	800p
Compatible Devices	Frameo app
Color	Black
Manufacturer	NOBKLEN

SETUP GUIDE

Initial Setup

Follow these steps to set up your NOBKLEN Digital Picture Frame:

1. **Power On:** Plug in your Frameo using the provided power adapter. The frame will boot up automatically.
2. **Select Language:** Choose your preferred language from the list displayed on the screen.
3. **Connect to Wi-Fi:** Select your Wi-Fi network from the list and enter the password. The frame will indicate when it's successfully connected.
4. **Check for Updates:** The frame will automatically check for available software updates. If an update is found, press 'Download Update' to install it. This process may take a few minutes.
5. **Name Your Frame:** Enter your name and the location of the frame (e.g., 'Living Room', 'Kitchen'). This name will be visible to friends and family when they send photos.
6. **Set Time Zone:** Select the correct time zone for your location from the provided list.

Your frame is now set up and ready to receive photos and videos.

Your browser does not support the video tag.

Video: A step-by-step guide on how to set up your Frameo digital picture frame, covering initial power-on, language selection, Wi-Fi connection, and basic configuration.

OPERATING INSTRUCTIONS

Adding Friends

To allow friends and family to send photos and videos to your frame, they need to be added as friends:

1. **Generate Code:** Tap the screen to open the quick menu, then press the 'Add Friend' icon. A unique code will appear on your screen, valid for 12 hours.
2. **Share Code:** Share this code with your friends and family via text, email, or phone call.
3. **Friend Downloads App:** Your friends need to download and install the free Frameo app from the App Store (iOS) or Google Play (Android).
4. **Friend Enters Code:** In the Frameo app, your friend will press the 'Add Friend' icon (top right or top left, depending on their device) and enter the code you provided.

Once the code is entered, your friends are connected and can start sending photos and videos to your frame.

Your browser does not support the video tag.

Video: Instructions on how to add friends to your Frameo digital picture frame, detailing the process of generating and sharing a unique code for connection.

Sending Photos

To send photos to your frame using the Frameo app:

1. **Select Photos:** Open the Frameo app. In the gallery overview, select the photos you wish to send. You can select up to 10 photos at once using the multi-select option.
2. **Choose Receivers:** Press 'Next' (iOS) or the next button (Android). From the list, select the frames you want to send the photos to. You can send to multiple frames simultaneously.
3. **Add Captions:** Write a short caption for your photos. You can add the same caption for all selected photos or write different captions for individual photos.
4. **Choose Important Part:** Adjust the photo to ensure the most important part is visible within the circular preview. This ensures optimal display regardless of the frame's orientation.
5. **Send Photos:** Press the 'Send Photos' button. The photos will appear on the recipient's frame shortly after.

Your browser does not support the video tag.

Video: A guide on how to send photos from your smartphone to a Frameo digital picture frame using the Frameo app, including selecting photos, adding captions, and adjusting the display area.

Sending Videos

To send videos to your frame using the Frameo app:

1. **Select Video:** Open the Frameo app. In the gallery overview, select the video you wish to send. Video clips can be up to 15 seconds long.
2. **Choose Receivers:** Press 'Next' (iOS) or the next button (Android). From the list, select the frames you want to send the video to.
3. **Add Caption:** Write a short caption or comment for your video.
4. **Adjust Video:** Pan through your video by dragging along the timeline or move the handles to adjust the length (3 to 15 seconds). You can also remove the audio by pressing the speaker button.
5. **Send Video:** Press the 'Send Video' button. The video will appear on the recipient's frame shortly after.

Your browser does not support the video tag.

Video: Instructions on how to send videos from your smartphone to a Frameo digital picture frame, covering video selection, captioning, and trimming.

Reactions

The Frameo app allows you to react to photos and videos received on your frame:

1. **Access Reactions:** When a new photo or video appears, tap the screen to bring up the quick menu. Select the 'React' option.
2. **Choose Reaction:** Select from various reaction emojis (e.g., heart, laugh, surprised, sad) to express your feelings about the content.
3. **Notification:** Your loved ones who sent the photo/video will receive a notification in their Frameo app showing your reaction.

Your browser does not support the video tag.

Video: An introduction to the 'Reactions' feature on Frameo, demonstrating how to respond to photos and videos received on the digital picture frame.

Managing Photos

To manage photos stored on your frame:

- **Show/Hide Photos:** You can choose to show or hide specific photos from the slideshow.
- **Delete Photos:** Delete one or multiple photos from the frame's internal storage.
- **Import Photos:** Import photos from external storage (e.g., microSD card).
- **Export Photos:** Export photos to external storage (e.g., microSD card).

Slideshow Settings

Customize your slideshow experience:

- **Timer:** Set the duration each photo is displayed (e.g., 30 seconds).
- **Show Caption:** Enable or disable the display of captions.
- **Fill Frame:** Choose whether photos fill the frame by default.
- **Frame Background:** Configure the background when photos do not fill the frame (e.g., blurred bars).
- **Photo Display Order:** Select how photos are ordered (e.g., by date received).
- **Reverse Photo Display Order:** Display photos from newest to oldest.
- **Video Playback:** Set video playback options (e.g., play once, autoplay).
- **Auto Mute:** Automatically mute video volume after a set time.
- **Video Volume:** Adjust the default volume for videos.

Display Settings

Adjust the visual aspects of your frame:

- **Brightness Level:** Adjust the screen brightness.
- **Sleep Mode:** Configure the frame to automatically turn off and on at specified times (e.g., 11:00 PM to 7:00 AM).
- **Motion Sensor:** Enable or disable the motion sensor. The screen will turn off after 30 minutes of no motion detected if enabled.

Notifications

Manage how your frame alerts you:

- **Show Notifications:** Enable or disable notifications.
- **Notification Volume:** Adjust the volume of notification sounds.
- **Specific Notifications:** Customize notifications for storage space, backup, network connection, new photos, new friends, software updates, feature news, and date/time.

Backup and Restore

Protect your memories with backup options:

- **Backup to External Storage:** Create a backup of your frame's content to a microSD card.
- **Automatic Backup:** Configure automatic backups.
- **Restore from Backup:** Restore your frame's content from a previous backup. Note: You must first reset the frame to restore a backup.
- **Reset Frame:** Reset the frame to its factory settings.

CARE AND MAINTENANCE

To ensure the longevity and optimal performance of your NOBKLEN Digital Picture Frame:

- **Cleaning:** Use a soft, dry cloth to clean the screen and frame. Avoid abrasive cleaners or solvents.
- **Placement:** Place the frame on a stable surface, away from direct sunlight, heat sources, and excessive moisture.
- **Power:** Always use the provided power adapter. Disconnect power during electrical storms or when not in use for extended periods.
- **Ventilation:** Ensure adequate airflow around the frame to prevent overheating.

TROUBLESHOOTING

If you encounter any issues with your NOBKLEN Digital Picture Frame, consider the following:

- **No Power:** Ensure the power adapter is securely connected to both the frame and a working electrical outlet.
- **Wi-Fi Connection Issues:** Verify your Wi-Fi password and ensure the frame is within range of your router. Try restarting your router.
- **Photos Not Appearing:** Confirm that your friends have successfully added your frame using the correct code and are sending photos via the Frameo app. Check your internet connection.
- **Screen Unresponsive:** Try restarting the frame by unplugging and re-plugging the power adapter.

For further assistance, please visit the Frameo support website at support.frameo.net for FAQs and support options.

WARRANTY AND SUPPORT

NOBKLEN Digital Picture Frames are constructed with high-quality materials to ensure lasting memories. We provide a worry-free guarantee, lifetime technical support, and prompt assistance for any product-related inquiries. For support, frequently asked questions (FAQs), or to provide feedback, please visit the official Frameo support website: support.frameo.net.

SAFETY INSTRUCTIONS

Please observe the following safety precautions:

- **High Voltage:** This product contains high voltage components. Do not open the casing of the digital photo frame. Repairs should only be performed by qualified personnel.
- **Power Adapter:** Use only the DC 5V/2A power adapter supplied with this product.
- **Ventilation:** Do not block the ventilation holes on the back of the frame. Ensure proper airflow to prevent overheating.
- **Temperature:** Operate the product within a temperature range of 10°C to 60°C (50°F to 140°F).

- **Memory Cards:** Do not insert or remove memory cards or USB devices while the frame is powered on to prevent data loss.
- **Foreign Objects:** Do not insert metallic objects into the DC jack or any other openings.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question