

GTKZW Electric Cooktop 110V

GTKZW 110V Electric Cooktop 2 Burners Instruction Manual

Model: Electric Cooktop 110V

1. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using your GTKZW Electric Cooktop. Retain this manual for future reference.

General Safety Precautions:

- This appliance is designed for household use only.
- Ensure the cooktop is connected to a properly grounded 110-120V electrical outlet.
- Do not touch hot surfaces. Use handles or knobs.
- Always supervise children near the appliance.
- Do not operate the cooktop with a damaged cord or plug.
- Unplug from the outlet when not in use and before cleaning.
- Do not immerse the cord, plugs, or appliance in water or other liquid.
- The ceramic plate remains hot after cooking. Do not touch with bare hands until it has cooled down.

Integrated Safety Features:

Your GTKZW Electric Cooktop is equipped with several safety functions to ensure safe operation:

- **Timer Function:** Allows you to set a cooking duration, after which the cooktop will automatically shut off.
- **Automatic Shutdown:** The cooktop will automatically turn off after a period of inactivity or if certain conditions are met.
- **Child Safety Lock:** Prevents accidental operation by children.
- **Residual Heat Indicator:** Lights up to warn that the cooking surface is still hot after use.
- **Overheat Protection:** Automatically shuts down the cooktop if it detects an unsafe temperature.
- **No Electromagnetic Radiation:** As a ceramic stove, it does not produce electromagnetic radiation, offering a safer cooking environment.

SAFER ELECTRIC COOKTOP 2 BURNER



Image: The GTKZW Electric Cooktop with visual indicators for its safety features, including a 120-minute timer, general safety function, 2100W high power, and overheat protection.

2. PRODUCT OVERVIEW

The GTKZW 110V Electric Cooktop is a versatile 2-burner ceramic stove designed for both countertop and built-in installation. It features knob controls for easy operation and is compatible with all types of cookware.



Image: A top-down view of the GTKZW 110V Electric Cooktop, showcasing its two radiant burners, one with a pot heating, and the two control knobs.



Image: A clear top-down view of the GTKZW 110V Electric Cooktop, showing the two heating elements and the attached power cord with a standard 110V plug.

3. SETUP AND INSTALLATION

Power Connection:

This cooktop operates on 110-120V and comes with a standard plug. Simply plug it into a suitable grounded electrical outlet. No special wiring or electrician is required for basic plug-and-play operation.

Installation Options:

The GTKZW Electric Cooktop offers two installation methods:

1. **Countertop Use:** For immediate use, place the cooktop directly on your countertop. Ensure the four bottom brackets are installed for stability.
2. **Built-in Installation:** For a more integrated look and to save space, the cooktop can be embedded into a cabinet. A cutout size of 19.49 inches by 10.63 inches is required. Consult a professional for cabinet modifications if you are unsure.



Image: A diagram illustrating the precise dimensions of the GTKZW Electric Cooktop, including its overall length (20.08 inches), width (11.34 inches), and height (3.35 inches), along with the recommended cutout size for built-in installation (19.49 inches by 10.63 inches).

SUITABLE FOR ALL TYPES OF COOKWARE



Image: This visual shows the two primary installation methods: the top image depicts the cooktop seamlessly integrated into a kitchen counter (Built-in Design), while the bottom image shows it resting on the countertop with its support feet visible (Countertop).

4. OPERATING INSTRUCTIONS

Knob Control Operation:

The cooktop is operated using simple knob controls, making it user-friendly for all ages. Each burner has its own dedicated knob.

1. **Power On:** Ensure the cooktop is plugged in.
2. **Select Burner:** Place your cookware on the desired burner.
3. **Adjust Heat:** Gently twist the corresponding knob to select one of the 10 available heating levels. The heat range is approximately 212°F to 1112°F.
4. **Power Off:** Turn the knob to the 'OFF' position when cooking is complete. The residual heat indicator will remain lit until the surface is safe to touch.



KNOB CONTROL

Perfect for the elderly and people with
poor eyesight to use

Image: An elderly couple is shown comfortably using the GTKZW Electric Cooktop, emphasizing the simplicity and ease of its knob controls, which are ideal for users with varying eyesight or dexterity.

Cookware Compatibility:

Unlike induction cooktops, this ceramic electric cooktop is compatible with all types of cookware materials. You can use:

- Iron
- Stainless Steel
- Glass
- Ceramic
- Aluminum
- Cast Iron
- Copper

PORTABLE DUAL ELECTRIC CERAMIC

Cooktop with 110v Outlet Plug



Image: A visual representation demonstrating the wide compatibility of the GTKZW Electric Cooktop with different cookware materials, such as aluminum, stainless steel, cast iron, copper, iron, glass, and ceramic pots and pans.

5. MAINTENANCE AND CLEANING

Maintaining your GTKZW Electric Cooktop is simple due to its black glass surface.

- **Daily Cleaning:** After each use, allow the cooktop to cool completely. Wipe the surface with a damp cloth and mild detergent.
- **Stubborn Stains:** For more stubborn stains, use a non-abrasive ceramic cooktop cleaner. Follow the cleaner's instructions.
- **Avoid Abrasives:** Do not use abrasive sponges, scouring pads, or harsh chemical cleaners, as these can scratch or damage the glass surface.
- **Ensure Dryness:** Always ensure the cooktop surface is dry before plugging it in or using it again.

6. TROUBLESHOOTING

If you encounter any issues with your GTKZW Electric Cooktop, please refer to the following common troubleshooting steps:

- **Cooktop Not Turning On:**

- Check if the power cord is securely plugged into a working 110-120V outlet.
- Verify if there is a power outage or a tripped circuit breaker in your home.

- **Burner Not Heating:**

- Ensure the control knob for that specific burner is turned to a heat setting.
- Check if the child lock is activated (if applicable and indicated by a light). Deactivate it if necessary.
- If the overheat protection was triggered, the burner might have temporarily shut off. Allow it to cool down before attempting to use it again.

- **Cooktop Shuts Off Unexpectedly:**

- This could be due to the timer function completing its cycle.
- Overheat protection may have activated. Remove cookware and allow the unit to cool.
- Check for loose power connections.

- **Residual Heat Indicator Remains On:**

- This is normal. The indicator will turn off once the cooking surface has cooled to a safe temperature.

If these steps do not resolve the issue, please contact GTKZW customer support for further assistance.

7. SPECIFICATIONS

Feature	Specification
Brand	GTKZW
Model Number	Electric Cooktop 110V
Color	Black
Material	Stainless Steel (base), Ceramic Glass (surface)
Heating Elements	2 Radiant Burners
Burner Power	1200W (large), 900W (small)
Total Wattage	2100 watts
Voltage	110-120 Volts
Controls Type	Knob Control
Power Levels	10
Product Dimensions (D x W x H)	11.34" x 20.08" x 3.15"
Cut-out Size (for built-in)	19.49" x 10.63"

Feature	Specification
Item Weight	10 Pounds
Special Features	Automatic Shut-Off, Portable, Safety Lock, Timer, Overheat Protection
Power Source	Corded Electric
UPC	711620064258

8. WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the documentation included with your purchase or contact GTKZW directly through their official channels. Keep your purchase receipt as proof of purchase for any warranty claims.

You can visit the GTKZW Store for more information: [GTKZW Official Store](#)