



Manuals.plus /

› BENEVE /

› BENEVE Tablet 10 Inch Android 11 Tablet PC IPS HD Display with 1.8GHz Quad-Core Processor 3GB RAM 32GB Storage, 2MP+8MP Dual Camer, 6000mAh Battery, Support WiFi, Bluetooth,USB Type-C

BENEVE M1038

BENEVE 10-inch Android 11 Tablet User Manual

Model: M1038

INTRODUCTION

Welcome to the user manual for your new BENEVE 10-inch Android 11 Tablet. This guide provides comprehensive instructions to help you set up, operate, maintain, and troubleshoot your device, ensuring you get the most out of its features. Your tablet is designed for a seamless user experience, offering powerful performance, a vibrant display, and long-lasting battery life for both productivity and entertainment.

1. GETTING STARTED

1.1 Package Contents

Before you begin, please verify that all items are present in your package:

- BENEVE 10-inch Android 11 Tablet (Model M1038)
- USB Type-C Charging Cable
- Power Adapter
- User Manual (this document)
- Protective Case (may be included as an accessory)

1.2 Device Overview



Figure 1: Front and rear view of the BENEVE 10-inch Android 11 Tablet, showcasing its sleek design and camera placement.

1.3 Initial Charging

It is recommended to fully charge your tablet before first use. Connect the USB Type-C cable to the tablet's charging port and the other end to the power adapter. Plug the adapter into a wall outlet. The charging indicator will show the charging status. A full charge typically takes approximately 3-4 hours.

1.4 Powering On/Off

- **To Power On:** Press and hold the Power button (usually located on the side) for a few seconds until the BENEVE logo appears on the screen.
- **To Power Off:** Press and hold the Power button until a power menu appears. Select "Power off" from the options.
- **To Restart:** From the power menu, select "Restart".

1.5 Initial Setup

Upon first power-on, the tablet will guide you through the initial setup process. Follow the on-screen prompts to:

- Select your language.
- Connect to a Wi-Fi network.
- Sign in with your Google Account or create a new one. This is essential for accessing the Google Play Store and other Google services.
- Set up screen lock (PIN, pattern, password).
- Review and accept terms and conditions.

2. OPERATING YOUR TABLET

2.1 Basic Navigation

Your BENEVE tablet runs on Android 11, offering an intuitive touch-based interface. Common gestures include:

- **Tap:** To select an item or open an app.
- **Long Press:** To access contextual menus or move icons.
- **Swipe:** To scroll through pages, lists, or switch between home screens.
- **Pinch-to-Zoom:** To zoom in or out on images, maps, or web pages.

2.2 Display and Visuals

The tablet features a 10.1-inch IPS HD display with a resolution of 1280x800 pixels, providing vibrant colors and wide viewing angles for an immersive visual experience.



Figure 2: The tablet's display showcasing vibrant visuals and details on its camera capabilities.

2.3 Performance and Storage

Equipped with a 1.8GHz Quad-Core Cortex-A55 processor and 3GB RAM, the tablet ensures smooth multitasking and responsive performance for applications and games. It comes with 32GB of internal storage, expandable up to 128GB via a microSD card (not included), allowing ample space for your apps, photos, videos, and documents.



Figure 3: Visual representation of the tablet's internal components, highlighting its processor, memory, and storage capabilities.

2.4 Cameras

Capture moments with the tablet's dual cameras: an 8MP rear camera and a 2MP front camera, suitable for video calls and casual photography.

2.5 Audio

The tablet is equipped with dual stereo speakers, providing clear and immersive audio for media consumption and online communication.



Figure 4: Illustration of the tablet's dual speaker system, indicating enhanced audio output.

2.6 Connectivity

The tablet supports Wi-Fi (802.11a) for internet access and Bluetooth 5.0 for connecting wireless peripherals like headphones and keyboards.

2.7 Battery Life

The 6000mAh battery provides extended usage times, supporting approximately 6 hours of video playback, 8 hours of browsing, 10 hours of reading, and up to 480 hours of standby time.

6000mAh Long -life Battery



6 Hours
Video



8 Hours
Browsing



10 Hours
Reading



480 Hours
Standby



Figure 5: An overview of the tablet's impressive battery performance across various usage scenarios.

3. MAINTENANCE

3.1 Cleaning Your Tablet

To clean your tablet, use a soft, lint-free cloth. For stubborn smudges, slightly dampen the cloth with water or a screen cleaner specifically designed for electronics. Avoid using harsh chemicals, abrasive materials, or excessive moisture, as these can damage the screen or internal components.

3.2 Software Updates

Periodically check for system updates to ensure your tablet has the latest features, security patches, and performance improvements. Go to **Settings > System > System update** to check for and install available updates. Ensure your tablet is connected to Wi-Fi and has sufficient battery life before starting an update.

3.3 Battery Care

To prolong the life of your tablet's battery:

- Avoid extreme temperatures.
- Do not let the battery completely drain frequently.
- Use the original charger or a certified compatible charger.
- Unplug the charger once the battery is full.

3.4 Storage Management

Regularly manage your tablet's storage to maintain optimal performance. Delete unnecessary apps, photos, and videos. Utilize cloud storage services or transfer files to an external device. You can check storage usage in **Settings > Storage**.

4. TROUBLESHOOTING

If you encounter issues with your BENEVE tablet, refer to the common solutions below:

Problem	Possible Solution
Tablet does not power on.	Ensure the battery is charged. Connect the charger and wait a few minutes before attempting to power on again. If unresponsive, try holding the power button for 10-15 seconds for a forced restart.
Wi-Fi connection issues.	Check if Wi-Fi is enabled in settings. Restart your Wi-Fi router. Forget the network and reconnect. Ensure you are within range of the Wi-Fi signal.
Apps crashing or freezing.	Close and reopen the app. Clear the app's cache and data in Settings > Apps & notifications > [App Name] > Storage & cache . Ensure the app is updated. Restart the tablet.
Slow performance.	Close unused apps running in the background. Clear cache. Free up storage space. Restart the tablet periodically.
Battery drains quickly.	Reduce screen brightness. Disable Wi-Fi/Bluetooth when not in use. Close background apps. Limit location services. Check battery usage in Settings > Battery to identify power-hungry apps.
Charging port issues.	Ensure the charging cable is fully inserted and not damaged. Try a different compatible cable and power adapter. Check the port for debris and clean carefully if necessary. If the issue persists, contact customer support.

5. SPECIFICATIONS

Detailed technical specifications for the BENEVE 10-inch Android 11 Tablet (Model M1038):

Feature	Detail
Brand	BENEVE
Model Name	M1038
Operating System	Android 11
Screen Size	10.1 Inches
Display Resolution	1280 x 800 Pixels (IPS HD)
Processor	Quad-Core Cortex-A55 (up to 1.8GHz)
RAM	3 GB
Internal Storage	32 GB
Expandable Storage	Up to 128 GB (via microSD card)
Rear Camera	8 MP
Front Camera	2 MP
Battery Capacity	6000 mAh Lithium Polymer
Connectivity	Wi-Fi (802.11a), Bluetooth 5.0
Product Dimensions	24.5 x 15 x 0.9 cm
Item Weight	370 g

6. WARRANTY AND SUPPORT

6.1 Product Warranty

BENEVE products typically come with a standard manufacturer's warranty. Please refer to the warranty card included in your product packaging or visit the official BENEVE website for detailed warranty terms and conditions. Keep your proof of purchase for warranty claims.

6.2 Customer Support

For technical assistance, troubleshooting beyond this manual, or warranty inquiries, please contact BENEVE customer support. You can usually find contact information on the official BENEVE website or through the retailer where you purchased the product.

Visit the official BENEVE Store for more information and product updates: [BENEVE Store on Amazon](#)

