

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [EighteenTek](#) /
- › [EighteenTek Pod All Weather Sports Tent \(Model 9038\) User Manual](#)

EighteenTek 9038

EighteenTek Pod All Weather Sports Tent (Model 9038) User Manual

Brand: EighteenTek | Model: 9038

INTRODUCTION

This manual provides instructions for the safe and effective use of your EighteenTek Pod All Weather Sports Tent, Model 9038. This portable, pop-up shelter is designed for various outdoor activities, offering protection from weather elements such as rain, wind, and sun. Please read this manual thoroughly before initial use and retain it for future reference.

SAFETY INFORMATION

General Safety Guidelines

- Ensure the tent is properly secured with stakes and guylines, especially in windy conditions, to prevent displacement.
- Keep all flame and heat sources away from the tent fabric. The tent is made of flammable material.
- Do not use the tent in extreme weather conditions beyond its intended design (e.g., severe storms, heavy snow loads).
- Supervise children when inside or around the tent.
- Avoid sharp objects near the tent material to prevent punctures or tears.
- When folding, be cautious as the frame can spring open forcefully.

COMPONENTS LIST

Package Contents

The EighteenTek Pod All Weather Sports Tent package includes:

- Weather Proof Pods x 1 (Main Tent Unit)
- Top Cover x 1
- Support Poles x 2
- Guylines x 4
- Stakes x 8

- Sand Bags for Extra Stability (Quantity may vary)



Image showing the included components: the main tent unit, top cover, two support poles, four guylines, and eight stakes.


SETUP INSTRUCTIONS

Unfolding and Erecting the Tent

1. **Unpack:** Carefully remove the tent from its carrying bag. Be aware that the tent is designed to pop open automatically. Hold it away from your face and other people when releasing the strap.
2. **Unfold:** Allow the tent to spring open. Gently separate the panels to fully expand the tent structure.
3. **Insert Support Poles:** Locate the two support poles. Insert them into the designated sleeves at the top of the tent to create the dome shape. Secure them using the attached straps or clips.
4. **Attach Top Cover (Optional):** If desired, place the top cover over the tent and secure it to the designated loops or clips for additional sun protection or rain resistance.
5. **Secure to Ground:** Use the provided stakes to anchor the tent to the ground through the loops at the base. For additional stability, especially in windy conditions, attach the guylines to the tent and stake them firmly into the ground. Fill the sandbags (if using) and attach them to the tent's base for extra weight.



The EighteenTek Pod All Weather Sports Tent set up on a grassy field, providing shelter for three individuals.

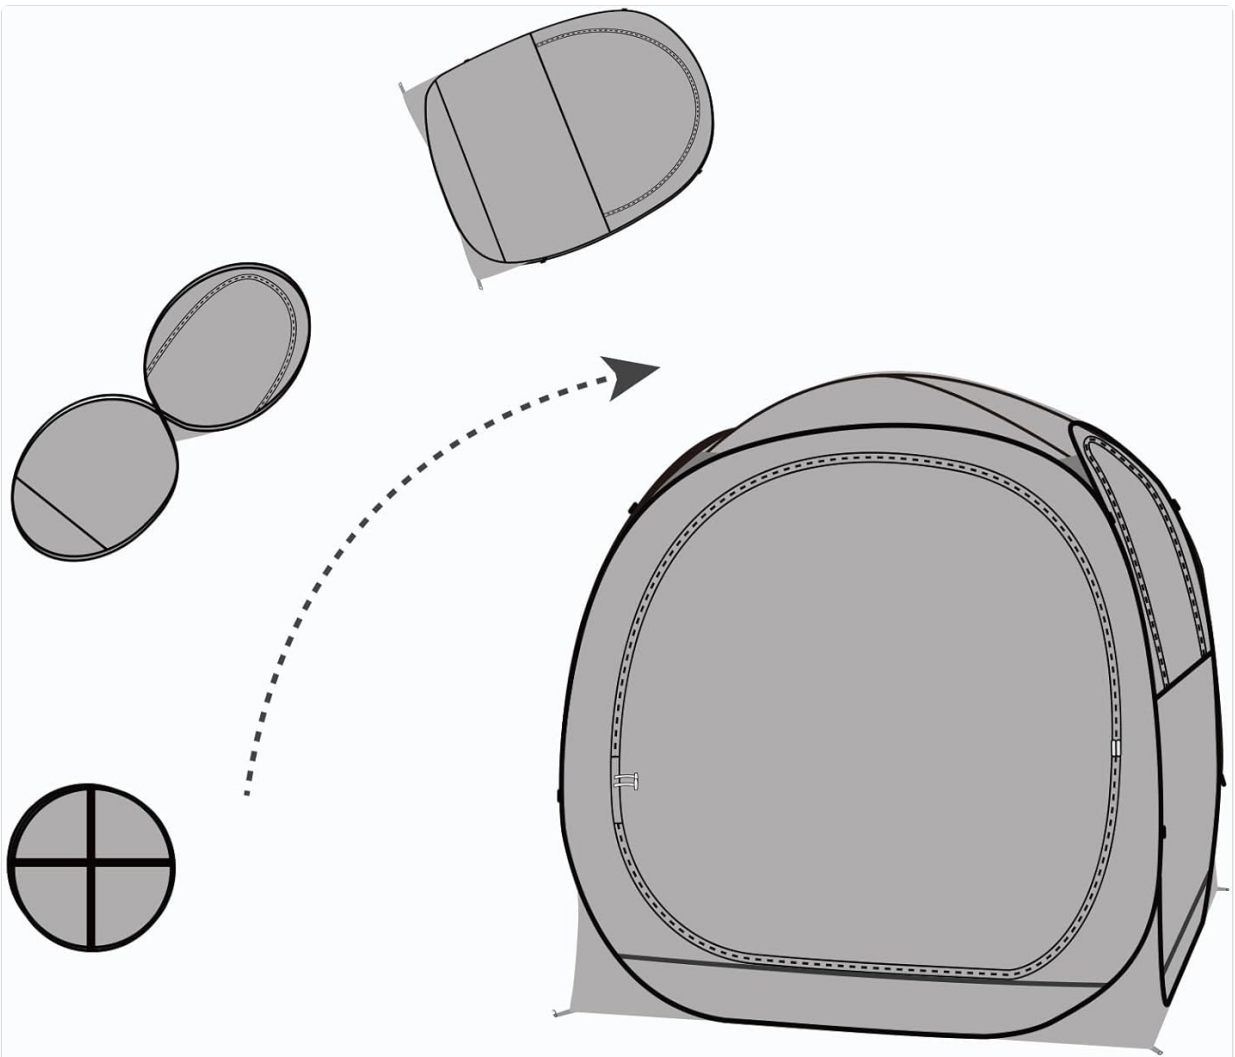

Pop Up Automatically Set up in seconds

Diagram illustrating the automatic pop-up setup process of the tent, ready in seconds.

Video demonstrating the unboxing and initial setup of the EighteenTek Pod All Weather Sports Tent, including how it pops open.

OPERATING INSTRUCTIONS

Using Your Sports Tent

- **Ventilation:** The tent features transparent windows that can be unzipped to allow for airflow. Adjust as needed for comfort.
- **Visibility:** Enjoy panoramic views through the transparent PVC windows.
- **Sun Protection:** The tent offers UPF 50+ UV protection. For additional shade, utilize the optional top cover.
- **Weather Protection:** The sealed floor and rainproof design help keep the interior dry. Double-sided zippers enhance security and weather resistance.
- **Internal Hooks:** Utilize the convenient internal hooks for hanging lightweight items such as lights or small bags.

Attached Floor



To prevent air from entering

Close-up view of the attached floor, designed to prevent air from entering the tent, ensuring a sealed environment.

4 Side Super Transparent PVC for 540° Clear View



The tent's transparent PVC windows provide a wide, clear view of the surroundings.

For Outdoor Activities



Ball games



Sporting events



Camping



Cheering



Fishing



Enjoy sun

Two individuals and a dog comfortably seated inside the tent during rainy conditions, highlighting its windproof and water-resistant capabilities.

MAINTENANCE

Care and Storage

- **Cleaning:** Clean the tent with a damp cloth and mild soap. Do not use harsh chemicals or abrasive cleaners. Hand wash only.
- **Drying:** Ensure the tent is completely dry before folding and storing to prevent mold and mildew.
- **Storage:** Fold the tent according to the instructions and store it in its carrying bag in a cool, dry place away from direct sunlight.

Video demonstrating the three-layer folding method for the EighteenTek Pod All Weather Sports Tent for compact storage.

Video demonstrating the two-layer folding method for the EighteenTek Pod All Weather Sports Tent for compact storage.

TROUBLESHOOTING

Common Issues and Solutions

Problem	Solution
Tent unstable in wind	Ensure all stakes and guylines are properly secured. Utilize sandbags for additional weight.
Water leakage	Verify all zippers are fully closed. Ensure the top cover is correctly installed. Check for any tears or damage to the fabric.
Difficulty folding	Follow the folding instructions carefully. It may require practice. Ensure all air is expelled before folding.
Wrinkles in transparent panels	Wrinkles are normal due to folding. They typically straighten out over time with exposure to warmth and use.

SPECIFICATIONS

Product Details

Feature	Detail
Brand	EighteenTek
Model Name	9038
Product Dimensions	70"L x 70"W x 63"H
Item Weight	12.35 Pounds (Minimum Trail Weight)
Occupancy	2-3 Person (Optimal Comfort)
Seasons	4 Season
Material	Fiberglass, Polyvinyl Chloride, 100% Polyvinyl Chloride Oxford Fabric
Water Resistance Level	Water Resistant (300 Mm)
Special Features	Pop up, Rainproof, Sealed Floor, Waterproof, Windproof, UPF 50+ UV Protection
Assembly Time	30 Seconds
Number of Doors	1
Number of Windows	2
Included Components	Weather Proof Pods x 1, Top Cover x 1, Support Poles x 2, Guylines x 4, Stakes x 8

WARRANTY AND SUPPORT

Product Warranty

This EighteenTek Pod All Weather Sports Tent comes with a **1 Year Limited Warranty**. For warranty claims or product support, please contact the manufacturer directly through their official channels.

Customer Support

For further assistance, please refer to the contact information provided with your purchase or visit the EighteenTek brand store online.