



[Manuals.plus](#) /

› [BAKAJI](#) /

› BAKAJI Pedestal Fan with Remote Control 50W White - Instruction Manual

BAKAJI 8054143018158

BAKAJI Pedestal Fan with Remote Control

Model: 8054143018158

1. INTRODUCTION

Thank you for choosing the BAKAJI Pedestal Fan. This manual provides important information for the safe and efficient use of your new fan. Please read these instructions carefully before assembly, operation, and maintenance. Keep this manual for future reference.



Image showing the BAKAJI Pedestal Fan and its remote control, highlighting the convenience of remote operation.

2. SAFETY INSTRUCTIONS

- Always ensure the fan is placed on a stable, flat surface to prevent tipping.
- Do not insert fingers or any objects through the fan grille when the fan is operating.
- Keep the fan away from water or other liquids. Do not use in wet environments.
- Unplug the fan from the power outlet before cleaning, maintenance, or when not in use.
- Do not operate the fan with a damaged cord or plug. Contact qualified service personnel for repair.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory

or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

- Children should be supervised to ensure that they do not play with the appliance.

3. PACKAGE CONTENTS

Please check the package contents upon opening. Ensure all parts are present and undamaged.

- Fan Motor Unit with Control Panel
- Front and Rear Grilles
- Fan Blades (3 blades)
- Pedestal Pole (Adjustable Height)
- Round Base
- Remote Control
- Fasteners and Assembly Tools (if applicable)
- Instruction Manual

4. ASSEMBLY AND SETUP

Follow these steps to assemble your pedestal fan:

1. **Assemble the Base:** Attach the pedestal pole to the round base using the provided fasteners. Ensure it is securely tightened.
2. **Attach the Motor Unit:** Secure the fan motor unit to the top of the pedestal pole.
3. **Install the Rear Grille:** Place the rear grille onto the motor unit, aligning the notches. Secure it with the retaining nut.
4. **Mount the Blades:** Carefully slide the fan blades onto the motor shaft. Ensure they are properly seated and secured with the blade cap.
5. **Install the Front Grille:** Attach the front grille to the rear grille, ensuring all clips are securely fastened.
6. **Adjust Height and Tilt:** Adjust the fan's height to your desired level using the adjustable pole. The fan head can also be tilted to direct airflow.



Image demonstrating the adjustable tilt feature of the fan head, allowing users to direct airflow.

5. OPERATING INSTRUCTIONS

Your BAKAJI Pedestal Fan can be operated using the control panel on the unit or the included remote control.

Control Panel Functions:

- **ON/OFF:** Press to turn the fan on or off.
- **SPEED:** Press to cycle through the 3 speed settings (Low, Medium, High).
- **MODE:** Press to select different ventilation modes (e.g., Normal, Sleep, Natural - specific modes may vary).

- **TIMER:** Press to set the operating timer (up to 4 hours).
- **OSC (Oscillation):** Press to activate or deactivate the horizontal oscillation function.

Remote Control Functions:

The remote control provides convenient access to all fan functions from a distance.



TUTTE LE FUNZIONI COMODAMENTE
NELLA TUA MANO.

Detailed view of the remote control and the fan's control panel, illustrating buttons for power, mode, speed, timer, and oscillation.

- **ON/OFF:** Power button to turn the fan on or off.
- **MODE:** Selects different fan modes.
- **TIMER:** Sets the automatic shut-off timer (0.5H, 1H, 2H, 4H).
- **SPEED/ON:** Adjusts fan speed (L, M, H) and can also turn the fan on.
- **OSC:** Activates or deactivates horizontal oscillation.

6. FEATURES

- **Powerful Airflow:** 50 Watt motor circulates up to 80 m³ of air per minute.
- **3 Speed Settings:** Choose between Low, Medium, and High for customized comfort.

- **Timer Function:** Set the fan to automatically turn off after 0.5, 1, 2, or 4 hours.
- **Horizontal Oscillation:** Wide-angle oscillation ensures even air distribution across the room.
- **Adjustable Height:** Fan height can be adjusted up to 128 cm for optimal positioning.
- **Remote Control:** Conveniently operate all functions from a distance.
- **Quiet Operation:** 40 cm diameter blades designed for reduced noise.

Ventilatore Piantana con Telecomando

50 watt

3 velocità

TIMER FINO A 4H

Colore BIANCO

- Timer: Autospegnimento programmabile fino a 4 ore
- Diametro griglia: Ø 40 cm
- Griglia di protezione a nido d'ape
- Pale: 3 in ABS
- Oscillazione laterale: Automatica
- Motore: 3 Velocità
- Potenza: 50 Watt (220 Volt - 50 Hz)
- Base: Anti-ribaltamento
- Altezza: Regolabile fino a 128 cm
- Dimensioni: 50x128 h cm

BAKAJI
It's for you!

Visual representation of the fan with callouts for its 50W power, 3 speeds, and 4-hour timer function.

7. MAINTENANCE

Regular cleaning and maintenance will ensure optimal performance and longevity of your fan.

- **Cleaning:** Always unplug the fan before cleaning. Use a soft, damp cloth to wipe the exterior surfaces. Do not use abrasive cleaners or solvents.
- **Grille Cleaning:** The grilles can be removed for thorough cleaning of the blades. Use a soft brush or vacuum cleaner to remove dust from the blades. Ensure all parts are dry before reassembling.
- **Storage:** When not in use for extended periods, store the fan in a cool, dry place, preferably in its original packaging.

8. TROUBLESHOOTING

If you encounter any issues with your fan, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fan does not turn on.	No power supply. Power button not pressed.	Check if the fan is plugged in. Ensure the power outlet is working. Press the ON/OFF button on the fan or remote.
Weak airflow.	Low speed setting. Grilles or blades are dirty.	Increase the speed setting. Clean the grilles and blades as per maintenance instructions.
Fan is noisy.	Loose parts. Fan not on a stable surface.	Check for any loose screws or components and tighten them. Place the fan on a stable, flat surface.
Remote control not working.	Batteries are dead or incorrectly inserted. Obstruction between remote and fan.	Replace batteries with new ones, ensuring correct polarity. Remove any obstructions. Ensure remote is pointed at the fan's receiver.

If the problem persists after trying these solutions, please contact customer support.

9. SPECIFICATIONS

Feature	Specification
Brand	BAKAJI
Model Name	Pedestal Fan with Round Base and Remote Control 50W White 3 Speeds + Timer
Model Number	8054143018158
Color	White
Electric Fan Design	Pedestal Fan
Power Source	Corded Electric
Product Dimensions (DxWxH)	40P x 40l x 130H cm (approx. 40cm x 40cm x 130cm)
Special Features	Adjustable Height, Oscillation, Timer
Control Unit Type	Remote Control
Number of Speeds	3
Wattage	50 Watts

Feature	Specification
Number of Blades	3
Air Flow Capacity	80 Cubic Meters per Minute
Voltage	240 Volts
Indoor/Outdoor Use	Indoor
Material	Metal, Plastic
Blade Material	ABS Plastic
Country of Origin	China

10. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or contact BAKAJI customer service. Keep your proof of purchase for warranty claims.