

Midea MFK1070WD

Midea MFK1070WD Front Load Washing Machine User Manual

Model: MFK1070WD

[Safety Information](#)[Product Overview](#)[Setup](#)[Operation](#)[Maintenance](#)[Troubleshooting](#)[Specifications](#)[Warranty](#)[& Support](#)

INTRODUCTION

Thank you for choosing the Midea MFK1070WD Front Load Washing Machine. This manual provides essential information for the safe installation, efficient operation, and proper maintenance of your appliance. Please read these instructions thoroughly before using the washing machine and retain them for future reference.

SAFETY INFORMATION

To reduce the risk of fire, electric shock, or injury when using your appliance, follow these basic precautions:

- Read all instructions before using the appliance.
- Do not wash or dry articles that have been previously cleaned in, washed in, soaked in, or spotted with gasoline, dry-cleaning solvents, or other flammable or explosive substances.
- Do not allow children to play on or in the appliance. Close supervision of children is necessary when the appliance is used near children.
- Do not reach into the appliance if the tub or agitator is moving.
- Do not install or store this appliance where it will be exposed to the weather.
- Do not tamper with controls.
- Do not repair or replace any part of the appliance or attempt any servicing unless specifically recommended in this manual.
- Always disconnect the appliance from the power supply before cleaning or performing any maintenance.

PRODUCT OVERVIEW

The Midea MFK1070WD is a front-load washing machine with a 10 kg washing capacity and 7 kg drying capacity, offering 14 distinct programs for various fabric types and soil levels.



Figure 1: Front view of the Midea MFK1070WD Front Load Washing Machine. This image displays the main control panel with a central program selector knob, a digital display, and touch buttons. Below the control panel is the large circular door for the drum. On the lower right, there is an access panel for the drain filter. The machine is white with a black control panel and door.

Main Components:

- **Control Panel:** Features a program selector knob, digital display, and touch buttons for various functions.
- **Detergent Dispenser Drawer:** Located on the top left, for adding detergent and fabric softener.
- **Drum Door:** Large circular door for loading and unloading laundry.
- **Drain Filter Access Panel:** Located at the bottom right, for maintenance and cleaning.
- **Adjustable Leveling Legs:** For ensuring stability and proper operation.

SETUP AND INSTALLATION

1. Unpacking

Carefully remove all packaging materials. Ensure all transit bolts (usually at the rear of the machine) are removed before operation. Failure to do so can cause severe damage to the appliance.

2. Location and Leveling

Place the washing machine on a firm, level surface. Use the adjustable leveling legs to ensure the machine is perfectly balanced. An unbalanced machine can cause excessive vibration and noise during operation.

3. Water Connection

Connect the inlet hose(s) to the water supply taps (hot and cold, if applicable) and to the corresponding inlets on the back of the machine. Ensure all connections are tight to prevent leaks.

4. Drainage Connection

Securely place the drain hose into a standpipe or over the edge of a sink, ensuring it is properly secured to prevent it from dislodging during the drain cycle.

5. Power Connection

Plug the power cord into a grounded electrical outlet. Ensure the voltage matches the appliance's requirements (220 Volts as per specifications).

OPERATING INSTRUCTIONS

1. Control Panel Overview

The control panel allows you to select wash programs, adjust settings, and start/pause cycles. The central knob selects the main program, while touch buttons modify options like temperature, spin speed, and additional functions.

2. Loading Laundry

Open the drum door and load laundry, ensuring not to overload the machine. For optimal results, leave enough space for clothes to tumble freely. The maximum wash capacity is 10 kg.

3. Adding Detergent and Softener

Pull out the detergent dispenser drawer. Add appropriate amounts of detergent to the main wash compartment and fabric softener to its designated compartment. Refer to detergent packaging for dosage recommendations.

4. Program Selection

Turn the program selector knob to choose one of the 14 available wash programs. Examples include Cotton, Synthetics,

Delicates, Wool, Quick Wash, and Rinse & Spin. The display will show the default settings for the selected program.

5. Adjusting Options

After selecting a program, you can modify options such as wash temperature, spin speed (up to 1500 RPM), and additional functions (e.g., pre-wash, extra rinse) using the touch buttons on the control panel.

6. Starting a Cycle

Press the Start/Pause button to begin the wash cycle. The machine will automatically lock the door and start filling with water.

7. End of Cycle

Once the cycle is complete, the machine will signal with an audible alert and/or a message on the display. The door will unlock after a short delay. Remove laundry promptly to prevent wrinkles.

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your washing machine.

1. Cleaning the Exterior

Wipe the exterior surfaces with a soft, damp cloth. Avoid abrasive cleaners or solvents that could damage the finish.

2. Cleaning the Detergent Dispenser

Periodically remove the detergent dispenser drawer and rinse it under running water to remove any detergent residue or mold buildup.

3. Cleaning the Drum

Run a maintenance wash cycle (e.g., a hot wash with no laundry and a washing machine cleaner) regularly to prevent odors and residue buildup in the drum.

4. Cleaning the Drain Filter

Locate the drain filter access panel at the bottom right of the machine (refer to Figure 1). Open the panel, place a shallow container underneath to catch water, and carefully unscrew the filter. Clean any lint or debris from the filter and reinsert it securely.

5. Door Seal Maintenance

Wipe the rubber door seal after each wash to remove moisture and lint, preventing mold and odors.

TROUBLESHOOTING

Before contacting service, refer to the following table for common issues and their solutions.

Problem	Possible Cause	Solution
Machine does not start	Power cord unplugged; door not closed properly; program not selected; Start/Pause button not pressed.	Check power connection; ensure door is securely latched; select a program; press Start/Pause.
No water filling	Water taps closed; inlet hose kinked; water supply pressure too low.	Open water taps; straighten hose; check household water pressure.

Problem	Possible Cause	Solution
Machine vibrates excessively	Transit bolts not removed; machine not level; uneven load.	Remove transit bolts; adjust leveling legs; redistribute laundry inside the drum.
Water not draining	Drain hose kinked or blocked; drain filter clogged.	Straighten drain hose; clean drain filter.
Error code on display	Specific malfunction detected by the machine.	Refer to the full user manual for a list of error codes and their meanings, or contact customer support.

SPECIFICATIONS

- **Brand:** Midea
- **Model:** MFK1070WD
- **Type:** Front Load Washing Machine with Dryer
- **Washing Capacity:** 10 Kilograms
- **Drying Capacity:** 7 Kilograms
- **Programs:** 14 Standard Cycles
- **Maximum Rotational Speed:** 1500 RPM
- **Voltage:** 220 Volts
- **Product Dimensions (D x W x H):** 60D x 85W x 60H centimeters
- **Item Weight:** 50 Kilograms
- **Drum Material:** Stainless Steel
- **Control Type:** Touch
- **Special Features:** Adjustable Leveling Legs
- **Color:** White

WARRANTY AND SUPPORT

This Midea MFK1070WD Washing Machine comes with a **2 Years Warranty**. For technical assistance, service, or warranty claims, please contact Midea customer support.

Installation Support Contact:

- **Riyadh:** +966 -11- 4094006 Ext – 113
- **Jeddah:** +966- 12- 6577714
- **Dammam:** +966-13- 8343691
- **Qassim:** +966 581044198
- **Abha:** +966 593322785

Please have your model number (MFK1070WD) and purchase date available when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

What does the E10 error code mean on my Midea MFK1070WD washing machine?

On Midea washing machines like the MFK1070WD, the E10 error code typically indicates a water inlet timeout. This means the machine is not filling with water or is filling too slowly. To resolve this issue,...

[Read full answer](#)