

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Midea](#) /
- › [Midea 10 kg Front Load Automatic Washing Machine User Manual](#)

## Midea MFK1070WDS

# Midea 10 kg Front Load Automatic Washing Machine

MODEL: MFK1070WDS

User Manual

## Introduction

This manual provides detailed instructions for the safe and efficient operation, installation, and maintenance of your Midea Front Load Washing Machine, model MFK1070WDS. Please read this manual thoroughly before using the appliance and keep it for future reference. This appliance features a 10 kg washing capacity and a 7 kg drying capacity, offering comprehensive laundry care.

## Product Overview



Front view of the Midea MFK1070WDS washing machine, showcasing its sleek black design, the central control knob, digital display, and the large front-loading door. The energy efficiency label is visible on the lower left, and a '10-year warranty' sticker is on the upper right.

## Setup

Proper installation is crucial for the performance and longevity of your washing machine. Follow these steps carefully:

1. **Unpacking:** Remove all packaging materials, including the transport bolts at the rear of the machine. Keep packaging for potential future transport.
2. **Location:** Place the machine on a firm, level surface, away from direct sunlight, heat sources, and freezing temperatures. Ensure adequate ventilation around the appliance.
3. **Leveling:** Adjust the adjustable feet at the bottom of the machine to ensure it is perfectly level and stable. Use a spirit level to verify.
4. **Water Connection:** Connect the inlet hoses (cold and hot, if applicable) to their respective water taps. Ensure all connections are tight to prevent leaks. Do not overtighten.
5. **Drainage:** Securely place the drain hose into a standpipe or laundry tub, ensuring it is not kinked or submerged in water. The drain hose should be positioned at an appropriate height as specified in the full manual.
6. **Electrical Connection:** Connect the power cord to a grounded electrical outlet with the correct voltage (220V) and frequency. Do not use extension cords or adapters.

## Operating Instructions

---

Familiarize yourself with the control panel and available programs for optimal washing results.

- **Loading Laundry:** Open the door and load laundry into the drum. Do not overload the machine; ensure clothes are distributed evenly.
- **Detergent Dispenser:** Pull out the detergent drawer and add the appropriate amount of detergent, fabric softener, and other additives to their designated compartments.
- **Program Selection:** Turn the central control knob to select one of the 14 available wash programs (e.g., Cotton, Synthetics, Delicates, Quick Wash, Spin, Rinse & Spin, Eco, etc.).
- **Adjusting Settings:** Use the touch controls on the panel to adjust temperature, spin speed, and other options (e.g., pre-wash, extra rinse) according to your laundry needs.
- **Start/Pause:** Press the 'Start/Pause' button to begin the selected wash cycle. Press it again to pause the cycle if needed.
- **End of Cycle:** The machine will signal when the cycle is complete. Remove laundry promptly to prevent wrinkles and odors.
- **Drying Function:** For drying, select a suitable drying program and load the appropriate amount of laundry (up to 7 kg).

## Maintenance

---

Regular maintenance ensures the efficiency and longevity of your appliance.

- **Cleaning the Drum:** Periodically run a 'Drum Clean' cycle (if available) or a hot wash with no laundry and a cup of white vinegar or a washing machine cleaner.
- **Detergent Dispenser:** Remove and clean the detergent dispenser drawer regularly to prevent detergent and softener residue buildup. Rinse it under running water.
- **Drain Pump Filter:** Clean the drain pump filter located at the bottom front of the machine every few months to remove lint, coins, or other foreign objects. Refer to the full manual for specific instructions.
- **Exterior Cleaning:** Wipe the exterior surfaces of the machine with a soft, damp cloth. Do not use abrasive cleaners, solvents, or harsh chemicals.

- **Door Seal:** After each wash, wipe the rubber door seal and the inside of the door glass to remove any moisture or lint. Leave the door slightly ajar when not in use to allow air circulation and prevent mold and mildew.

## Troubleshooting

Before calling for service, refer to the following common issues and their solutions:

Problem	Possible Cause	Solution
Machine does not start	No power; Door not closed; Program not selected.	Check power cord and circuit breaker; Ensure door is firmly closed; Select a wash program and press Start.
Water leakage	Loose hose connections; Damaged hoses; Overfilling detergent.	Tighten inlet/drain hoses; Replace damaged hoses; Use correct detergent amount.
Machine not draining	Drain hose kinked or blocked; Drain pump filter clogged.	Straighten drain hose; Clean drain pump filter.
Excessive vibration/noise	Machine not level; Transport bolts not removed; Uneven laundry load.	Adjust leveling feet; Remove transport bolts; Redistribute laundry inside the drum.
Error codes displayed	Specific malfunction.	Refer to the comprehensive troubleshooting section in the full user manual for specific error code meanings and solutions.

## Specifications

Feature	Detail
Brand	Midea
Model	MFK1070WDS
Washing Capacity	10 kg
Drying Capacity	7 kg
Product Dimensions (D x W x H)	60 x 85 x 60 cm
Item Weight	50 kg
Maximum Spin Speed	1500 RPM
Installation Type	Freestanding, Front Load
Special Features	Adjustable Leveling Feet
Color	Black
Control Unit	Touch
Standard Cycles	14
Voltage	220V

Feature	Detail
Power	220W
Classification	CE
Material	Plastic and Metal
Finish Type	Metallic
Cycle Options	Normal

## Warranty and Support

Your Midea washing machine comes with a manufacturer's warranty. Please refer to the warranty card included with your product for detailed terms and conditions, including the 10-year warranty on specific components as indicated on the product.

For installation services, technical support, or any inquiries, please contact Midea customer service at the following numbers:

- **Riyadh:** +966-11-4094006 Ext – 113
- **Jeddah:** +966-12-6577714
- **Dammam:** +966-13-8343691
- **Qassim:** +966 581044198
- **Abha:** +966 593322785