



[Manuals.plus](#) /

› [Wansa](#) /

› Wansa 32-inch HD LED TV (Model WLE32J7762) User Manual

Wansa WLE32J7762

Wansa 32-inch HD LED TV User Manual

Model: WLE32J7762

INTRODUCTION

This manual provides essential instructions for the safe and efficient operation of your Wansa 32-inch HD LED TV, model WLE32J7762. Please read this manual thoroughly before using your television and retain it for future reference.

The Wansa WLE32J7762 is a 32-inch HD LED television designed for basic viewing needs, featuring 2 HDMI and 2 USB ports for connectivity.

IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using this television to reduce the risk of fire, electric shock, and injury.

- Do not expose the TV to rain or moisture.
- Do not block ventilation openings.
- Ensure proper grounding of the power plug.
- Protect the power cord from being walked on or pinched.
- Unplug the TV during lightning storms or when unused for long periods.
- Refer all servicing to qualified service personnel.

PACKAGE CONTENTS

Verify that all items are present in the package:

- Wansa 32-inch HD LED TV (WLE32J7762)
- Remote Control (with batteries)
- TV Stand (2 pieces)
- Screws for TV Stand
- User Manual (this document)
- Power Cord

SETUP

1. Attaching the Stand

To attach the stand to your Wansa TV:

1. Carefully place the TV face-down on a soft, clean surface to prevent screen damage.
2. Align each stand piece with the corresponding slots on the bottom of the TV.
3. Secure each stand piece with the provided screws. Ensure they are tightened firmly.



Figure 1: Front view of the Wansa 32-inch HD LED TV with its stand attached. The image shows the television screen displaying an underwater scene, with the black bezel and two black stand feet visible at the bottom.

2. Connecting External Devices

Your Wansa TV features multiple ports for connecting various devices:

- **HDMI Ports (x2):** Connect Blu-ray players, game consoles, cable/satellite boxes, or other HDMI-enabled devices.
- **USB Ports (x2):** Connect USB storage devices for media playback.
- **Antenna/Cable Input (ATV):** Connect an antenna or cable for receiving broadcast channels.
- **Audio/Video (AV) Input:** Connect older devices using composite video and stereo audio cables.

Ensure the TV is powered off before connecting or disconnecting any cables.

3. Powering On for the First Time

1. Connect the power cord to the TV and then to a wall outlet.
2. Press the power button on the TV or the remote control.
3. Follow the on-screen instructions for initial setup, including language selection and channel scanning.

OPERATING INSTRUCTIONS

Remote Control Functions

Familiarize yourself with the remote control buttons:

- **Power:** Turns the TV on or off.
- **Source:** Selects input source (HDMI1, HDMI2, ATV, AV, USB).
- **Volume +/-:** Adjusts volume level.
- **Channel +/-:** Changes channels.
- **Menu:** Accesses the main menu for settings.
- **Navigation Buttons (Up/Down/Left/Right):** Navigates through menus.
- **OK/Enter:** Confirms selections.
- **Exit:** Exits the current menu.
- **Mute:** Mutes or unmutes the sound.

Basic TV Functions

1. **Changing Channels:** Use the Channel +/- buttons or enter the channel number directly.
2. **Adjusting Volume:** Use the Volume +/- buttons.
3. **Selecting Input Source:** Press the Source button and use navigation keys to select the desired input (e.g., HDMI1 for a game console, ATV for broadcast TV).
4. **Accessing Menus:** Press the Menu button to adjust picture, sound, channel, and general settings.

Media Playback via USB

To play media from a USB device:

1. Insert a USB storage device into one of the TV's USB ports.
2. Press the Source button on the remote and select "USB".
3. Navigate through the folders and files on your USB device using the remote control.
4. Select the desired media file (e.g., video, music, photo) to play.

MAINTENANCE

Cleaning the TV

- **Screen:** Gently wipe the screen with a soft, lint-free cloth. For stubborn marks, use a screen cleaning solution specifically designed for TVs, applied to the cloth, not directly to the screen.
- **Cabinet:** Wipe the TV cabinet with a soft, dry cloth. Do not use abrasive cleaners, waxes, or solvents.
- Always unplug the TV before cleaning.

Remote Control Battery Replacement

When the remote control's range decreases or it becomes unresponsive, replace the batteries:

1. Open the battery compartment cover on the back of the remote control.
2. Remove the old batteries.
3. Insert two new AAA batteries, ensuring correct polarity (+ and -).

4. Close the battery compartment cover.

TROUBLESHOOTING

Before contacting customer support, refer to the following common issues and solutions:

Problem	Possible Cause / Solution
No power	Ensure the power cord is securely plugged into the TV and the wall outlet. Check if the wall outlet is functioning by plugging in another device. Press the power button on the TV itself.
No picture, but sound is present	Check the input source. Press the Source button on the remote and select the correct input (e.g., HDMI1, ATV). Ensure all video cables are securely connected. Adjust brightness and contrast settings in the picture menu.
No sound, but picture is present	Check if the TV is muted. Press the Mute button on the remote. Increase the volume using the Volume + button. Ensure audio cables are securely connected for external devices. Check audio output settings in the sound menu.
Remote control not working	Replace the batteries with new ones, ensuring correct polarity. Ensure there are no obstructions between the remote and the TV's IR sensor. Point the remote directly at the TV.
"No Signal" message	Verify the correct input source is selected (e.g., HDMI for a connected device, ATV for antenna). Check the connection of the antenna or external device. If using an antenna, perform a channel scan.

SPECIFICATIONS

Feature	Detail
Model	WLE32J7762
Screen Size	32 Inches
Display Technology	LED
Resolution	1080p
Connectivity	2 x HDMI, 2 x USB, ATV (Antenna/Cable Input)
Special Features	Flat Panel Design
Mounting Type	Table Mount
Audio Output Mode	Stereo
Color	Black

Feature	Detail
Package Dimensions	79 x 50 x 14 cm
Package Weight	4.76 kg

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the warranty card included with your product or contact Wansa customer service. Keep your purchase receipt as proof of purchase for warranty claims. Contact information for Wansa customer support can typically be found on the manufacturer's official website or on the product packaging.