



Manuals.plus /

› Simba /

› Simba Chi Chi Love Baby Boo Interactive Plush Dog Instruction Manual

Simba 105893500002

Simba Chi Chi Love Baby Boo Interactive Plush Dog Instruction Manual

Model: 105893500002

WELCOME TO YOUR CHI CHI LOVE BABY BOO MANUAL

This manual provides essential information for the setup, operation, maintenance, and troubleshooting of your Simba Chi Chi Love Baby Boo interactive plush dog. Please read it carefully to ensure proper use and enjoyment of your new companion.

IMPORTANT SAFETY INFORMATION

- **WARNING:** Not suitable for children under 3 years due to small parts. Minimum age 48 months. Choking hazard.
- Always supervise children during play.
- Do not immerse the toy in water.
- Use only the specified battery type and ensure correct polarity.
- Remove batteries if the toy will not be used for an extended period.

WHAT'S IN THE BOX

- 1 x Chi Chi Love Baby Boo Interactive Plush Dog



Image: The Chi Chi Love Baby Boo interactive plush dog packaging.

The package contains one Chi Chi Love Baby Boo interactive plush dog. Batteries (4 x LR6) are included within the toy.

SETUP GUIDE

Battery Installation

1. Locate the battery compartment on the underside of the plush dog.
2. Using a screwdriver (not included), open the battery compartment cover.
3. Insert 4 LR6 batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Replace the cover and secure it with the screw.

Initial Activation

1. After battery installation, locate the ON/OFF switch, usually near the battery compartment.
2. Slide the switch to the "ON" position to activate the toy.
3. The toy may make an initial sound or movement to indicate it is ready for interaction.

OPERATING YOUR CHI CHI LOVE BABY BOO

Your Chi Chi Love Baby Boo responds to 12 voice commands and can perform over 60 different sounds and movements. Speak clearly and directly to the toy for best results.

Voice Commands and Actions

The toy can perform various actions based on specific voice commands. While the exact list of 12 commands is not provided, common actions include:

- **Sit:** The dog will sit down.
- **Lie Down:** The dog will lie on its stomach.
- **Stand Up:** The dog will stand on all four paws.
- **Stand on Hind Legs:** The dog will balance on its back legs.
- **Stand on Front Paws:** The dog will balance on its front paws.
- **Wag Tail:** The dog will wag its tail.
- **Rotate:** The dog will turn around itself.



Image: Chi Chi Love Baby Boo performing various interactive movements.



Image: The interactive dog in a lying position.



Image: The interactive dog standing on its hind legs.



Image: The interactive dog standing on its front paws.

CARE AND MAINTENANCE

- **Cleaning:** Surface clean only. Use a damp cloth with mild soap to gently wipe soiled areas. Do not submerge in water or machine wash.
- **Storage:** Store the toy in a dry, cool place away from direct sunlight when not in use.
- **Battery Care:** Remove batteries if the toy is not used for extended periods to prevent leakage.

TROUBLESHOOTING GUIDE

Problem	Possible Cause	Solution
Toy does not respond or turn on.	Batteries are low or incorrectly installed. ON/OFF switch is in the "OFF" position.	Check battery polarity and replace with fresh batteries. Ensure the ON/OFF switch is set to "ON".
Toy responds inconsistently to commands.	Background noise. Commands not spoken clearly. Distance from the toy.	Reduce background noise. Speak commands clearly and distinctly. Try speaking closer to the toy.
Movements are sluggish or incomplete (e.g., grinding noises, unable to stand).	Low battery power. Potential mechanical issue.	Replace batteries. If mechanical issues persist, contact customer support.

PRODUCT SPECIFICATIONS

Feature	Detail
Brand	Simba
Model Name	Chi Chi Love Baby Boo 30 cm
Model Number	105893500002
Toy Figure Type	Stuffed Toy
Character	Chi Chi Love
Material Type	Polyester
Color	Beige
Item Dimensions (L x W x H)	12.99" x 6.3" x 12.6" (33 cm x 16 cm x 32 cm)
Item Weight	1.01 Kilograms
Power Source	Batteries (4 x LR6, included)
Interactive Features	Responds to 12 voice commands, 60+ sounds, various movements (sit, lie, stand, wag tail, rotate)
Minimum Age	48 Months

WARRANTY AND CUSTOMER SUPPORT

For warranty information or customer support inquiries regarding your Simba Chi Chi Love Baby Boo, please refer to the contact details provided on the product packaging or visit the official Simba Toys website. Keep your proof of purchase for any warranty claims.