

[manuals.plus](#) /

› [GARMAY](#) /

› [GARMAY Digital Voice Recorder User Manual - Model 29ebf104-55f3-4e2f-bee6-83555d18a999](#)

GARMAY 29ebf104-55f3-4e2f-bee6-83555d18a999

GARMAY Digital Voice Recorder User Manual

Model: 29ebf104-55f3-4e2f-bee6-83555d18a999

1. INTRODUCTION

This manual provides detailed instructions for the operation and maintenance of your GARMAY Digital Voice Recorder. Please read this manual thoroughly before using the device to ensure proper functionality and to maximize your user experience. Keep this manual for future reference.



Image: Front and back view of the GARMAY Digital Voice Recorder, showcasing its compact design and the included 64GB TF card.

2. PACKAGE CONTENTS

Verify that all items are present in your package:

- GARMAY Digital Voice Recorder
- 64GB TF Card (pre-inserted)
- Micro USB Cable
- User Guide (this document)



Image: Illustration of the package contents, including the voice recorder, user guide, 64GB SD/TF card, and USB cable.

3. PRODUCT OVERVIEW

Familiarize yourself with the device's buttons and ports:

- **Display Screen:** Shows menu, recording status, battery level, etc.
- **REC Button:** Start recording.
- **SAVE Button:** Save current recording.
- **Play/Pause Button:** Play or pause audio.
- **Previous/Next Track Buttons:** Navigate through files or adjust settings.
- **Return Button:** Go back to the previous menu.
- **A/B Repeat Button:** Set A-B repeat playback.
- **ON/OFF Switch:** Power the device on or off.
- **VOL+/VOL- Buttons:** Adjust volume.
- **Delete Button:** Delete files.
- **Microphone (MIC):** Built-in microphone for recording.
- **USB Port:** For charging and data transfer.
- **Headphone Jack:** For audio playback.
- **TF Card Slot:** For external memory expansion (64GB card pre-inserted).

4. SETUP

4.1. Charging the Device

Before first use, fully charge the voice recorder. Connect the device to a computer's USB port or a USB wall adapter (not included) using the provided Micro USB cable. The battery indicator on the screen will show charging status. A full charge takes approximately 2 hours and provides up to 32 hours of continuous recording.



Image: The voice recorder connected to a laptop via USB cable, illustrating the charging and file transfer process.

4.2. Power On/Off

Slide the **ON/OFF** switch located on the side of the device to power it on or off.

5. OPERATING INSTRUCTIONS

5.1. Basic Recording

1. Power on the device.
2. Press the **REC** button to start recording. The screen will display the recording time.
3. To save the recording, press the **SAVE** button. The recording will be stored in the device's memory.



Image: A hand demonstrating the simple one-click operation to start recording on the device.

5.2. Voice Activated Recording (VAR)


This feature allows the recorder to start recording automatically when sound is detected and pause when silence occurs. You can set voice decibel levels across 4 different sensitivities in the settings menu.

5.3. Playback

1. From the main menu, navigate to 'Recordings' or 'Folder'.
2. Select the desired file using the navigation buttons.
3. Press the **Play/Pause** button to start playback.
4. Adjust volume using **VOL+ / VOL-** buttons.

5.4. File Transfer and Management

Connect the recorder to your computer using the supplied Micro USB cable. The device will appear as a removable disk. You can then drag and drop files to transfer, delete, or rename them. The device is compatible with Windows PC, Mac, and Android phones (an additional OTG adapter may be required for Android phones, not included).

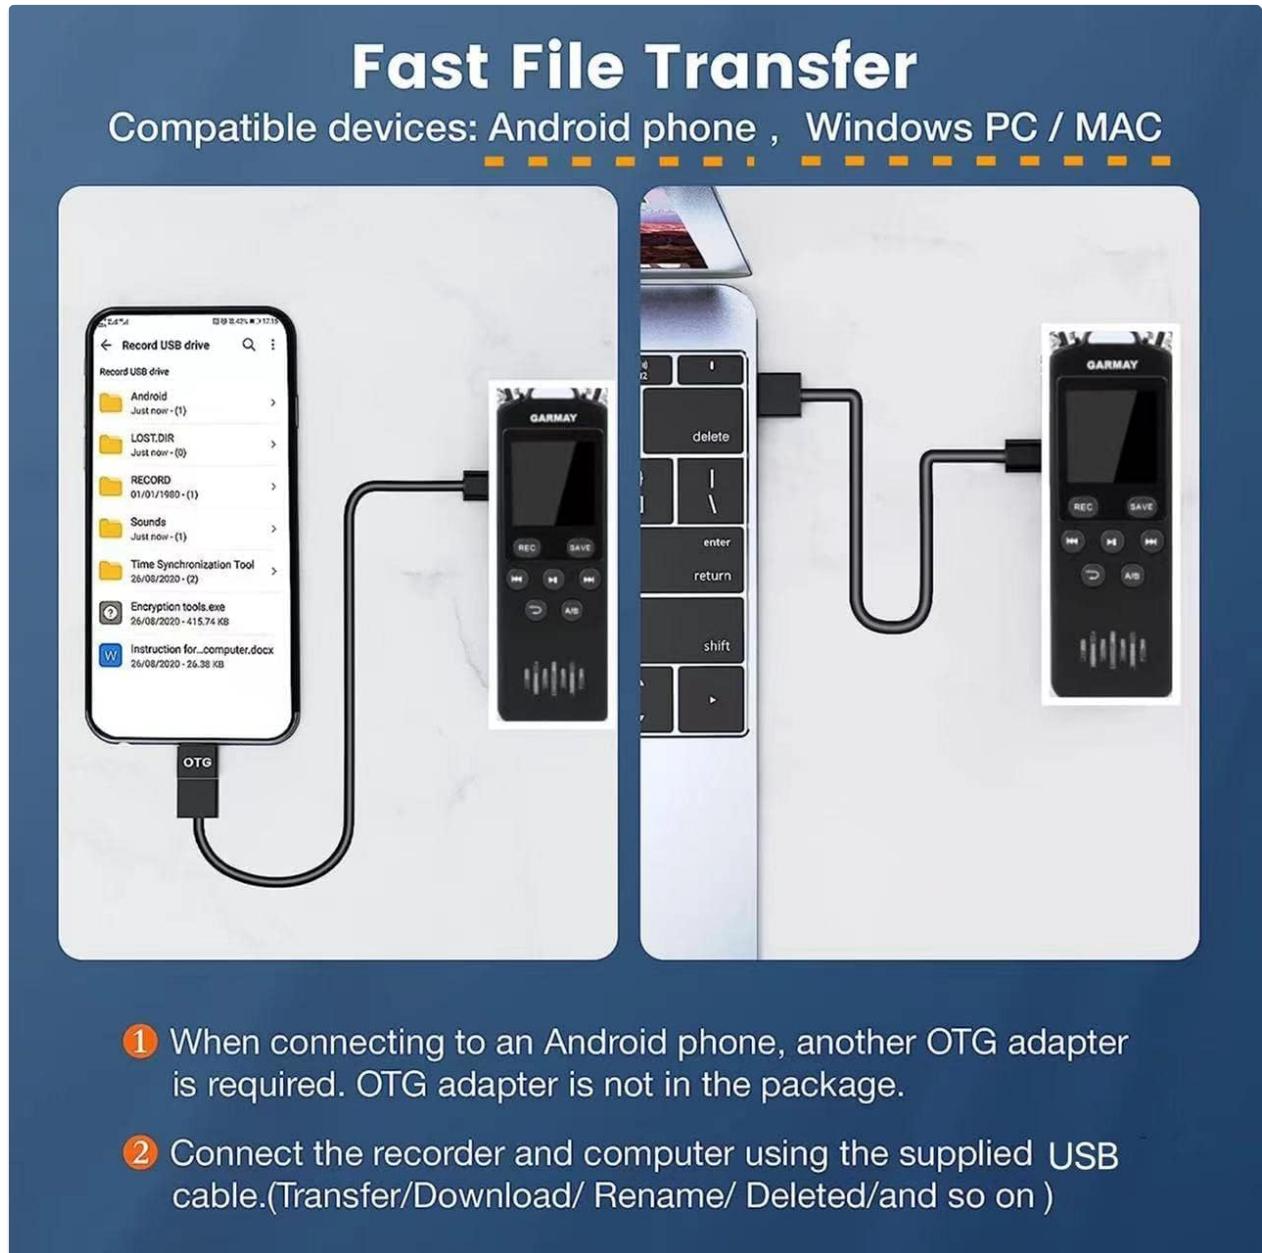

- 1 When connecting to an Android phone, another OTG adapter is required. OTG adapter is not in the package.
- 2 Connect the recorder and computer using the supplied USB cable.(Transfer/Download/ Rename/ Deleted/and so on)

Image: Visual guide for fast file transfer, showing the recorder connected to both an Android phone (requiring an OTG adapter) and a laptop via USB.

5.5. Other Functions

- **Password Protection:** Set a password to protect your recordings.
- **A-B Repeat:** Repeat a specific segment of an audio file.
- **Variable Speed Playback:** Adjust playback speed.
- **Timing Auto Recording:** Schedule recordings for specific times.
- **Monitor Mode:** Listen to the audio being recorded in real-time via headphones.
- **Line-in Recording:** Connect an external microphone or line-in cable for enhanced audio capture.

MULTIFUNCTION



**Voice Activated
Recording**



**Timing Auto
Recording**



**Password
Protection**



 
**Variable speed
playback**



A-B Repeat



MP3 Player



Monitor Mode

Image: Overview of the recorder's multifunction capabilities, including Voice Activated Recording, Timing Auto Recording, Password Protection, Variable Speed Playback, A-B Repeat, MP3 Player, and Monitor Mode.

Support Line-in Recording

External MIC&LINE IN: You can capture more sound with an external microphone or line-in cable.



Image: A user demonstrating line-in recording with an external microphone, highlighting the device's ability to capture more sound.

6. MAINTENANCE

6.1. Cleaning

Wipe the device with a soft, dry cloth. Do not use liquid cleaners or solvents.

6.2. Storage

Store the recorder in a cool, dry place away from direct sunlight and extreme temperatures. Avoid dropping or subjecting the device to strong impacts.

6.3. Battery Care

To prolong battery life, avoid fully discharging the battery frequently. Charge the device regularly, even if not in use for extended periods.

7. TROUBLESHOOTING

- **Device does not power on:** Ensure the battery is charged. Connect to a power source and try again. Check the ON/OFF switch position.
- **Cannot record:** Check if there is sufficient memory space. Ensure the device is not in playback mode.
- **Poor recording quality:** Ensure the microphone is not obstructed. Reduce background noise. Adjust microphone sensitivity settings if available.
- **Cannot transfer files to computer/phone:** Ensure the USB cable is securely connected. Try a different USB port or cable. For Android phones, confirm the OTG adapter is functional and correctly connected.
- **Playback distortion:** Check the audio file format. Ensure headphones or speakers are properly connected. Adjust volume levels.

8. SPECIFICATIONS

Feature	Specification
Brand	GARMAY
Model Number	29ebf104-55f3-4e2f-bee6-83555d18a999
Product Dimensions	9.98 x 3.38 x 1.02 cm (3.93 x 1.33 x 0.4 inches)
Item Weight	100 g (3.53 ounces)
Built-in Memory Capacity	8 GB
Expandable Memory	64 GB TF Card included
Total Recording Capacity	Up to 5148 hours (32 kbps) / 108 hours (1536 kbps)
Battery Type	1 Lithium Ion (rechargeable, included)
Average Battery Life	32 hours (continuous recording)
Hardware Interface	USB
Compatible Devices	PC, Android Phones, Windows, MAC
Display Technology	LCD
Microphone Form Factor	Built-in
Media Format	Digital
Headphone Jack	3.5 mm



Image: The compact dimensions of the voice recorder (4.13 inches long, 1.37 inches wide) and its portability, fitting easily into a pocket.

9. WARRANTY AND SUPPORT

Your GARMAY Digital Voice Recorder comes with a permanent warranty card. For warranty claims, technical support, or any inquiries, please refer to the contact information provided on the warranty card or visit the official GARMAY support website. Please retain your proof of purchase for warranty validation.