

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [SUPALAND](#) /

› [SUPALAND Key Fob Replacement OHT01060512 Instruction Manual](#)

SUPALAND OHT01060512

SUPALAND Key Fob Replacement OHT01060512 Instruction Manual

INTRODUCTION

This manual provides instructions for the setup, programming, and operation of your SUPALAND Key Fob Replacement, model OHT01060512. This product is designed as an aftermarket replacement for specific Chevrolet, GMC, and Buick vehicles. Please read these instructions carefully before attempting to use or program the key fob.

IMPORTANT COMPATIBILITY NOTES

This key fob is an aftermarket product and does not feature a brand logo or badge. It is crucial to verify your vehicle's compatibility before proceeding with setup or programming.

- **Regular Key Vehicles Only:** This key fob supports vehicles with a regular key ignition. It is **not compatible** with vehicles equipped with a push-start button.
- **No Passive Entry (PEPS):** This product will **not work** for vehicles with Passive Entry Passive Start (PEPS), also known as push-button ignition, smart key, or proximity systems.
- **Original Fob Requirement:** Your original key fob must have 5 buttons for this replacement to be compatible.

Compatible Vehicle Models:

The SUPALAND Key Fob Replacement OHT01060512 is compatible with the following vehicle models and years:

- **Chevrolet:**
 - Camaro: 2010-2019
 - Cruze: 2011-2016
 - Equinox: 2010-2019
 - Impala: 2014-2019
 - Malibu: 2014-2016
 - Sonic: 2012-2017

- **GMC:**

- Terrain: 2010-2021

- **Buick:**

- Allure: 2010-2012

- Encore: 2014-2019

- LaCrosse: 2010-2016

- Regal: 2011-2017

- Verano: 2012-2017

Compatible Part Numbers: 13504200, 13504205, 13585811, 5912555, 5913396

Compatible FCC IDs: OHT01060512, V2T01060512

Original Key Fob Must be 5 Button Key Ignition



Figure 1: Original vs. Upgraded Key Fob. This image compares an original 5-button key fob with the upgraded SUPALAND 5-button key fob, highlighting the necessity for the original to also be a 5-button ignition type.

Compatible with Following Vehicles(Key Ignition, No PEPS)

Note: Original Key Fob Must Have 5 Buttons.

2010-2019 Chevrolet Camaro
2011-2016 Chevrolet Cruze
2010-2019 Chevrolet Equinox
2014-2019 Chevrolet Impala
2014-2016 Chevrolet Malibu
2012-2017 Chevrolet Sonic

2010-2021 GMC Terrain

2010-2016 Buick LaCrosse
2011-2017 Buick Regal
2012-2017 Buick Verano
2014-2021 Buick Encore
2010-2012 Buick Allure



Figure 2: Compatible Vehicle Models. This image displays the key fob alongside a list of compatible Chevrolet, GMC, and Buick models and their respective years, emphasizing that the original key fob must have 5 buttons.

Not Compatible with PEPS

Also Called Passive Entry Passive Start



Not Compatible with Push Start

Figure 3: Incompatibility with Push Start. This image clearly illustrates that the key fob is not compatible with vehicles featuring a push-start ignition system (PEPS).

SETUP

1. Unboxing and Inspection

Your package should contain one SUPALAND Keyless Entry Remote Start Control Key Fob. The key fob comes with electronics and a lithium 3V coin/button cell battery pre-installed and is pre-tested for functionality.

DIY Programming, Step by Step Instructions

Electronics and Battery Pre-Installed.

Ready to DIY Programming.



Figure 4: Internal Electronics. This image shows the key fob opened, revealing the pre-installed electronics and battery, indicating it is ready for programming.

2. Key Blade Cutting

The key fob includes an uncut key blade. For full functionality, this blade needs to be cut to match your vehicle's ignition key. This service must be performed by a professional locksmith or a hardware shop that offers key cutting services.

Note: Some users may choose to transfer the existing cut key blade from their old fob to the new one. This typically involves carefully removing a pin from both fobs and swapping the blade. Exercise caution if attempting this, as improper handling can damage the fob or blade.

PROGRAMMING INSTRUCTIONS

This key fob supports self-programming. A detailed programming instructions link is typically provided with your order. The general procedure for self-programming often involves using an existing working key fob. Below is a common method, but always refer to the specific instructions provided with your purchase or consult your vehicle's owner's manual.

1. **Prepare Vehicle:** Ensure all doors are closed and unlocked.
2. **Insert Existing Key:** Insert your currently programmed, working key into the ignition. Turn the

ignition to the "ON" position (do not start the engine). Leave it in the "ON" position for approximately 5-10 seconds.

3. **Remove Existing Key:** Turn the ignition to the "OFF" position and remove the working key.
4. **Insert New Key Fob:** Immediately insert the new, unprogrammed SUPALAND key fob (with its cut key blade) into the ignition. Turn the ignition to the "ON" position (do not start the engine). Leave it in the "ON" position for approximately 5-10 seconds.
5. **Verify Programming:** Turn the ignition to the "OFF" position and remove the new key fob. Press any button on the new key fob (e.g., Lock button). The vehicle's doors should lock or unlock, indicating successful programming.
6. **Test All Functions:** Test all buttons (Lock, Unlock, Trunk, Remote Start, Panic) to ensure they function correctly.

If programming is unsuccessful, repeat the steps carefully. If issues persist, professional assistance from a locksmith or dealership may be required.

Your browser does not support the video tag.

Video 1: Key Fob Programming Guide. This video demonstrates a general process for programming a key fob. Please refer to the specific instructions provided with your product for the most accurate method for your vehicle.

OPERATING INSTRUCTIONS

Once programmed and the key blade is cut, your SUPALAND key fob operates similarly to your original factory remote.





Figure 5: Key Fob Buttons. This image provides a clear view of the five buttons on the key fob, each with its corresponding icon.

- **Lock Button:** Press once to lock all vehicle doors.
- **Unlock Button:** Press once to unlock the driver's door. Press twice to unlock all doors.
- **Trunk Release Button:** Press and hold to open the vehicle's trunk or liftgate.
- **Remote Start Button:** Press twice quickly to remotely start your vehicle (if equipped).
- **Panic Button:** Press and hold to activate the vehicle's alarm. Press again to deactivate.

For specific vehicle features and their operation, refer to your vehicle's owner's manual.

MAINTENANCE

Battery Replacement

The key fob is powered by a lithium 3V coin/button cell battery (CR2032 or equivalent). While the battery comes pre-installed, it will eventually require replacement. Symptoms of a low battery include reduced range or intermittent functionality.

1. **Open Fob Casing:** Carefully separate the two halves of the key fob casing. This may require a small flat-head screwdriver or a prying tool. Look for a small notch or seam.
2. **Remove Old Battery:** Locate the coin cell battery. Gently pry it out from its holder. Note the orientation (+/- sides).

3. **Insert New Battery:** Insert a new CR2032 (or equivalent) battery with the positive (+) side facing up, matching the orientation of the old battery.
4. **Close Fob Casing:** Align the two halves of the key fob and press them firmly together until they snap securely into place.
5. **Test Functionality:** Test the key fob's functions to ensure proper operation.

Dispose of old batteries responsibly according to local regulations.

TROUBLESHOOTING

- **Fob Not Responding After Programming:**

- Ensure your vehicle is compatible (regular key ignition, not PEPS).
- Verify the original key fob had 5 buttons.
- Repeat the programming steps carefully, ensuring correct timing for ignition cycles.
- Check the battery in the new fob, even if pre-installed, to ensure it's seated correctly and has charge.

- **Reduced Range or Intermittent Functionality:**

- Replace the battery in the key fob.
- Ensure there are no strong radio frequency interferences in the area.

- **Key Blade Does Not Fit Ignition:**

- Ensure the key blade was cut by a professional locksmith to match your original key.
- If transferring an old blade, ensure it is correctly seated and the retaining pin is secure.

- **Fob Casing Falls Apart:**

- Ensure the two halves of the casing are securely snapped together after any maintenance.
- Avoid dropping the key fob, which can weaken the casing clips.

If you continue to experience issues, contact customer support or a professional locksmith.

SPECIFICATIONS

Feature	Detail
Model Number	OHT01060512 (Replacement for 2010-2021 models)
Brand	SUPALAND
FCC ID	OHT01060512 / V2T01060512
Part Numbers	13504200, 13504205, 13585811, 5912555, 5913396
Frequency	315 Mhz
Battery Type	Lithium 3V Coin / Button Cell (CR2032 included)
Number of Buttons	5
Material	Plastic

Feature	Detail
Dimensions	7 x 3.8 x 2 cm
Weight	68 g

WARRANTY AND SUPPORT

For information regarding product warranty, returns, or technical support, please refer to the documentation provided with your purchase or contact the seller directly through the platform where the product was acquired. Ensure you have your order details and product model number (OHT01060512) available for faster assistance.