

Devoko 120x60cm White (Model 1)

Devoko Electric Standing Desk User Manual

Model: 120x60cm White (Model 1)

1. INTRODUCTION

Thank you for choosing the Devoko Electric Standing Desk. This manual provides essential information for the safe and efficient assembly, operation, and maintenance of your new desk. Please read these instructions carefully before use and retain them for future reference.

This electric standing desk is designed to provide a versatile and ergonomic workspace, allowing seamless transitions between sitting and standing positions to promote a healthier work environment.

2. SAFETY INFORMATION

Please observe the following safety guidelines to prevent injury or damage to the product:

- This desk is equipped with an anti-collision system to prevent potential injuries caused by crushing and collisions.
- The robust motor design ensures smooth, quiet, strong, and fast operation, with a speed of 25 mm/s and noise less than 50 dB.
- The desk requires assembly. Always follow the installation instructions and ensure the desk is properly anchored to prevent stability concerns.
- Do not exceed the maximum weight recommendation of **70 kg (154 lbs)**. Overloading the desk can cause damage or instability.
- Keep children and pets away from the desk during operation to avoid accidents.
- Ensure all cables are properly managed to prevent tripping hazards or entanglement with moving parts.
- Do not place liquids directly on the control panel or near electrical components.

3. PACKAGE CONTENTS

Before assembly, verify that all components are present and undamaged. If any parts are missing or damaged, please contact customer support.

- Desktop sections (typically 3 patchwork table tops for this model)

- Leg columns (2)
- Feet (2)
- Crossbar/Frame components
- Control panel with memory presets
- Motor and power adapter
- Headphone hooks
- Cable management ties
- Assembly hardware (screws, bolts, Allen key)
- Instruction manual



Image: All components included in the Devoko Electric Standing Desk package, ready for assembly.

4. ASSEMBLY INSTRUCTIONS

The assembly process is designed to be straightforward, typically taking around 30 minutes. Follow the numbered hardware and detailed instructions provided in the package.

1. **Unpack and Identify Parts:** Lay out all components on a clean, flat surface. Refer to the package contents list and the assembly diagram to identify each part.
2. **Assemble the Frame:** Attach the feet to the leg columns. Connect the leg columns with the crossbar/frame components. Ensure all connections are secure.
3. **Attach the Desktop:** Carefully place the desktop sections onto the assembled frame. Align the pre-drilled holes on the desktop with the mounting points on the frame. Secure the desktop using the provided screws.
4. **Install Control Panel and Motor:** Mount the control panel to the underside of the desktop in the designated area. Connect the motor and control panel to the main power unit according to the wiring diagram.
5. **Attach Accessories:** Install the headphone hooks and apply cable management ties as desired to keep your workspace tidy.
6. **Initial Setup:** Once fully assembled, plug in the desk. Perform an initial reset as per the instructions in the operating section to calibrate the height mechanism.



Various Colours and Sizes Available

Maximum weight **70 kg**

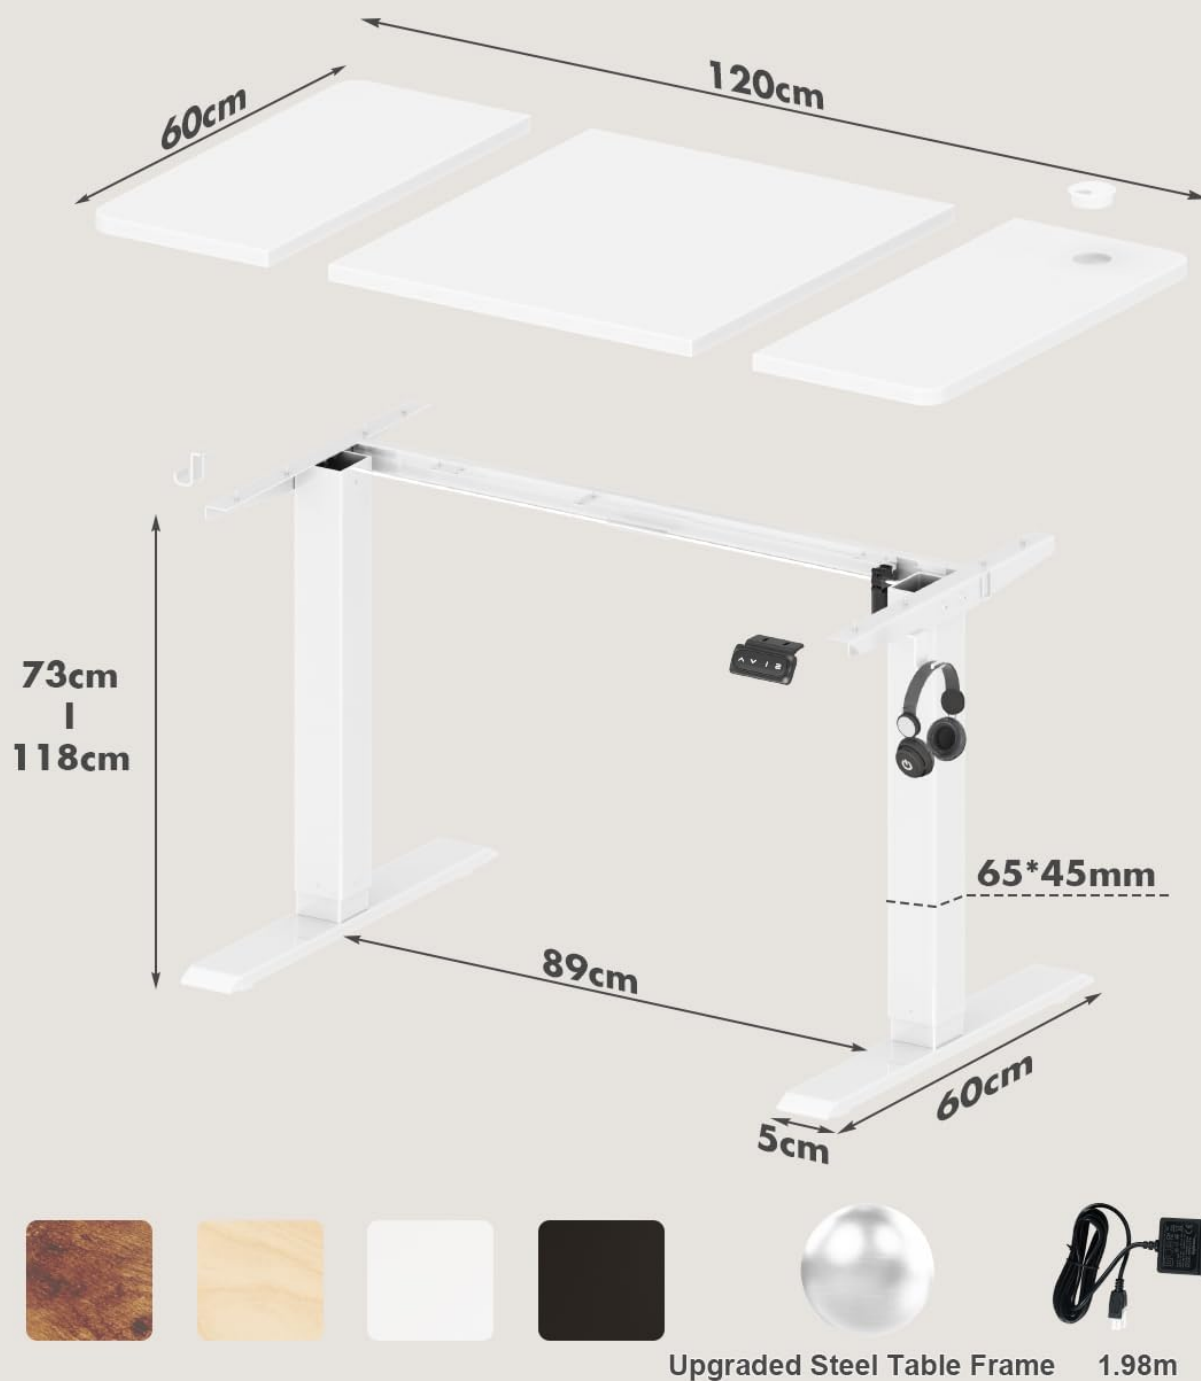


Image: Detailed dimensions and component overview for assembly.

5. OPERATING INSTRUCTIONS

Your Devoko Electric Standing Desk features an intuitive control panel for easy height adjustment and memory functions.



Image: The multifunctional control panel with up/down arrows and two memory buttons.

- **Up/Down Arrows (▲ / ▼):** Press and hold to continuously adjust the desk height. Release to stop at the desired height.
- **Memory Buttons (1, 2):** These buttons allow you to save and recall two preferred height settings.

5.2 Adjusting Height

To adjust the desk height, press and hold the up (▲) or down (▼) arrow button on the control panel until the desk reaches your desired height. The height range is approximately 71 cm to 119 cm.



Image: The desk can be adjusted to different heights for various uses.

5.3 Saving Memory Presets

To save a preferred height setting:

1. Adjust the desk to your desired height using the up/down arrows.
2. Press and hold one of the memory buttons (1 or 2) until you hear a beep or see the display flash, indicating the height has been saved.

To recall a saved height, simply press the corresponding memory button (1 or 2). The desk will automatically move to the saved position.

5.4 Anti-Collision System

The desk is equipped with a trustworthy anti-collision system. If the desk encounters an obstacle during height adjustment, it will automatically pause and rebound slightly (approximately 2 cm) to prevent damage or injury. This feature ensures safe operation in busy environments.



Devoko Height Adjustable Desk



Automatic Rebound



Noise < 50 dB



Stable Lift

Image: The anti-collision system provides automatic rebound for safety.

5.5 Additional Features

- **Headphone Hooks:** Conveniently located hooks allow you to hang headphones or a backpack, keeping your desk clear.
- **Cable Pass-Through Hole:** Integrated cable management helps organize wires for a tidier workspace.
- **Anti-slip Gasket:** Ensures stability and prevents movement on various floor surfaces.

- **Rounded Corner Design:** Provides a safer and more aesthetically pleasing desk edge.



Quiet and Silky Lift



70 Load Capacity



Quite Lift < 50db



Hooks



Cable



Anti-slip Gasket

Image: Details of the headphone hooks, cable management, and anti-slip gasket.

6. MAINTENANCE

To ensure the longevity and optimal performance of your Devoko Electric Standing Desk, follow these maintenance

guidelines:

- **Cleaning:** Wipe the desk surface and frame with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that could damage the finish.
- **Regular Checks:** Periodically check all screws and bolts to ensure they are tight. Re-tighten if necessary.
- **Cable Management:** Ensure cables remain neatly organized and are not pinched or tangled, especially during height adjustments.
- **Motor Care:** The motor is designed for durability. Avoid excessive or continuous operation without short breaks to prevent overheating.

7. TROUBLESHOOTING

If you encounter any issues with your Devoko Electric Standing Desk, refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
Desk does not move.	Power cable disconnected; motor error; control panel issue.	Check power connections. Unplug and replug the desk. Perform a reset (refer to specific instructions in your detailed manual if available).
Desk moves unevenly or makes unusual noise.	Overload; loose connections; obstruction.	Reduce weight on the desk. Check all assembly screws for tightness. Ensure no objects are obstructing the legs.
Anti-collision system frequently activates.	Obstruction; sensitive setting.	Ensure there are no objects in the path of the desk's movement. Check your detailed manual for instructions on adjusting anti-collision sensitivity if applicable.
Memory presets not working.	Presets not saved correctly.	Re-save your desired height settings by following the 'Saving Memory Presets' instructions.

If the problem persists after attempting these solutions, please contact Devoko customer support for further assistance.

8. SPECIFICATIONS

Feature	Detail
Brand	Devoko
Model Number	1
Colour	White
Product Dimensions	60D x 120W x 122H centimetres

Feature	Detail
Material	Wood, Metal
Special Features	Adjustable Height, Electric
Item Weight	19.6 kg
Maximum Load Capacity	70 kg
Height Adjustment Range	71 cm - 119 cm
Noise Level	≤ 45 dB

9. WARRANTY AND SUPPORT

Devoko provides a warranty for this product against defects in materials and workmanship under normal use. Please refer to your purchase documentation or the Devoko official website for specific warranty terms and conditions. For technical support, troubleshooting assistance, or warranty claims, please contact Devoko customer service through the retailer where you purchased the product or visit the official Devoko website.

Note: No official seller videos were available for embedding in this manual.

© 2024 Devoko. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

Why is my Devoko Electric Standing Desk (Model 0427) not moving and flashing 'rST' on the panel?

The "rST" code on your Devoko Electric Standing Desk indicates that the desk needs to be reset. This often happens after a power outage, if the desk is unplugged, or if the system detects...

[Read full answer](#)