

[manuals.plus](#) /› [FOHERE](#) /› [FOHERE Electric Kettle User Manual](#)

FOHERE KT600

FOHERE Electric Kettle User Manual

Model: KT600

Brand: FOHERE

1. INTRODUCTION

Thank you for choosing the FOHERE Electric Kettle. This manual provides important information regarding the safe operation, maintenance, and troubleshooting of your new appliance. Please read it thoroughly before first use and keep it for future reference.

This electric kettle features precise temperature control, a rapid boiling system, and a convenient keep-warm function, making it ideal for various hot beverages and culinary needs. Its durable borosilicate glass and stainless steel construction ensure both safety and longevity.

2. IMPORTANT SAFETY INSTRUCTIONS

WARNING: To reduce the risk of fire, electric shock, or injury, basic safety precautions should always be followed.

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or electric kettle in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or personal injury.
- Do not use outdoors.

- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'off', then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- The kettle will automatically shut off when water reaches boiling point or when there is no water in the kettle (dry-boil protection).
- The glass body allows direct observation of the boiling process and ensures no odor transfer, preserving the taste of your tea.

3. PRODUCT OVERVIEW

The FOHERE Electric Kettle is designed for ease of use and versatility. It consists of a borosilicate glass kettle body, a stainless steel tea infuser, and a power base with an intuitive control panel.



Figure 1: FOHERE Electric Kettle with Tea Infuser

Components:

- **Kettle Body:** Made of high-quality borosilicate glass with water level markings.
- **Lid:** Securely fits on top of the kettle.
- **Tea Infuser:** Removable stainless steel infuser for loose leaf tea or tea bags.
- **Handle:** Ergonomically designed for comfortable pouring.

- **Power Base:** Contains the heating element and control panel.
- **Control Panel:** Features an LED display, temperature preset buttons, custom temperature control, keep warm button, and power button.



Figure 2: Kettle Control Panel

4. SETUP AND FIRST USE

Unpacking:

1. Carefully remove all packaging materials from the kettle and its accessories.
2. Inspect the kettle for any signs of damage. Do not use if damaged.

Before First Use:

1. Fill the kettle with clean water up to the MAX line.
2. Boil the water (select 100°C/Boil Black preset).
3. Discard the boiled water.
4. Repeat this process 2-3 times to remove any manufacturing residues.
5. Wipe the exterior of the kettle with a soft, damp cloth.

Placement:

- Place the power base on a flat, stable, heat-resistant surface.
- Ensure the power cord is not dangling or in contact with hot surfaces.
- Keep the kettle away from direct sunlight, heat sources, and moisture.

5. OPERATING INSTRUCTIONS

Filling the Kettle:

- Remove the kettle from its power base.
- Open the lid and fill the kettle with fresh, cold water. Do not fill below the MIN mark or above the MAX mark.
- Close the lid securely and place the kettle back on the power base.

Temperature Selection and Boiling:

The kettle offers 6 preset brewing programs and a custom temperature control function.



Figure 3: Temperature Presets for Various Beverages

1. **Power On:** Press the ON/OFF button. The LED display will light up.
2. **Select Preset:** Press the 'PROGRAM' button repeatedly to cycle through the 6 preset temperatures:
 - Boil Black: 100°C (for black tea)
 - French Press: 95°C (for French press coffee)
 - Oolong Tea: 90°C
 - White Tea: 85°C
 - Green Tea: 80°C
 - Delicate Tea: 70°C
3. **Custom Temperature:** Alternatively, use the 'CUSTOM TEMP' button to adjust the temperature in 5-degree increments from 40°C to 100°C.
4. **Start Boiling:** Once the desired temperature is selected, press the 'START/CANCEL' button. The kettle will begin heating.
5. **Audible Signal:** An audible signal will sound when the water reaches the set temperature. This can be muted by pressing the 'MUTE' button for 3 seconds.
6. **Automatic Shut-off:** The kettle will automatically turn off once the target temperature is reached or if it runs dry.

Keep Warm Function:

The kettle can maintain the selected temperature for up to 120 minutes (up to 96°C).

1. After selecting your desired temperature and starting the heating process, press the 'KEEP WARM' button.

2. The kettle will heat the water to the set temperature and then maintain it for 120 minutes.

Using the Tea Infuser:

The removable tea infuser allows for direct brewing of loose leaf tea or tea bags within the kettle.



Figure 4: Removable Tea Infuser

1. Place your desired amount of loose leaf tea or tea bags into the stainless steel infuser.
2. Insert the infuser into the kettle, ensuring it is properly seated.
3. Fill the kettle with water and select your desired brewing temperature.
4. Once the water reaches the temperature, allow the tea to steep for the recommended time.
5. Carefully remove the infuser once steeping is complete to prevent over-extraction. Use a heat-resistant glove or cloth as the infuser will be hot.

Memory Function:

The kettle has a 10-minute memory function that saves your last temperature and time settings, eliminating the need to re-enter them for repeated use within this timeframe.

6. MAINTENANCE AND CLEANING

Regular cleaning and descaling are essential to maintain the performance and longevity of your FOHERE Electric Kettle.

Daily Cleaning:

- Always unplug the kettle and allow it to cool completely before cleaning.
- Wipe the exterior of the kettle and the power base with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
- Rinse the interior of the kettle with clean water.
- The tea infuser can be rinsed under running water or washed with mild dish soap. Ensure it is thoroughly dry before reinserting.
- Do not immerse the power base or the kettle's electrical components in water.

Descaling (Removing Limescale):

Limescale buildup can affect the kettle's performance and taste of your beverages. It is recommended to descale regularly, especially in areas with hard water.



Figure 5: Descaling Process

1. **Prepare Solution:** Fill the kettle with 1 cup of distilled vinegar or lemon juice and 2 cups of water (1:2 ratio).

2. **Boil and Soak:** Boil the mixture, then let it soak in the kettle for 2 hours.
3. **Clean:** Empty the solution, then wipe away any limescale with a non-abrasive cloth or sponge.
4. **Rinse:** Rinse the kettle thoroughly with clean water and wipe it dry with a soft cloth.
5. **Repeat:** Repeat the process if necessary for stubborn buildup.

7. TROUBLESHOOTING

If you encounter issues with your kettle, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Kettle does not turn on.	Not plugged in; power outlet not working; kettle not properly seated on base.	Ensure kettle is plugged into a working outlet. Check if kettle is correctly placed on the power base.
Water is not heating.	Kettle is dry-boil protected; heating element malfunction.	Ensure there is sufficient water above the MIN line. If dry-boil protection activated, let kettle cool down before refilling. If problem persists, contact support.
Kettle shuts off too soon.	Limescale buildup; incorrect temperature setting.	Descale the kettle as per maintenance instructions. Verify the selected temperature setting.
Water has an unusual taste.	First use residue; limescale buildup.	Perform the initial cleaning steps. Descale the kettle.
Audible signal is not working.	Mute function is activated.	Press and hold the 'MUTE' button for 3 seconds to deactivate mute.

If the problem persists after trying these solutions, please contact FOHERE customer support.

8. SPECIFICATIONS

Feature	Detail
Brand	FOHERE
Model Number	KT600
Color	Silver

Feature	Detail
Product Dimensions (L x W x H)	21.56 x 21.08 x 24.94 cm
Item Weight	1.68 Kilograms
Capacity	1.7 Liters
Power	2200W (implied from product title)
Automatic Shut-off Function	Yes
Noise Level	45 dB
Material Feature	304 Stainless Steel, Borosilicate Glass, BPA-free Silicone and Plastic
Included Components	Filter (Tea Infuser)
Keep Warm Function	Up to 120 minutes (max 96°C)
Temperature Control	6 preset programs, 5-degree custom control (40-100°C)

9. WARRANTY AND SUPPORT

FOHERE strives to provide reliable and quality products. If you have any questions or require assistance with your electric kettle, please do not hesitate to contact us.


For customer support and further information, you may visit our official Facebook page:

<http://www.facebook.com/foherehome>

 
Please retain your proof of purchase for any warranty claims.

Related Documents - KT600

	<p>Fohere Intelligent Tea Master KT600 User Manual: Perfect Tea Brewing Guide</p> <p>Discover how to achieve perfect tea brews with the Fohere Intelligent Tea Master KT600. This user manual provides comprehensive instructions on operation, safety, care, and troubleshooting for precise temperature-controlled tea making.</p>
---	--

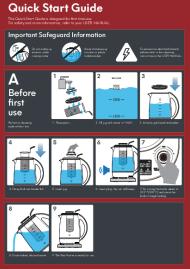 <p>ELECTRIC KETTLE FOHERÉ INSTRUCTION MANUAL</p>	<p>Foheré Electric Kettle Instruction Manual - Safety, Usage, and Maintenance Guide</p> <p>This comprehensive instruction manual for the Foheré electric kettle provides essential safety guidelines, operating instructions, temperature settings, and cleaning and maintenance procedures. Learn how to safely use and care for your appliance.</p>
<p>AIR FRYER OVEN INSTRUCTION MANUAL</p>  <p>MODEL : DN20M-ML Please read these instructions carefully and retain for future reference</p>	<p>FOHERE DN20M-ML Air Fryer Oven Instruction Manual</p> <p>User manual for the FOHERE DN20M-ML Air Fryer Oven, detailing setup, operation, safety, maintenance, and troubleshooting for household use.</p>
 <p>INSTRUCTION MANUAL (Electric Slicer Machine) Household Use Only Model: SL-519N Please read these instructions carefully and retain for future reference</p>	<p>FOHERE SL-519N Electric Slicer Machine: Instruction Manual & Safety Guide</p> <p>Comprehensive instruction manual for the FOHERE SL-519N Electric Slicer Machine. Learn about safe operation, maintenance, troubleshooting, and usage suggestions for home use.</p>
 <p>HOUSEHOLD USE ONLY Model: KC211 USER MANUAL COFFEE MAKER Please read these instructions carefully and retain for future reference</p>	<p>FOHERE KC211 Coffee Maker User Manual - Hot & Iced Coffee Brewer Instructions</p> <p>Comprehensive user manual for the FOHERE KC211 Coffee Maker, detailing operation, safety, cleaning, and troubleshooting for both hot and iced coffee brewing. Includes product parameters and indicator light explanations.</p>
 <p>Quick Start Guide Important Safety and Information Before first use A Before first use B Cleaning C Brewing D Storage E Troubleshooting F Specifications G Warranty H Customer Support</p>	<p>FOHERE Tea Master KT-Z1 Quick Start Guide: Brewing Perfect Tea</p> <p>Learn how to set up and use your FOHERE Tea Master KT-Z1 electric kettle with this quick start guide. Includes safety information, initial cleaning, and brewing instructions for perfect tea.</p>

Documents - FOHERE – KT600



[\[pdf\] User Manual](#)

F FOHERE KT600 V0 211011 User Manual Electric Kettle with Temperature Control and Tea Infuser 1 7L Glass Stainless Steel Hot Water 2Hr Keep Warm 6 Presets for Herbal Green Coffee Black Home Kitchen A1iELk4h7pL m media amazon images I |||

...

lang: **score:15** filesize: 1.66 M page_count: 12 document date: 2022-08-26