

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Yard Force](#) /

› [Yard Force Vita HX V06S Garden Tool Kit User Manual](#)

## Yard Force HX V06S

# Yard Force Vita HX V06S Garden Tool Kit User Manual

Model: HX V06S | Brand: Yard Force

## INTRODUCTION

Thank you for choosing the Yard Force Vita HX V06S Garden Tool Kit. This versatile kit is designed for urban and small gardens, offering a range of essential tools powered by a convenient 4V/4.0 Ah rechargeable battery. This manual provides detailed instructions for safe operation, maintenance, and troubleshooting to ensure optimal performance and longevity of your tools.

## SAFETY INFORMATION

Always read and understand all safety warnings and instructions before operating the tools. Failure to follow the warnings and instructions may result in electric shock, fire, and/or serious injury.

- Keep work area clean and well lit. Cluttered or dark areas invite accidents.
- Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases, or dust.
- Keep children and bystanders away while operating a power tool. Distractions can cause you to lose control.
- Wear appropriate personal protective equipment (PPE) such as safety glasses, gloves, and sturdy footwear.
- Avoid accidental starting. Ensure the switch is in the off-position before connecting to battery pack, picking up or carrying the tool.
- Do not overreach. Keep proper footing and balance at all times.
- Disconnect the battery pack from the tool before making any adjustments, changing accessories, or storing power tools.
- Use the tool and accessories in accordance with these instructions, taking into account the working conditions and the work to be performed.
- Only use the specified battery and charger for this product.

## PACKAGE CONTENTS

Carefully unpack all items and ensure you have received all components listed below. If any items are missing or damaged, please contact customer support.

- 1 x Yard Force Vita Tool Box
- 1 x 4V/4.0 Ah Lithium-ion Battery
- 1 x USB Charging Cable (Type-C input, Type-A output)
- 1 x Cordless Pruner (Max. cutting diameter: 14 mm)
- 1 x Cordless Grass Shears (with 80 mm grass cutting blade)
- 1 x 120 mm Shrub Trimming Blade attachment
- 1 x Hand Trowel
- 1 x Hand Cultivator
- 1 x Hand Fork



Image: All components of the Yard Force Vita HX V06S Tool Kit, including the toolbox, battery, pruner, grass shears, and hand tools.

## PRODUCT OVERVIEW

Familiarize yourself with the main parts of your Yard Force Vita tool kit.

# 6 in 1 Vita Toolbox

## elektrische Akkugeräte

+ Grasschere

80mm

+ Strauchscheren

120mm

+ Astschere



## Akku

4,0Ah Lithium-Ion  
21700er Zellen

mit Koffer



## Handwerkzeuge

- + Handgrubber
- + Grabgabel
- + Handschaufel

Image: Visual representation of the 6-in-1 Vita Toolbox components, highlighting the electric tools (pruner, grass/shrub shears) and hand tools (cultivator, fork, trowel), along with the 4.0Ah Lithium-ion battery.

## Key Components:

- **4V/4.0 Ah Lithium-ion Battery:** Powers the cordless tools and can also function as a power bank.
- **Cordless Pruner:** For cutting branches up to 14mm in diameter. Features an ergonomic handle.
- **Cordless Grass Shears:** Equipped with an 80mm blade for trimming grass.
- **Shrub Trimming Blade:** A 120mm attachment for the grass shears, converting them into shrub shears.
- **Hand Tools:** Includes a hand trowel, hand cultivator, and hand fork for various gardening tasks.
- **Toolbox:** Compact and portable storage for all components.

## SETUP

## 1. Charging the Battery

The 4V/4.0 Ah Lithium-ion battery needs to be fully charged before first use. A full charge takes approximately 180 minutes (3 hours).

1. Connect the USB charging cable to the Type-C input port on the battery.
2. Connect the other end of the USB cable (Type-A) to any standard USB adapter (not included) or a powered USB port.
3. The battery indicator light will show charging status. Once fully charged, disconnect the cable.



Image: Demonstrates the battery being charged via a USB power adapter and the cordless tool in use, highlighting its powerful performance.

## 2. Assembling the Grass/Shrub Shears

The cordless grass shears can be easily converted into shrub shears by changing the blade.

1. Ensure the tool is switched off and the battery is removed before changing blades.
2. Locate the quick-release mechanism on the grass shears.
3. Press the release button/lever and carefully remove the 80mm grass cutting blade.
4. Align the 120mm shrub trimming blade with the tool's mounting slot and push it firmly until it clicks into place.

5. Verify the blade is securely attached before reinserting the battery.

# VIELSEITIG EINSETZBAR

Die Akku **Grassschere** wird mit dem mitgelieferten Aufsatz kinderleicht zur Akku **Strauchscheren**.



Image: Illustrates the versatility of the grass shears, showing how the grass cutting blade can be detached and replaced with the shrub trimming blade.

## OPERATING INSTRUCTIONS

### Using the Cordless Pruner

- Insert the charged battery into the pruner handle until it clicks.
- To activate, press and hold the safety switch, then press the trigger. The blades will open.
- Position the branch (up to 14mm diameter) between the open blades.
- Press the trigger to close the blades and make the cut. Release the trigger to open the blades.

- Always ensure your hands are clear of the blades during operation.

## INKLUSIVE HANDWERKZEUGE

Die Yard Force VITA Tool Box enthält außerdem 3 Handwerkzeuge:

Grabgabel, Kultivator und Schaufel. Der Kultivator ist zudem mit einem Flaschenöffner ausgestattet, damit Sie das Leben nach der Gartenarbeit genießen können.

- + Handgrubber
- + Grabgabel
- + Handschaufel



Image: A hand operating the Yard Force Vita cordless pruner, demonstrating its use for efficient and safe cutting of branches up to 14mm.

### Using the Cordless Grass/Shrub Shears

- Ensure the correct blade (grass or shrub) is securely attached.
- Insert the charged battery into the shears.
- Press the power button to start the blades.
- For grass trimming, hold the shears parallel to the ground and move steadily across the area.
- For shrub trimming, guide the shears along the desired shape of the shrub.
- Always keep hands and feet away from the blades.

### Using the Hand Tools

The hand trowel, hand cultivator, and hand fork are designed for various manual gardening tasks such as digging, loosening soil, planting, and weeding. Their ergonomic handles provide comfortable grip.



## EFFIZIENTES SCHNEIDEN MIT MAXIMALER SICHERHEIT

Die elektrische Astschere LS V14 kann Zweige mit bis zu 14 mm Durchmesser schneiden. Dabei ist sie durch das elektronische Schloss maximal sicher in der Handhabung.

Image: Close-up of the Yard Force Vita hand tools: hand trowel, hand cultivator, and hand fork, highlighting their durable construction and ergonomic design.

## MAINTENANCE

### Cleaning

- Always remove the battery before cleaning.
- Wipe down the tool bodies with a damp cloth. Do not use harsh chemicals or abrasive cleaners.
- Clean blades of the pruner and shears after each use to remove sap, dirt, and debris. A stiff brush or cloth can be used.
- For optimal performance, lightly oil the blades of the pruner and shears periodically to prevent rust and ensure smooth operation.
- Clean hand tools with water and a brush, then dry thoroughly to prevent rust.

### Storage

- Store all tools and the battery in the provided toolbox in a dry, cool place, away from direct sunlight and moisture.
- Ensure the battery is partially charged (not fully depleted or fully charged) if storing for extended periods to prolong its lifespan. Recharge every 3-6 months if not in use.
- Keep tools out of reach of children.

## FLEXIBLES & BEQUEMES GÄRTNERN

Die VITA-Serie von Yard Force ermöglicht flexible und komfortable Gartenarbeit – mit besten Ergebnissen, aber möglichst geringem Aufwand.



Image: The Yard Force Vita toolbox, demonstrating its compact design and how it neatly stores all the tools for easy transport and space-saving storage.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Tool does not start.	Battery not charged or not inserted correctly.	Ensure battery is fully charged and properly inserted.
Pruner blades not cutting cleanly.	Blades are dull or dirty. Branch diameter too large.	Clean blades. If dull, consider professional sharpening or replacement. Do not exceed 14mm cutting diameter.
Grass/Shrub shears vibrate excessively.	Blade not securely attached or damaged.	Check blade attachment. Replace blade if damaged.
Battery life is shorter than expected.	Battery not fully charged. Old battery. Extreme temperatures.	Ensure full charge. Store battery in moderate temperatures. Battery may need replacement after extended use.

## SPECIFICATIONS

Feature	Detail
Model Number	HX V06S
Battery Type	Lithium-ion
Battery Voltage/Capacity	4V / 4.0 Ah

Feature	Detail
Charging Time	Up to 180 minutes (3 hours)
Operating Time (approx.)	Up to 45 minutes
Pruner Max. Cutting Diameter	14 mm
Grass Shears Blade Width	80 mm
Shrub Shears Blade Length	120 mm
Product Dimensions (L x W x H)	40.8 x 25.8 x 21 cm
Product Weight	1 Kilogram
Material	Metal (Blades, Hand Tools), Plastic (Tool Body, Toolbox)

## WARRANTY AND SUPPORT

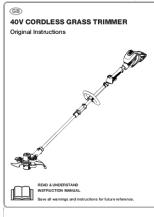
Yard Force products are designed for reliability and performance. For warranty information, technical support, or to purchase replacement parts, please refer to the official Yard Force website or contact their customer service department. Keep your purchase receipt as proof of purchase for warranty claims.

For further assistance, please visit: [www.yardforce.eu](http://www.yardforce.eu)

© 2023 Yard Force. All rights reserved.

## Related Documents - HX V06S

	<p><a href="#">Yard Force LT G33 40V Cordless Grass Trimmer - Original Instructions</a></p> <p>Original instructions for the Yard Force LT G33 40V Cordless Grass Trimmer. This manual covers intended use, comprehensive safety warnings, detailed operation procedures, maintenance guidelines, troubleshooting tips, and technical specifications.</p>
	<p><a href="#">Yard Force iFlex Cordless Grass Trimmer LT F23 Original Instructions</a></p> <p>This document provides the original instructions for the Yard Force iFlex Cordless Grass Trimmer, model LT F23. It includes safety warnings, assembly, operation, maintenance, and troubleshooting information.</p>

	<p><a href="#"><u>Yard Force LT G33A 40V Cordless Grass Trimmer: Original Instructions and Safety Guide</u></a></p> <p>Comprehensive original instructions and safety guide for the Yard Force LT G33A 40V Cordless Grass Trimmer, covering assembly, operation, maintenance, and troubleshooting. Includes technical data and safety declarations.</p>
	<p><a href="#"><u>Yard Force LT G30 40V Cordless Grass Trimmer: Original Instructions Manual</u></a></p> <p>Comprehensive original instructions manual for the Yard Force LT G30 40V Cordless Grass Trimmer, covering safety, assembly, operation, maintenance, and troubleshooting. Includes technical specifications and safety warnings.</p>
	<p><a href="#"><u>Yard Force LH A20BN Cordless 4-in-1 Tool Instruction Manual</u></a></p> <p>Instruction manual for the Yard Force LH A20BN Cordless 4-in-1 Tool, detailing its intended use, safety guidelines, operation, maintenance, technical specifications, and troubleshooting.</p>
	<p><a href="#"><u>Yard Force 18" Cordless Line Trimmer Operator's Manual</u></a></p> <p>This operator's manual provides detailed instructions for the Yard Force 18" Cordless Line Trimmer (Model YOLTX18TB00), covering safety, assembly, operation, maintenance, troubleshooting, and warranty information.</p>