

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [HADEN](#) /

› [HADEN 12-Cup Programmable Drip Coffee Maker Instruction Manual \(Model CORECOFFEE\)](#)

HADEN CORECOFFEE

HADEN 12-Cup Programmable Drip Coffee Maker

Model: CORECOFFEE

IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using this appliance. Keep this manual for future reference.

- Do not immerse the appliance, power cord, or plug in water or any other liquid.
- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Use only attachments recommended by the manufacturer.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Do not use the appliance for other than intended use.
- The carafe is designed for use with this appliance only. It must never be used on a range top.
- Do not clean the carafe with abrasive cleaners, steel wool pads, or other abrasive materials.
- Always ensure the carafe is correctly placed on the warming plate before brewing.

PRODUCT OVERVIEW

Familiarize yourself with the components of your HADEN Coffee Maker.

HADEN

HERITAGE BLACK & COPPER Coffee Machine



12 cup capacity
for house
or offices.



Customizable
brew strength
select feature.



Non-slip
rubber feet
for stability.



Auto shut-off
after 1 hour
for safety.

Image: HADEN Coffee Machine highlighting 12-cup capacity, customizable brew strength, non-slip rubber feet, and auto shut-off.

Components:

- **Lid:** Covers the water tank and filter basket.
- **Sprayer:** Distributes hot water over coffee grounds.
- **Water Tank:** Holds water for brewing.
- **Water Gauge:** Indicates water level in the tank.
- **Housing:** Main body of the coffee maker.
- **Warming Plate:** Keeps the brewed coffee warm.
- **Base:** Provides stability for the appliance.
- **Coffee Spoon:** For measuring coffee grounds.
- **Funnel:** Holds the filter basket.
- **Control Panel:** Features buttons for On/Off, Delay Brew, Program, Hour, Minute, and Strength.
- **Carafe Lid:** Covers the glass carafe.
- **Carafe Handle:** For safe handling of the carafe.
- **Carafe:** Glass pot for collecting brewed coffee.
- **Reusable Washable Filter:** Eliminates the need for paper filters.



Image: Close-up view of the reusable coffee filter, which is washable for convenience.



Image: Side view of the coffee machine showing the clear water level indicator with cup markings.

SETUP

Before First Use:

1. Unpack the coffee maker and remove all packaging materials.
2. Clean all detachable parts (carafe, carafe lid, reusable filter, and funnel) in warm, soapy water. Rinse thoroughly and dry.
3. Wipe the exterior of the coffee maker with a soft, damp cloth.
4. For initial cleaning, fill the water tank to the MAX level with clean water. Run a brewing cycle without coffee grounds. Discard the water and repeat this process 2-3 times to remove any manufacturing residues.

OPERATING INSTRUCTIONS

Setting the Clock:

1. Plug the coffee maker into a power outlet. The display will show '12:00'.
2. Press the 'HOUR' button to set the current hour.

3. Press the 'MINUTE' button to set the current minute.
4. The clock is now set.

Brewing Coffee:

1. Open the top lid and fill the water tank with fresh, cold water up to the desired level using the water gauge. Do not exceed the MAX line.
2. Place the reusable filter into the funnel. Add the desired amount of ground coffee into the filter. A general guideline is one level scoop (provided) per cup.
3. Close the top lid securely.
4. Ensure the carafe is placed correctly on the warming plate.
5. Press the 'ON/OFF' button to start brewing. The indicator light will illuminate.
6. The coffee maker will automatically stop brewing once the water tank is empty.

Brew Strength Setting:

- Before pressing 'ON/OFF', press the 'STRENGTH' button to cycle through available brew strength options (e.g., Regular, Bold). The selected strength will be indicated on the display or by an indicator light.

Delay Brew Function:

1. Prepare the coffee maker with water and coffee grounds as described in 'Brewing Coffee'.
2. Press the 'PROGRAM' button. The display will flash.
3. Use the 'HOUR' and 'MINUTE' buttons to set the desired delayed start time.
4. Press the 'DELAY BREW' button to activate the delay brew function. The indicator light will illuminate. The coffee maker will start brewing at the programmed time.

30-Second Anti-Drip Function:

- This feature allows you to temporarily remove the carafe during the brewing cycle to pour a cup of coffee. The brewing process will pause for approximately 30 seconds.
- Return the carafe to the warming plate within 30 seconds to prevent overflow.

Auto Shut-Off and Keep Warm Function:

- After brewing, the warming plate will automatically keep the coffee warm for 120 minutes (2 hours).
- The coffee maker will automatically shut off after 120 minutes for safety and energy saving.

CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the life of your coffee maker.

1. Always unplug the appliance and allow it to cool completely before cleaning.
2. **Carafe and Carafe Lid:** Wash in warm, soapy water. Rinse thoroughly. The carafe is not dishwasher safe.
3. **Reusable Filter and Funnel:** Remove from the coffee maker and rinse under running water. Use a soft brush if necessary to remove any coffee grounds. These parts can be washed in warm, soapy water.
4. **Exterior:** Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
5. **Warming Plate:** Wipe with a damp cloth. Do not use abrasive cleaners.

6. **Descaling:** Depending on water hardness, mineral deposits may build up in your coffee maker. To descale, fill the water tank with a mixture of white vinegar and water (1:2 ratio). Run a brewing cycle. After the cycle, let the mixture sit in the carafe for 15 minutes, then discard. Run 2-3 cycles with clean water to rinse thoroughly.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Coffee does not brew.	No power; water tank empty; carafe not in place.	Check power connection; fill water tank; ensure carafe is correctly positioned.
Coffee is too weak.	Not enough coffee grounds; incorrect strength setting.	Add more coffee grounds; select a stronger brew setting.
Coffee overflows from filter.	Too many coffee grounds; filter clogged; carafe removed too long.	Reduce coffee grounds; clean filter; return carafe quickly during anti-drip.
Unusual noise during brewing.	Mineral buildup.	Perform a descaling cycle.

SPECIFICATIONS

- **Brand:** HADEN
- **Model Name:** HADEN 12-Cup Countertop Coffee Machine for Home with Glass Coffee Carafe
- **Model Number:** CORECOFFEE
- **Color:** Black and Copper
- **Capacity:** 12 Cups (1.7 Liters)
- **Product Dimensions:** 9"D x 7.25"W x 13.5"H
- **Item Weight:** 3.8 pounds
- **Special Feature:** Auto Shut-Off (after 120 minutes)
- **Coffee Maker Type:** Drip Coffee Machine
- **Coffee Input Type:** Ground coffee
- **Coffee Filter Size:** #4 (reusable filter included)
- **Included Components:** Carafe, Reusable Filter
- **Operation Mode:** Fully Automatic
- **Human Interface Input:** Buttons
- **Is Dishwasher Safe:** No (for carafe and filter)
- **UPC:** 017342750753

Meet the Heritage Collection



BLACK & COPPER

Lighten up your morning routine and upgrade your kitchen counter with matching appliances.

HADEN

Image: Diagram showing the height (14"H), width (9.5"W), and depth (7.5"D) of the HADEN Coffee Machine.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your product or visit the official HADEN website. Keep your purchase receipt as proof of purchase.

Contact Information:

- For customer service inquiries, please visit the [HADEN Store on Amazon](#).