

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [MOMAX](#) /

> [MOMAX Q.Mag Power Magnetic Wireless Power Bank User Manual](#)

MOMAX IP109

MOMAX Q.Mag Power Magnetic Wireless Power Bank User Manual

Model: IP109

Brand: MOMAX

1. INTRODUCTION

The MOMAX Q.Mag Power Magnetic Wireless Power Bank (Model IP109) is a versatile and portable charging solution designed to keep your devices powered on the go. Featuring a 5000mAh battery capacity, it supports magnetic wireless charging (MagSafe compatible), standard Qi wireless charging, and high-speed wired charging via its USB-C Power Delivery (PD) port. Its integrated foldable stand enhances usability, allowing for convenient viewing while charging.

2. PRODUCT FEATURES

- **Magnetic Wireless Charging:** Securely attaches to compatible iPhone models (iPhone 12/13/14/15 series) for efficient wireless power transfer.
- **Qi Wireless Charging:** Provides wireless charging for other Qi-enabled devices, such as earbuds.
- **USB-C Power Delivery (PD):** Offers fast wired charging and recharging of the power bank itself.
- **Foldable Stand:** Integrated stand allows for vertical or horizontal viewing of your device while charging.
- **Compact Design:** Slim and lightweight for easy portability.
- **LED Indicators:** Clearly displays remaining battery level and charging status.



Figure 2.1: MOMAX Q.Mag Power Bank with its integrated foldable stand.

Charge Anywhere, Anytime



Figure 2.2: The power bank's compact design allows for charging anywhere, anytime.

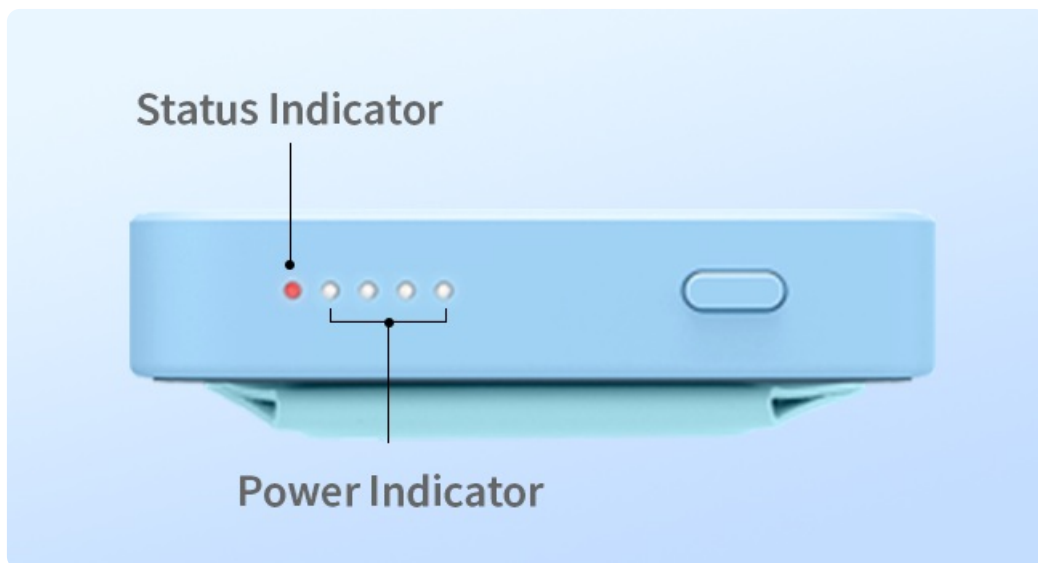 


Figure 2.3: LED indicators for power status and charging activity.

3. SETUP

3.1 Unboxing and Initial Charge

Upon opening the package, you will find the MOMAX Q.Mag Power Bank, a USB-C charging cable, and this instruction manual. It is recommended to fully charge the power bank before its first use to ensure optimal performance.

1. Connect the included USB-C cable to the USB-C port on the power bank.
2. Plug the other end of the USB-C cable into a compatible USB-C power adapter (not included).
3. The LED power indicators on the power bank will illuminate to show the charging progress. All four LEDs will be solid when fully charged.



Figure 3.1: Package contents including the power bank, USB-C cable, and manual.

4. OPERATING INSTRUCTIONS

4.1 Magnetic Wireless Charging (for iPhone 12/13/14/15 Series)

1. Ensure your iPhone is a compatible model (iPhone 12, 13, 14, or 15 series) and has MagSafe functionality.
2. Align the back of your iPhone with the magnetic charging area on the power bank. The magnets will automatically snap into place, securing the connection.
3. The power bank will begin wirelessly charging your iPhone.



Figure 4.1: Magnetic attachment for iPhone charging.

4.2 Qi Wireless Charging (for other Qi-enabled devices)

1. Place your Qi-enabled device (e.g., compatible earbuds, Android phone) on the wireless charging surface of the power bank.
2. Ensure the device is centered on the charging area for optimal contact.
3. The power bank will begin wirelessly charging your device.

4.3 Wired Charging (USB-C PD)

1. Connect one end of a USB-C cable (included or compatible) to the USB-C port on the power bank.


2. Connect the other end of the USB-C cable to your device's charging port.
3. The power bank will begin wired charging your device. This port supports Power Delivery (PD) for faster charging.



Figure 4.2: Simultaneous wireless and wired charging capabilities.

4.4 Using the Foldable Stand

1. Gently pull out the foldable stand from the back of the power bank.
2. Adjust the stand to your desired angle. It supports multiple viewing angles for both vertical (portrait) and horizontal (landscape) orientations.
3. Attach your MagSafe compatible iPhone to the power bank while the stand is deployed to use it as a viewing stand.
4. The lightweight design allows you to comfortably hold your phone with the power bank attached, even while playing games, without adding significant bulk.

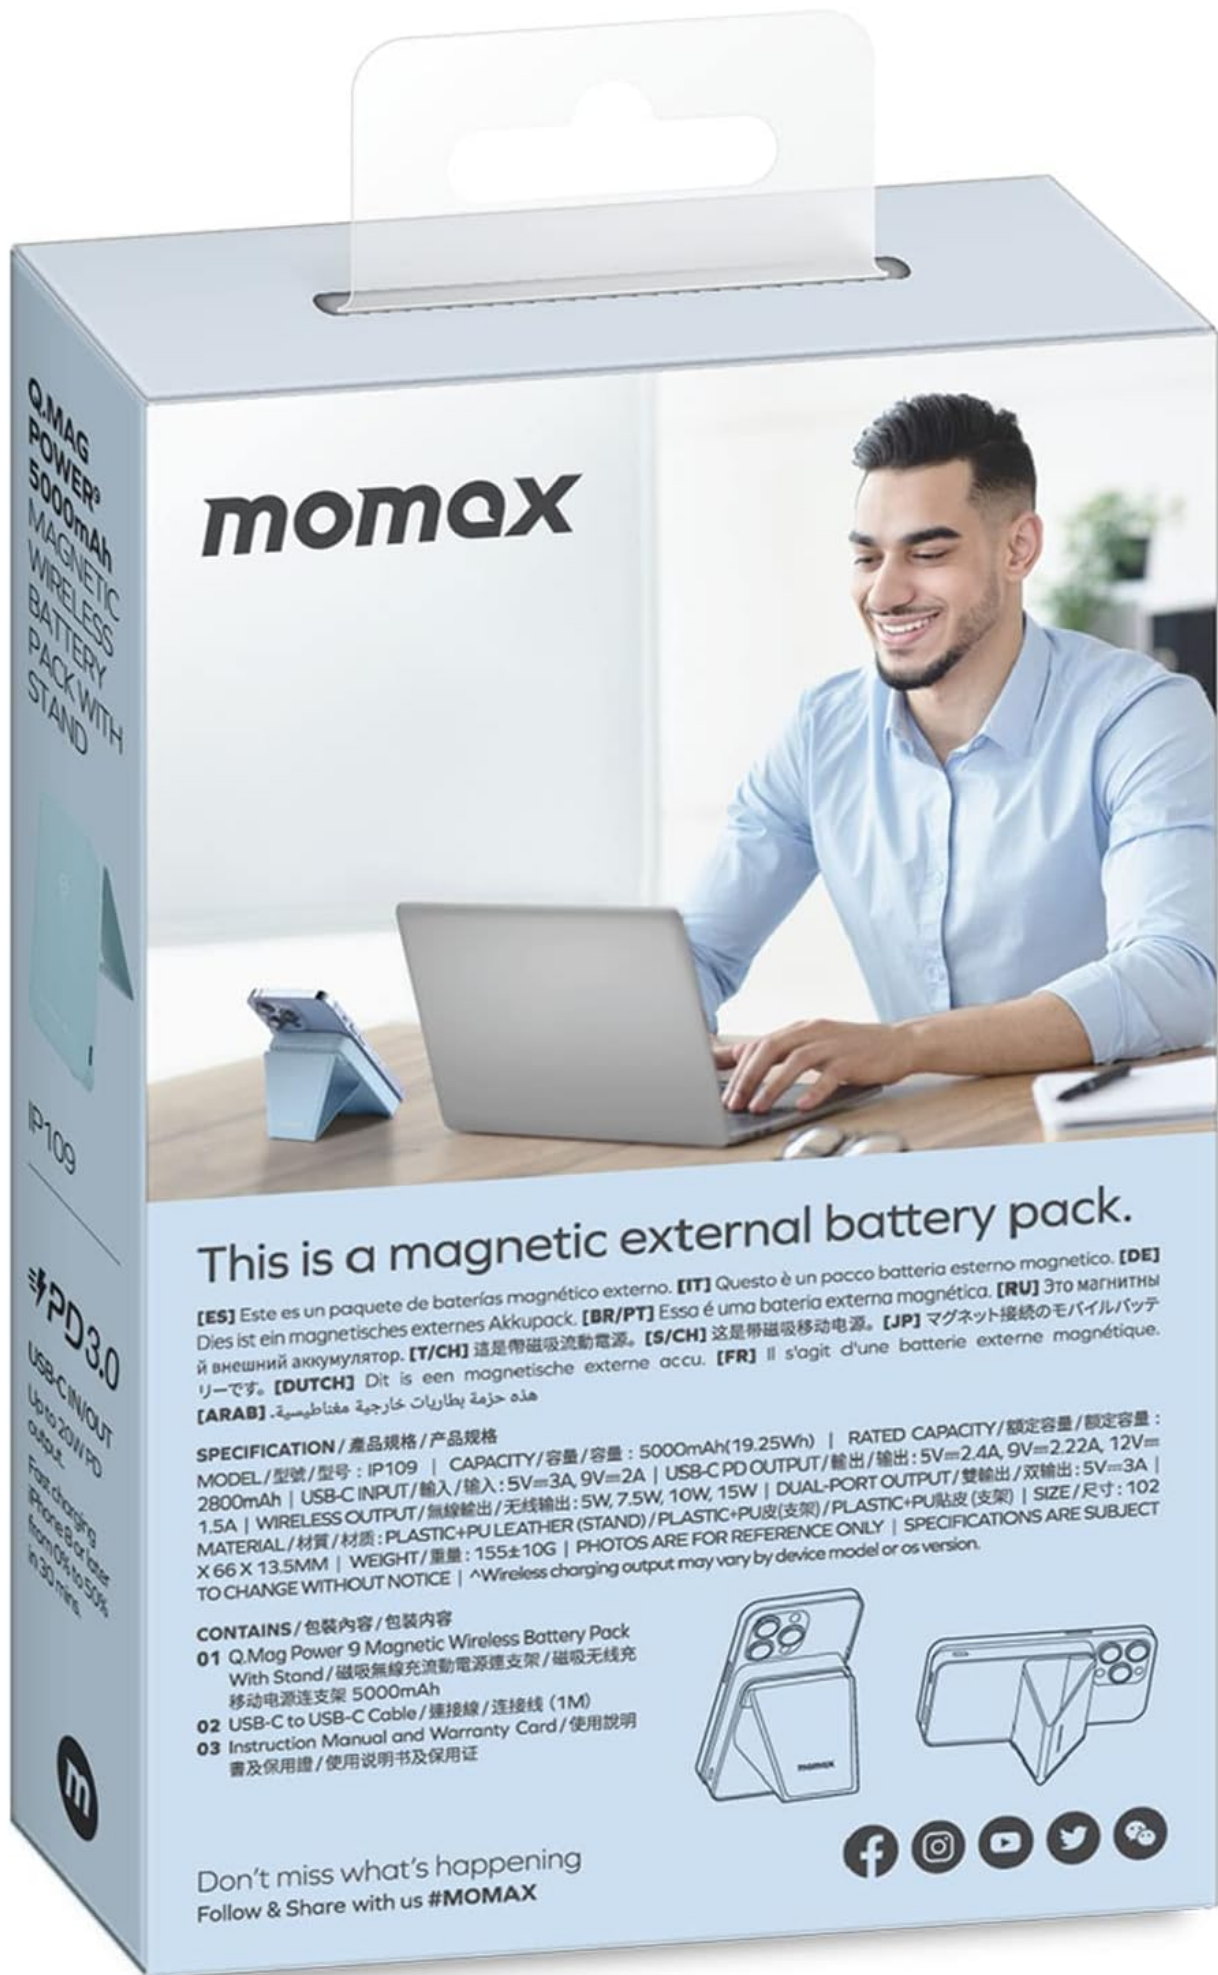

Q.MAG
POWER
5000mAh
MAGNETIC
WIRELESS
BATTERY
PACK WITH
STAND

momax



IP109

PD3.0


USB-C IN/OUT
Up to 20W PD
output
Fast charging
Phone 8 or later
from 0% to 50%
in 30 mins.

This is a magnetic external battery pack.

[ES] Este es un paquete de baterías magnético externo. **[IT]** Questo è un pacco batteria esterno magnetico. **[DE]** Dies ist ein magnetisches externes Akkupack. **[BR/PT]** Essa é uma bateria externa magnética. **[RU]** Это магнитный внешний аккумулятор. **[T/CH]** 這是帶磁吸流動電源。 **[S/CH]** 这是帶磁吸移动电源。 **[JP]** マグネット接続のモバイルバッテリーです。 **[DUTCH]** Dit is een magnetische externe accu. **[FR]** Il s'agit d'une batterie externe magnétique. **[ARAB]** هذه حزمة بطاريات خارجية مغناطيسية.

SPECIFICATION / 產品規格 / 产品规格
 MODEL / 型號 / 型号: IP109 | CAPACITY / 容量 / 容量: 5000mAh(19.25Wh) | RATED CAPACITY / 額定容量 / 額定容量: 2800mAh | USB-C INPUT / 輸入 / 輸入: 5V=3A, 9V=2A | USB-C PD OUTPUT / 輸出 / 輸出: 5V=2.4A, 9V=2.22A, 12V=1.5A | WIRELESS OUTPUT / 無線輸出 / 无线輸出: 5W, 7.5W, 10W, 15W | DUAL-PORT OUTPUT / 雙輸出 / 双輸出: 5V=3A | MATERIAL / 材質 / 材质: PLASTIC+PU LEATHER (STAND) / PLASTIC+PU皮(支架) / PLASTIC+PU粘皮(支架) | SIZE / 尺寸: 102 X 66 X 13.5MM | WEIGHT / 重量: 155±10G | PHOTOS ARE FOR REFERENCE ONLY | SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE | ^Wireless charging output may vary by device model or OS version.

 - CONTAINS / 包裝內容 / 包装内容**
- 01 Q.Mag Power 9 Magnetic Wireless Battery Pack With Stand / 磁吸無線充流動電源連支架 / 磁吸无线充移动电源連支架 5000mAh
 - 02 USB-C to USB-C Cable / 連接線 / 连接线 (1M)
 - 03 Instruction Manual and Warranty Card / 使用說明書及保用證 / 使用说明书及保用证

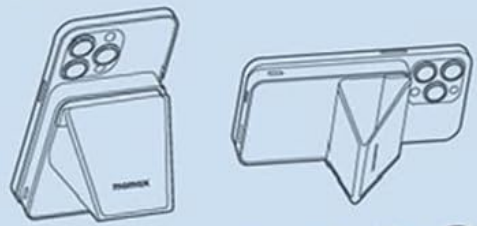

Don't miss what's happening
Follow & Share with us #MOMAX



Your browser does not support the video tag.

Video 4.1: Official demonstration of the MOMAX Magnetic Wireless Power Bank with Stand, showcasing its slim design, magnetic attachment, 15W wireless charging, foldable stand, and usability while charging or gaming. Available in blue, purple, and grey.

5. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the surface of the power bank. Avoid using harsh chemicals or abrasive materials.
- **Storage:** Store the power bank in a cool, dry place away from direct sunlight and extreme temperatures.
- **Safety:** Do not disassemble, crush, or puncture the power bank. Keep away from water and fire. Avoid dropping the device.

6. TROUBLESHOOTING

Issue	Possible Cause	Solution
Power bank not charging device.	Low power bank battery; improper alignment (wireless); loose cable (wired).	Recharge power bank; reposition device on wireless pad; ensure cable is securely connected.
Slow charging.	Device not optimally aligned for wireless charging; non-PD compatible cable/adaptor (wired).	Adjust device position; use a PD-compatible cable and wall adapter for faster wired charging.
Magnetic attachment is weak.	Non-MagSafe compatible phone/case; thick phone case.	Ensure your iPhone is MagSafe compatible or use a MagSafe compatible case. Remove thick cases if necessary.
LED indicators not working.	Power bank is completely drained or faulty.	Attempt to charge the power bank for an extended period. If still unresponsive, contact customer support.

7. SPECIFICATIONS

- **Model:** IP109
- **Battery Capacity:** 5000mAh (Lithium Polymer)
- **Product Dimensions:** 4.02 x 2.6 x 0.53 inches
- **Item Weight:** 4.7 ounces
- **Wireless Output:** Up to 15W (7.5W for iPhone)
- **Wired Output (USB-C PD):** Up to 20W
- **Input (USB-C PD):** Up to 20W
- **Color:** Blue (Other colors may be available)
- **Special Features:** Fast Charging, Foldable Stand, Magnetic, Portable Charger, Wireless Charging.

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official MOMAX website or the warranty card included with your product. Keep your purchase receipt as proof of purchase for any warranty claims.

For further assistance, please contact MOMAX customer service through their official channels.

